TOSHIBA



The information contained herein is subject to change without notice. 021023 D

TOSHIBA is continually working to improve the quality and reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress.

It is the responsibility of the buyer, when utilizing TOSHIBA products, to comply with the standards of safety in making a safe design for the entire system, and to avoid situations in which a malfunction or failure of such TOSHIBA products could cause loss of human life, bodily injury or damage to property.

In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent TOSHIBA products specifications.

Also, please keep in mind the precautions and conditions set forth in the "Handling Guide for Semiconductor Devices," or "TOSHIBA Semiconductor Reliability Handbook" etc. 021023 A

The Toshiba products listed in this document are intended for usage in general electronics applications (computer, personal equipment, office equipment, measuring equipment, industrial robotics, domestic appliances, etc.).

These Toshiba products are neither intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunction or failure of which may cause loss of human life or bodily injury ("Unintended Usage"). Unintended Usage include atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, medical instruments, all types of safety devices, etc. Unintended Usage of Toshiba products listed in this document shall be made at the customer's own risk. 021023_B

The products described in this document shall not be used or embedded to any downstream products of which manufacture, use and/or sale are prohibited under any applicable laws and regulations. 060106 Q

The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA for any infringements of patents or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of TOSHIBA or others. 021023_C

The products described in this document may include products subject to the foreign exchange and foreign trade laws. 021023 F

For a discussion of how the reliability of microcontrollers can be predicted, please refer to Section 1.3 of the chapter entitled Quality and Reliability Assurance/Handling Precautions. 030619 S

© 2007 TOSHIBA CORPORATION All Rights Reserved

Revision History

Date	Revision	
2006/10/5	1	First Release
2007/2/14	2	Periodical updating. No change in contents.
2007/2/14	3	Periodical updating. No change in contents.
2007/2/21	4	Contents Revised
2007/3/1	5	Contents Revised
2008/8/29	6	Contents Revised

Caution in Setting the UART Noise Rejection Time

When UART is used, settings of RXDNC are limited depending on the transfer clock specified by BRG. The combination "O" is available but please do not select the combination "-".

The transfer clock generated by timer/counter interrupt is calculated by the following equation:

Transfer clock [Hz] = Timer/counter source clock [Hz] ÷ TTREG set value

		RXDNC setting					
BRG setting	Transfer clock [Hz]	00 (No noise rejection)	01 (Reject pulses shorter than 31/fc[s] as noise)	10 (Reject pulses shorter than 63/fc[s] as noise)	11 (Reject pulses shorter than 127/fc[s] as noise)		
000	fc/13	0	0	0	<u> </u>		
110	fc/8	0	(7/4)	- 6	→ -		
(When the transfer clock gen- erated by timer/counter inter-	fc/16	0	0	\$-\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	//) -		
rupt is the same as the right side column)	fc/32	0	0	0	_		
The setting except the	above	0			0		





Table of Contents

TMP86F409NG	
1.1 Features 1.2 Pin Assignment 1.3 Block Diagram 1.4 Pin Names and Functions	1 3 4 5
2. Operational Description	
2.1 CPU Core Functions 2.1.1 Memory Address Map. 2.1.2 Program Memory (Flash)	7
2.2 System Clock Controller	8 8
2.2.2.2 Machine cycle 2.2.3 Operation Mode Control Circuit	
2.2.4.3 IDLE0 and SLEEP0 modes (IDLE0, SLEEP0) 2.2.4.4 SLOW mode 2.3 Reset Circuit 2.3.1 External Reset input 2.3.2 Address trap reset 2.3.3 Watchdog timer reset 2.3.4 System clock reset	. 29 . 30 . 30
3. Interrupt Control Circuit	
3.1 Interrupt latches (IL15 to IL2) 3.2 Interrupt enable register (EIR) 3.2.1 Interrupt master enable flag (IMF)	. 34
3.2.2 Individual interrupt enable flags (EF15 to EF4) 3.3 Interrupt Source Selector (INTSEL). 3.4 Interrupt Sequence	37 37
3.4.2.1 Using PUSH and POP instructions 3.4.2.2 Using data transfer instructions 3.4.3 Interrupt return 3.5 Software Interrupt (INTSW) 3.5.1 Address error detection 3.5.2 Debugging	40

3.7 Address Trap Interrupt (INTATRAP)		41
4.	Special Function Register (SFR)	
		45 47
5.	I/O Ports	
	5.5 T Z (1 ZZ 10 1 Z0) T GIT	50 51 52 53
6.	Time Base Timer (TBT)	
	6.1 Time Base Timer	55
	6.2 Divider Output (DVO)	57
 7.	Watchdog Timer (WDT)	
	7.2 Watchdog Timer Control 60 7.2.1 Malfunction Detection Methods Using the Watchdog Timer 60 7.2.2 Watchdog Timer Enable 61 7.2.3 Watchdog Timer Disable 62 7.2.4 Watchdog Timer Interrupt (INTWDT) 62 7.2.5 Watchdog Timer Reset 63 7.3 Address Trap	59 60
<	7.3.3 Address Trap Interrupt (INTATRAP)	
8.	16-Bit TimerCounter 1 (TC1)	
	8.1 Configuration 8.2 TimerCounter Control 8.3 Function 70 8.3.1 Timer mode 70 8.3.2 External Trigger Timer Mode 72 8.3.3 Event Counter Mode 74 8.3.4 Window Mode 75	67 68 70

	8.3.5 Pulse Width Measurement Mode	
9.	B-Bit TimerCounter (TC3, TC4)	
·	0.1 Configuration 0.2 TimerCounter Control 0.3 Function 93.1 8-Bit Timer Mode (TC3 and 4) 89 9.3.2 8-Bit Event Counter Mode (TC3, 4) 90 9.3.3 8-Bit Programmable Divider Output (PDO) Mode (TC3, 4) 90 9.3.4 8-Bit Pulse Width Modulation (PWM) Output Mode (TC3, 4) 93 9.3.5 16-Bit Timer Mode (TC3 and 4) 95 9.3.6 16-Bit Event Counter Mode (TC3 and 4) 96 9.3.7 16-Bit Pulse Width Modulation (PWM) Output Mode (TC3 and 4) 96 9.3.8 16-Bit Programmable Pulse Generate (PPG) Output Mode (TC3 and 4) 99 9.3.9 Warm-Up Counter Mode 101 9.3.9.1 Low-Frequency Warm-up Counter Mode (NORMAL1 → NORMAL2 → SLOW2 → SLOW1) 9.3.9.2 High-Frequency Warm-Up Counter Mode (SLOW1 → SLOW2 → NORMAL2 → NORMAL1)	. 84
10	Asynchronous Serial interface (UART)	
		103 104 106 107 107 108 108
1	Serial Expansion Interface (SEI)	
	1.1 Features 1.2 SEI Registers 11.2.1 SEI Control Register (SECR) 114 11.2.1.1 Transfer rate 11.2.2 SEI Status Register (SESR) 115	113 114
	11.2.3 SEI Data Register (SEDR)	116
	11.3.2 SEI data and clock timing 116 1.4 SEI Pin Functions 11.4.1 SCLK pin	117

11.4.2 MISO/MOSI pins 117 11.4.3 SS pin 117 11.5 SEI Transfer Formats 11.5.1 CPHA (SECR register bit 2) = 0 format 118 11.5.2 CPHA = 1 format 118 11.6 Functional Description 11.7 Interrupt Generation 11.8 SEI System Errors 11.8.1 Write collision error 121 11.8.2 Overflow error 121 11.9 Bus Driver Protection	118 120 121 121 122
12. 10-bit AD Converter (ADC)	
12.1 Configuration	123 124 127
12.4 STOP/SLOW Modes during AD Conversion	130 131
13. Key-on Wakeup (KWU)	
13.1 Configuration	133 134
14. Flash Memory	
14.1 Flash Memory Control 136 14.1.1 Flash Memory Command Sequence Execution Control (FLSCR <flsmd>) 136 14.1.1 136</flsmd>	136
14.1.2 Flash Memory Standby Control (FLSSTB <fstb>). 136 14.2 Command Sequence. 14.2.1 Byte Program. 14.2.2 Sector Erase (4 kbyte Erase) 14.2.3 Chip Erase (All Erase) 14.2.4 Product ID Entry 14.2.5 Product ID Exit 14.2.6 Read Protect </fstb>	138
14.3 Toggle Bit (D6) 14.4 Access to the Flash Memory Area. 14.4.1 Flash Memory Control in the Serial PROM Mode	140 141 in the

15. Serial PROM Mode	
15.1 Outline	145
15.2 Memory Mapping	145
15.3 Serial PROM Mode Setting	146
15.3.1 Serial PROM Mode Control Pins	110
15.3.2 Pin Function	
15.3.3 Example Connection for On-Board Writing	
15.3.4 Activating the Serial PROM Mode	
15.4 Interface Specifications for UART	149
15.5 Operation Command	151
15.6 Operation Mode	151
15.6.1 Flash Memory Erasing Mode (Operating command: F0H)	101
15.6.2 Flash Memory Writing Mode (Operation command: 30H)	
15.6.3 RAM Loader Mode (Operation Command: 60H)	
15.6.4 Flash Memory SUM Output Mode (Operation Command: 90H)	
15.6.5 Product ID Code Output Mode (Operation Command: C0H)	
15.6.6 Flash Memory Status Output Mode (Operation Command: C3H)	
15.6.7 Flash Memory Read Protection Setting Mode (Operation Command: FAH)	100
15.7 Error Code	166
15.8 Checksum (SUM)	166
15.8.1 Calculation Method	
15.8 Checksum (SUM) 15.8.1 Calculation Method 15.8.2 Calculation data 15.0 Intel Lloy Format (Dinary)	
15.9 Intel nex Format (Binary)	168
15.10 Passwords	168
15.10.1 Password String	
15.10.2 Handling of Password Error 169	
15.10.3 Password Management during Program Development	 .
15.11 Product ID Code . (170
15.12 Flash Memory Status Code	170
15.12 Flash Memory Status Code 15.13 Specifying the Erasure Area 15.14 Port Input Control Register 15.15 Flowchart	172
15.14 Port Input Control Register	172
15.15 Flowchart	174
15.10 HADT Timing	175
15.16 UART Timing	175
16. Input/Output Circuitry	
16.1 Control Pins	177
16.2 Input/Output Ports	178
17. Electrical Characteristics	
17.1 Abachuta Mayimum Datinga	150
17.1 Absolute Maximum Ratings	179
17.2 Operating Conditions	180
17.2.1 MCU mode (Flash Programming or erasing)	
17.2.2 MCU mode (Except Flash Programming or erasing)	
17.2.3 Serial PROM mode	100
17.3 DC Characteristics	182
17.4 AD Characteristics	183
17.5 AC Characteristics	184
17.6 Flash Characteristics	184
17.6 1 Write/Frase Characteristics 184	101

	Recommended Oscillating Conditions Handling Precaution	
18. Pa	ckage Dimensions	

This is a technical document that describes the operating functions and electrical specifications of the 8-bit microcontroller series TLCS-870/C (LSI).



CMOS 8-Bit Microcontroller

TMP86F409NG

Product No.	ROM (FLASH)	RAM	Package	Emulation Chip
TMP86F409NG	4096 bytes	512 bytes	SDIP32-P-400-1.78	TMP86C909/987XB

1.1 **Features**

- 1. 8-bit single chip microcomputer TLCS-870/C series
 - Instruction execution time:

0.25 µs (at 16 MHz)

122 μs (at 32.768 kHz)

- 132 types & 731 basic instructions
- 2. 17interrupt sources (External: 5 Internal: 12)
- 3. Input / Output ports (26 pins)

Large current output: 8pins (Typ. 20mA), LED direct drive

- 4. Prescaler
 - Time base timer
 - Divider output function
- 5. Watchdog Timer
- 6. 16-bit timer counter: 1 ch
 - Timer, External trigger, Window, Pulse width measurement,

Event counter, Programmable pulse generate (PPG) modes

- 7. 8-bit timer counter: 2 ch
 - Timer, Event counter, Programmable divider output (PDO),

Pulse width modulation (PWM) output,

Programmable pulse generation (PPG) modes

8. 8-bit UART: 1 ch

This product uses the Super Flash® technology under the licence of Silicon Storage Technology, Inc. Super Flash® is registered trademark of Silicon Storage Technology, Inc.

060116EBP

The information contained herein is subject to change without notice. 021023 D
TOSHIBA is continually working to improve the quality and reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress. It is the responsibility of the buyer, when utilizing TOSHIBA products, to comply with the standards of safety in making a safe design for the entire system, and to avoid situations in which a malfunction or failure of such TOSHIBA products could cause loss of human life, bodily injury or damage to property. In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent TOSHIBA products specifications. Also, please keep in mind the precautions and conditions set forth in the "Handling Guide for Semiconductor Devices," or "TOSHIBA Semiconductor Reliability Handbook" etc. 021023 A
The TOSHIBA products listed in this document are intended for usage in general electronics applications (computer, personal equipment, office equipment, measuring equipment, industrial robotics, domestic appliances, etc.). These TOSHIBA products are neither intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunctionor failure of which may cause loss of human life or bodily injury ("Unintended Usage"). Unintended Usage include atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, medical instruments, all types of safety devices, etc. Unintended Usage of TOSHIBA products listed in this document shall be made at the customer's own risk. 021023 B
The products described in this document shall not be used or embedded to any downstream products of which manufacture use and/or

The products described in this document shall not be used or embedded to any downstream products of which manufacture, use and/or

sale are prohibited under any applicable laws and regulations. 060106_Q
The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA for any infringements of patents or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of TOSHIBA or others. 021023_C

The products described in this document are subject to the foreign exchange and foreign trade laws. 021023_E

 For a discussion of how the reliability of microcontrollers can be predicted, please refer to Section 1.3 of the chapter entitled Quality and Reliability Assurance/Handling Precautions. 030619_S

1.1 Features

9. 8bit Serial Expansion Interface (SEI): 1 channel

(MSB/LSB selectable and max. 4Mbps at 16MHz)

- 10. 10-bit successive approximation type AD converter
 - Analog input: 6 ch
- 11. Key-on wakeup: 4 channels
- 12. Clock operation

Single clock mode

Dual clock mode

13. Low power consumption operation

STOP mode: Oscillation stops. (Battery/Capacitor back-up.)

SLOW1 mode: Low power consumption operation using low-frequency clock.(High-frequency clock stop.)

SLOW2 mode: Low power consumption operation using low-frequency clock.(High-frequency clock oscillate.)

IDLE0 mode: CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using high frequency clock. Release by falling edge of the source clock which is set by TBTCR<TBTCK>.

IDLE1 mode: CPU stops and peripherals operate using high frequency clock. Release by interruputs(CPU restarts).

IDLE2 mode: CPU stops and peripherals operate using high and low frequency clock. Release by interruputs. (CPU restarts).

SLEEP0 mode: CPU stops, and only the Time-Based-Timer(TBT) on peripherals operate using low frequency clock. Release by falling edge of the source clock which is set by TBTCR<TBTCK>.

SLEEP1 mode: CPU stops, and peripherals operate using low frequency clock. Release by interruput.(CPU restarts).


SLEEP2 mode: CPU stops and peripherals operate using high and low frequency clock. Release by interruput.

14. Wide operation voltage:

4.5 V to 5.5 V at 16MHz /32.768 kHz


2.7 V to 5.5 V at 8 MHz/32.768 kHz

1.2 Pin Assignment

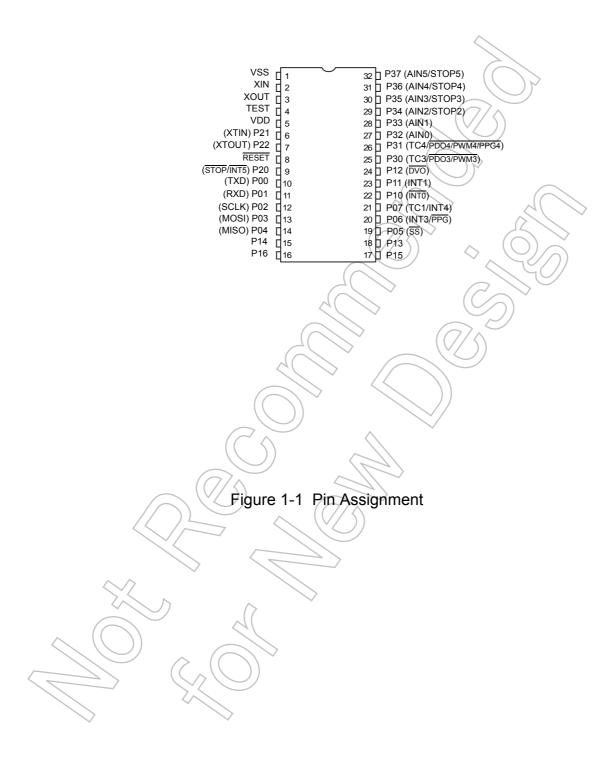

1.3 Block Diagram TMP86F409NG

1.3 Block Diagram

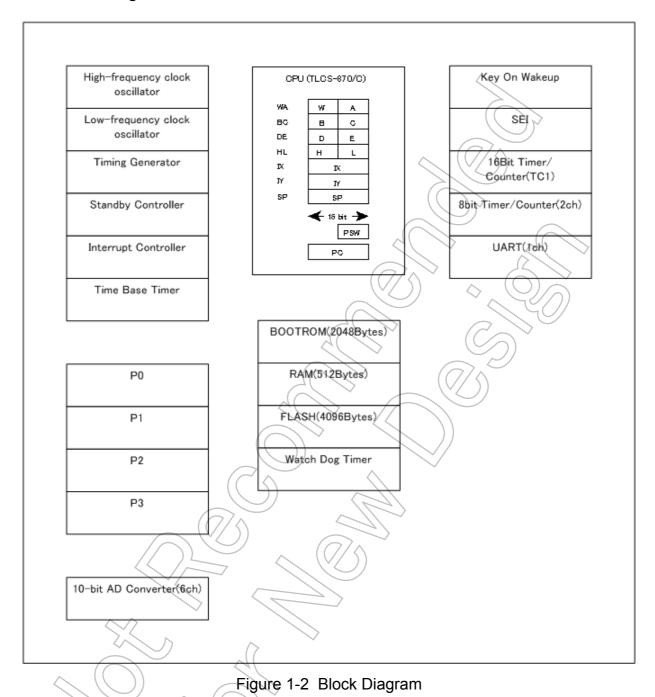

Page 4

1.4 Pin Names and Functions

The TMP86F409NG has MCU mode, parallel PROM mode, and serial PROM mode. Table 1-1 shows the pin functions in MCU mode. The serial PROM mode is explained later in a separate chapter.

Table 1-1 Pin Names and Functions(1/2)

Pin Name	Pin Number	Input/Output	Functions
P07 TC1 INT4	21	IO I	PORT07 TC1 input External interrupt 4 input
P06 INT3 PPG	20	IO I O	PORT06 External interrupt 3 input PPG output
P05 SS	19	IO I	PORT05 SEI master/slave select input
P04 MISO	14	IO IO	PORT04 SEI master input, slave output
P03 MOSI	13	10	PORT03 SEI master input, slave output
P02 SCLK	12	10	PORT02 SEI serial clock input/output pin
P01 RXD	11	10	PORT01 UART data input
P00 TXD	10	10 0	PORT00 UART data output
P16	16	10	PORT16
P15	17	10	PORT15
P14	15	(10)	PORT14
P13	18		PORT13
P12 DVO	24	10	PORT12 Divider Output
P11 INT1	23	10	PORT11 External interrupt 1 input
P10 INTO	22	10	PORT10 External interrupt 0 input
P22 XTOUT	7	10	PORT22 Resonator connecting pins(32.768kHz) for inputting external clock
P21 XTIN	6	10	PORT21 Resonator connecting pins(32.768kHz) for inputting external clock
P20 INT5 STOP	9	IO I	PORT20 External interrupt 5 input STOP mode release signal input
P37 AIN5 STOP5	32	IO I	PORT37 Analog Input5 STOP5
P36 AIN4 STOP4	31	IO I	PORT36 Analog Input4 STOP4

1.4 Pin Names and Functions

Table 1-1 Pin Names and Functions(2/2)

Pin Name	Pin Number	Input/Output	Functions
P35 AIN3 STOP3	30	IO 	PORT35 Analog Input3 STOP3
P34 AIN2 STOP2	29	IO I	PORT34 Analog Input2 STOP2
P33 AIN1	28	IO I	PORT33 Analog Input1
P32 AIN0	27	IO I	PORT32 Analog Input0
P31 TC4 PD04/PWM4/PPG4	26	10 1 0	PORT31 TC4.input PDO4/PWM4/PPG4 output
P30 TC3 PD03/PWM3	25	10	PORT30 TC3-input PDO3/PWM3 output
XIN	2		Resonator connecting pins for high-frequency clock
XOUT	3	0	Resonator connecting pins for high-frequency clock
RESET	8		Reset signal
TEST	4		Test pin for out-going test. Normally, be fixed to low.
VDD	5		+5V
VSS	1		0(GND)

2. Operational Description


2.1 CPU Core Functions

The CPU core consists of a CPU, a system clock controller, and an interrupt controller.

This section provides a description of the CPU core, the program memory, the data memory, and the reset circuit.

2.1.1 Memory Address Map

The TMP86F409NG memory is composed Flash, RAM, DBR(Data buffer register) and SFR(Special function register). They are all mapped in 64-Kbyte address space. Figure 2-1 shows the TMP86F409NG memory address map.

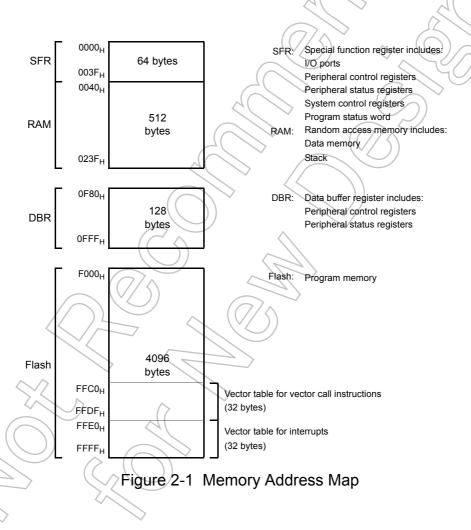

2.1.2 Program Memory (Flash)


The TMP86F409NG has a 4096 bytes (Address F000H to FFFFH) of program memory (Flash).

2.1.3 Data Memory (RAM)

The TMP86F409NG has 512bytes (Address 0040H to 023FH) of internal RAM. The first 192 bytes (0040H to 00FFH) of the internal RAM are located in the direct area; instructions with shorten operations are available against such an area.

The data memory contents become unstable when the power supply is turned on; therefore, the data memory should be initialized by an initialization routine.

Example :Clears RAM to "00H". (TMP86F409NG)

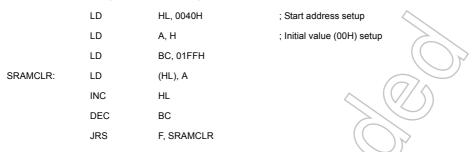

2.2 System Clock Controller

The system clock controller consists of a clock generator, a timing generator, and a standby controller.

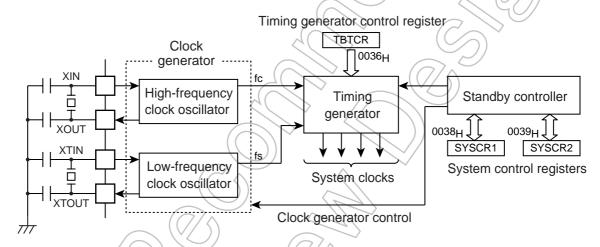


Figure 2-2 System Colck Control

2.2.1 Clock Generator

The clock generator generates the basic clock which provides the system clocks supplied to the CPU core and peripheral hardware. It contains two oscillation circuits: One for the high-frequency clock and one for the low-frequency clock. Power consumption can be reduced by switching of the standby controller to low-power operation based on the low-frequency clock.

The high-frequency (fc) clock and low-frequency (fs) clock can easily be obtained by connecting a resonator between the XIN/XOUT and XTIN/XTOUT pins respectively. Clock input from an external oscillator is also possible. In this case, external clock is applied to XIN/XTIN pin with XOUT/XTOUT pin not connected.

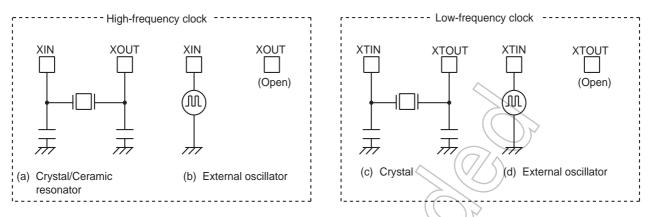


Figure 2-3 Examples of Resonator Connection

Note: The function to monitor the basic clock directly at external is not provided for hardware, however, with disabling all interrupts and watchdog timers, the oscillation frequency can be adjusted by monitoring the pulse which the fixed frequency is outputted to the port by the program.

The system to require the adjustment of the oscillation frequency should create the program for the adjustment in advance.



2.2.2 Timing Generator

The timing generator generates the various system clocks supplied to the CPU core and peripheral hardware from the basic clock (fc or fs). The timing generator provides the following functions.

- 1. Generation of main system clock
- 2. Generation of divider output (DVO) pulses
- 3. Generation of source clocks for time base timer
- 4. Generation of source clocks for watchdog timer
- 5. Generation of internal source clocks for timer/counters
- 6. Generation of warm-up clocks for releasing STOP mode

2.2.2.1 Configuration of timing generator

The timing generator consists of a 2-stage prescaler, a 21-stage divider, a main system clock generator, and machine cycle counters.

An input clock to the 7th stage of the divider depends on the operating mode, SYSCR2<SYSCK> and TBTCR<DV7CK>, that is shown in Figure 2-4. As reset and STOP mode started/canceled, the prescaler and the divider are cleared to "0".


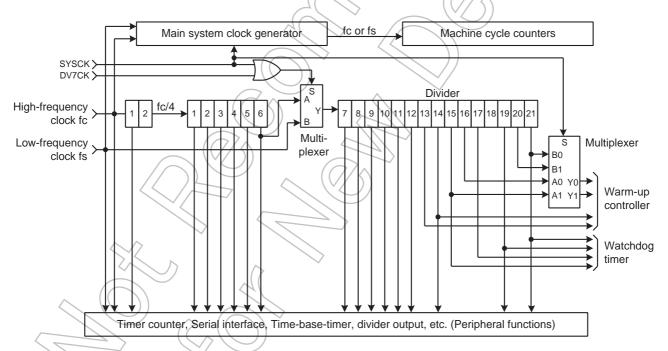


Figure 2-4 Configuration of Timing Generator

Timing Generator Control Register



- Note 1: In single clock mode, do not set DV7CK to "1".
- Note 2: Do not set "1" on DV7CK while the low-frequency clock is not operated stably.
- Note 3: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], *: Don't care
- Note 4: In SLOW1/2 and SLEEP1/2 modes, the DV7CK setting is ineffective, and fs is input to the 7th stage of the divider.
- Note 5: When STOP mode is entered from NORMAL1/2 mode, the DV7CK setting is ineffective during the warm-up period after release of STOP mode, and the 6th stage of the divider is input to the 7th stage during this period.

2.2.2.2 Machine cycle

Instruction execution and peripheral hardware operation are synchronized with the main system clock.

The minimum instruction execution unit is called an "machine cycle". There are a total of 10 different types of instructions for the TLCS-870/C Series: Ranging from 1-cycle instructions which require one machine cycle for execution to 10-cycle instructions which require 10 machine cycles for execution. A machine cycle consists of 4 states (S0 to S3), and each state consists of one main system clock.

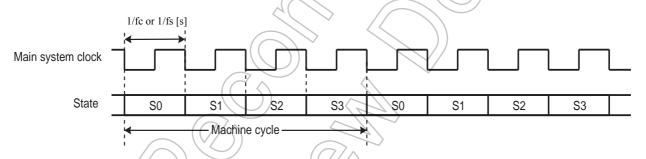


Figure 2-5 Machine Cycle

2.2.3 Operation Mode Control Circuit

The operation mode control circuit starts and stops the oscillation circuits for the high-frequency and low-frequency clocks, and switches the main system clock. There are three operating modes: Single clock mode, dual clock mode and STOP mode. These modes are controlled by the system control registers (SYSCR1 and SYSCR2). Figure 2-6 shows the operating mode transition diagram.

2.2.3.1 Single-clock mode

Only the oscillation circuit for the high-frequency clock is used, and P21 (XTIN) and P22 (XTOUT) pins are used as input/output ports. The main-system clock is obtained from the high-frequency clock. In the single-clock mode, the machine cycle time is 4/fc [s].

(1) NORMAL1 mode

In this mode, both the CPU core and on-chip peripherals operate using the high-frequency clock. The TMP86F409NG is placed in this mode after reset.

(2) IDLE1 mode

In this mode, the internal oscillation circuit remains active. The CPU and the watchdog timer are halted; however on-chip peripherals remain active (Operate using the high-frequency clock).

IDLE1 mode is started by SYSCR2<IDLE> = "1", and IDLE1 mode is released to NORMAL1 mode by an interrupt request from the on-chip peripherals or external interrupt inputs. When the IMF (Interrupt master enable flag) is "1" (Interrupt enable), the execution will resume with the acceptance of the interrupt, and the operation will return to normal after the interrupt service is completed. When the IMF is "0" (Interrupt disable), the execution will resume with the instruction which follows the IDLE1 mode start instruction.

(3) IDLE0 mode

In this mode, all the circuit, except oscillator and the timer-base-timer, stops operation.

This mode is enabled by SYSCR2<TGHALT> = "1".

When IDLE0 mode starts, the CPU stops and the timing generator stops feeding the clock to the peripheral circuits other than TBT. Then, upon detecting the falling edge of the source clock selected with TBTCR<TBTCK>, the timing generator starts feeding the clock to all peripheral circuits.

When returned from IDLE0 mode, the CPU restarts operating, entering NORMAL1 mode back again. IDLE0 mode is entered and returned regardless of how TBTCR<TBTEN> is set. When IMF = "1", EF6 (TBT interrupt individual enable flag) = "1", and TBTCR<TBTEN> = "1", interrupt processing is performed. When IDLE0 mode is entered while TBTCR<TBTEN> = "1", the INTTBT interrupt latch is set after returning to NORMAL1 mode.

2.2.3.2 Dual-clock mode

Both the high-frequency and low-frequency oscillation circuits are used in this mode. P21 (XTIN) and P22 (XTOUT) pins cannot be used as input/output ports. The main system clock is obtained from the high-frequency clock in NORMAL2 and IDLE2 modes, and is obtained from the low-frequency clock in SLOW and SLEEP modes. The machine cycle time is 4/fc [s] in the NORMAL2 and IDLE2 modes, and 4/fs [s] (122 µs at fs = 32.768 kHz) in the SLOW and SLEEP modes.

The TLCS-870/C is placed in the signal-clock mode during reset. To use the dual-clock mode, the low-frequency oscillator should be turned on at the start of a program.

(1) NORMAL2 mode

In this mode, the CPU core operates with the high-frequency clock. On-chip peripherals operate using the high-frequency clock and/or low-frequency clock.

(2) SLOW2 mode

In this mode, the CPU core operates with the low-frequency clock, while both the high-frequency clock and the low-frequency clock are operated. As the SYSCR2<SYSCK> becomes "1", the hardware changes into SLOW2 mode. As the SYSCR2<SYSCK> becomes "0", the hardware changes into NORMAL2 mode. As the SYSCR2<XEN> becomes "0", the hardware changes into SLOW1 mode. Do not clear SYSCR2<XTEN> to "0" during SLOW2 mode.

(3) SLOW1 mode

This mode can be used to reduce power-consumption by turning off oscillation of the high-frequency clock. The CPU core and on-chip peripherals operate using the low-frequency clock.

Switching back and forth between SLOW1 and SLOW2 modes are performed by SYSCR2<XEN>. In SLOW1 and SLEEP modes, the input clock to the 1st stage of the divider is stopped; output from the 1st to 6th stages is also stopped.

(4) IDLE2 mode

In this mode, the internal oscillation circuit remain active. The CPU and the watchdog timer are halted; however, on-chip peripherals remain active (Operate using the high-frequency clock and/or the low-frequency clock). Starting and releasing of IDLE2 mode are the same as for IDLE1 mode, except that operation returns to NORMAL2 mode.

(5) SLEEP1 mode

In this mode, the internal oscillation circuit of the low-frequency clock remains active. The CPU, the watchdog timer, and the internal oscillation circuit of the high-frequency clock are halted; however, on-chip peripherals remain active (Operate using the low-frequency clock). Starting and releasing of SLEEP mode are the same as for IDLE1 mode, except that operation returns to SLOW1 mode. In SLOW1 and SLEEP1 modes, the input clock to the 1st stage of the divider is stopped; output from the 1st to 6th stages is also stopped.

(6) SLEEP2 mode

The SLEEP2 mode is the idle mode corresponding to the SLOW2 mode. The status under the SLEEP2 mode is same as that under the SLEEP1 mode, except for the oscillation circuit of the high-frequency clock.

(7) SLEEP0 mode

In this mode, all the circuit, except oscillator and the timer-base-timer, stops operation. This mode is enabled by setting "1" on bit SYSCR2<TGHALT>.


When SLEEPO mode starts, the CPU stops and the timing generator stops feeding the clock to the peripheral circuits other than TBT. Then, upon detecting the falling edge of the source clock selected with TBTCR<TBTCK>, the timing generator starts feeding the clock to all peripheral circuits.

When returned from SLEEP0 mode, the CPU restarts operating, entering SLOW1 mode back again. SLEEP0 mode is entered and returned regardless of how TBTCR<TBTEN> is set. When IMF = "1", EF6 (TBT interrupt individual enable flag) = "1", and TBTCR<TBTEN> = "1", interrupt processing is performed. When SLEEP0 mode is entered while TBTCR<TBTEN> = "1", the INTTBT interrupt latch is set after returning to SLOW1 mode.

2.2.3.3 STOP mode

In this mode, the internal oscillation circuit is turned off, causing all system operations to be halted. The internal status immediately prior to the halt is held with a lowest power consumption during STOP mode.

STOP mode is started by the system control register 1 (SYSCR1), and STOP mode is released by a inputting (Either level-sensitive or edge-sensitive can be programmably selected) to the $\overline{\text{STOP}}$ pin. After the warm-up period is completed, the execution resumes with the instruction which follows the STOP mode start instruction.

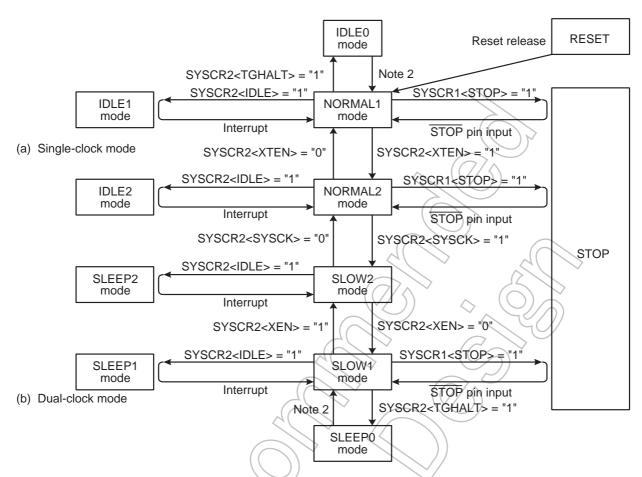

Note 1: NORMAL1 and NORMAL2 modes are generically called NORMAL; SLOW1 and SLOW2 are called SLOW; IDLE0, IDLE1 and IDLE2 are called IDLE; SLEEP0, SLEEP1 and SLEEP2 are called SLEEP.

Note 2: The mode is released by falling edge of TBTCR<TBTCK> setting.

Figure 2-6 Operating Mode Transition Diagram

Table 2-1 Operating Mode and Conditions

		<u> </u>					
Opera	ating Mode	Osci High Frequency	Low Frequency	CPU Core	ТВТ	Other Peripherals	Machine Cycle Time
^ ((RESET			Reset	Reset	Reset	
	NORMAL1	Oscillation		Operate		Onerate	4/fo.[o]
Single clock	IDLE1	Oscillation	Stop		Operate	Operate	4/fc [s]
	IDLE0			Halt		Halt	
	STOP	Stop			Halt	Пан	-
	NORMAL2			Operate with high frequency			4/fc [s]
	IDLE2	Oscillation		Halt			
	SLOW2	Oscillation	Oscillation	Operate with low frequency	Operate	Operate	
Dual clock	SLEEP2			Halt			
	SLOW1			Operate with low frequency			4/fs [s]
	SLEEP1	Stop					
	SLEEP0			Halt		Halt	
	STOP		Stop		Halt	riait	_

System Control Register 1

SYSCR1	7	6	5	4	3	2	1	0	
(0038H)	STOP	RELM	RETM	OUTEN	WU	Т			(Initial value: 0000 00**)

STOP	STOP mode start	0: CPU core and peripherals remain active 1: CPU core and peripherals are halted (Start STOP mode)			
RELM	Release method for STOP mode	0: Edge-sensitive release 1: Level-sensitive release			
RETM	Operating mode after STOP mode	0: Return to NORMAL1/2 mode 1: Return to SLOW1 mode			R/W
OUTEN	Port output during STOP mode	0: High impedance 1: Output kept			R/W
			Return to NORMAL mode	Return to SLOW mode	
WUT	Warm-up time at releasing STOP mode	00 01 10 11	3 x 2 ¹⁶ /fc 2 ¹⁶ /fc 3 x 2 ¹⁴ /fc 2 ¹⁴ /fc	3×2^{13} /fs 2^{13} /fs 3×2^{6} /fs 2^{6} /fs	R/W

- Note 1: Always set RETM to "0" when transiting from NORMAL mode to STOP mode. Always set RETM to "1" when transiting from SLOW mode to STOP mode.
- Note 2: When STOP mode is released with RESET pin input, a return is made to NORMAL1 regardless of the RETM contents.
- Note 3: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], *; Don't care
- Note 4: Bits 0 and 1 in SYSCR1 are read as undefined data when a read instruction is executed.
- Note 5: As the hardware becomes STOP mode under OUTEN = "0", input value is fixed to "0"; therefore it may cause external interrupt request on account of falling edge.
- Note 6: When the key-on wakeup is used, RELM should be set to "1".
- Note 7: In case of setting as STOP mode is released by a rising edge of STOP pin input, the release setting by STOP5 to STOP2 on STOPCR register is prohibited.
- Note 8: Port P20 is used as STOP pin. Therefore, when stop mode is started, OUTEN does not affect to P20, and P20 becomes High-Z mode.
- Note 9: The warmig-up time should be set correctly for using oscillator.

System Control Register 2

 SYSCR2
 7
 6
 5
 4
 3
 2
 1
 0

 (0039H)
 XEN
 XTEN
 SYSCK
 IDLE
 TGHALT
 (Initial value: 1000 *0**)

	XEN	High-frequency oscillator control	0: Turn off oscillation 1: Turn on oscillation		
	XTEN	Low-frequency oscillator control	Turn off oscillation Turn on oscillation	R/W	
///	SYSCK	Main system clock select (Write)/main system clock moni- tor (Read)	0: High-frequency clock (NORMAL1/NORMAL2/IDLE1/IDLE2) 1: Low-frequency clock (SLOW1/SLOW2/SLEEP1/SLEEP2)		
//	IDLE	CPU and watchdog timer control (IDLE1/2 and SLEEP1/2 modes)	CPU and watchdog timer remain active CPU and watchdog timer are stopped (Start IDLE1/2 and SLEEP1/2 modes)		
	TGHALT	TG control (IDLE0 and SLEEP0 modes)	0: Feeding clock to all peripherals from TG 1: Stop feeding clock to peripherals except TBT from TG. (Start IDLE0 and SLEEP0 modes)	R/W	

- Note 1: A reset is applied if both XEN and XTEN are cleared to "0", XEN is cleared to "0" when SYSCK = "0", or XTEN is cleared to "0" when SYSCK = "1".
- Note 2: *: Don't care, TG: Timing generator
- Note 3: Bits 3, 1 and 0 in SYSCR2 are always read as undefined value.
- Note 4: Do not set IDLE and TGHALT to "1" simultaneously.
- Note 5: Because returning from IDLE0/SLEEP0 to NORMAL1/SLOW1 is executed by the asynchronous internal clock, the period of IDLE0/SLEEP0 mode might be shorter than the period setting by TBTCR<TBTCK>.
- Note 6: When IDLE1/2 or SLEEP1/2 mode is released, IDLE is automatically cleared to "0".
- Note 7: When IDLE0 or SLEEP0 mode is released, TGHALT is automatically cleared to "0".

Note 8: Before setting TGHALT to "1", be sure to stop peripherals. If peripherals are not stopped, the interrupt latch of peripherals may be set after IDLE0 or SLEEP0 mode is released.

2.2.4 Operating Mode Control

2.2.4.1 STOP mode

STOP mode is controlled by the system control register 1, the STOP pin input and key-on wakeup input (STOP5 to STOP2) which are controlled by the STOP mode release control register (STOPCR). The STOP pin is also used both as a port P20 and an INT5 (external interrupt input 5) pin. STOP mode is started by setting SYSCR1<STOP> to "1". During STOP mode, the following status is maintained.

- 1. Oscillations are turned off, and all internal operations are halted.
- 2. The data memory, registers, the program status word and port output latches are all held in the status in effect before STOP mode was entered.
- 3. The prescaler and the divider of the timing generator are cleared to "0".
- 4. The program counter holds the address 2 ahead of the instruction (e.g., [SET (SYSCR1).7]) which started STOP mode.

STOP mode includes a level-sensitive mode and an edge-sensitive mode, either of which can be selected with the SYSCR1<RELM>. Do not use any key-on wakeup input (STOP5 to STOP2) for releasing STOP mode in edge-sensitive mode.

Note 1: The STOP mode can be released by either the STOP or key-on wakeup pins (STOP5 to STOP2). However, because the STOP pin is different from the key-on wakeup and can not inhibit the release input, the STOP pin must be used for releasing STOP mode.

Note 2: During STOP period (from start of STOP mode to end of warm up), due to changes in the external interrupt pin signal, interrupt latches may be set to "1" and interrupts may be accepted immediately after STOP mode is released. Before starting STOP mode, therefore, disable interrupts. Also, before enabling interrupts after STOP mode is released, clear unnecessary interrupt latches.

(1) Level-sensitive release mode (RELM = "1")

In this mode, STOP mode is released by setting the STOP pin high or detecting high or low edge input for the STOP5 to STOP2 pins which are enabled by STOPCR. This mode is used for capacitor backup when the main power supply is cut off and long term battery backup.

Even if an instruction for starting STOP mode is executed while STOP pin input is high, STOP mode does not start but instead the warm-up sequence starts immediately. Thus, to start STOP mode in the level-sensitive release mode, it is necessary for the program to first confirm that the STOP pin input is low. The following two methods can be used for confirmation.

- 1. Testing a port.
- 2. Using an external interrupt input INT5 (INT5 is a falling edge-sensitive input).

Example 1 :Starting STOP mode from NORMAL mode by testing a port P20.

	LD	(SYSCR1), 01010000B	; Sets up the level-sensitive release mode
SSTOPH:	TEST	(P2PRD). 0	; Wait until the $\overline{\text{STOP}}$ pin input goes low level
	JRS	F, SSTOPH	
	DI		; IMF \leftarrow 0
	SET	(SYSCR1). 7	; Starts STOP mode

Example 2 :Starting STOP mode from NORMAL mode with an INT5 interrupt.

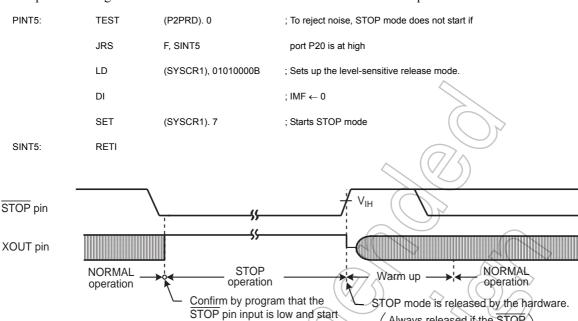


Figure 2-7 Level-sensitive Release Mode

Note 1: Even if the STOP pin input is low after warm-up start, the STOP mode is not restarted.

Note 2: In this case of changing to the level-sensitive mode from the edge-sensitive mode, the release mode is not switched until a rising edge of the STOP pin input is detected.

Always released if the STOP

pin input is high

Edge-sensitive release mode (RELM = "0")

STOP mode.

In this mode, STOP mode is released by a rising edge of the STOP pin input. This is used in applications where a relatively short program is executed repeatedly at periodic intervals. This periodic signal (for example, a clock from a low-power consumption oscillator) is input to the STOP pin. In the edge-sensitive release mode, STOP mode is started even when the STOP pin input is high level. Do not use any STOP5 to STOP2 pin inputs for releasing STOP mode in edge-sensitive release mode.

Example: Starting STOP mode from NORMAL mode

; IMF ← 0 (SYSCR1), 10010000B ; Starts after specified to the edge-sensitive release mode

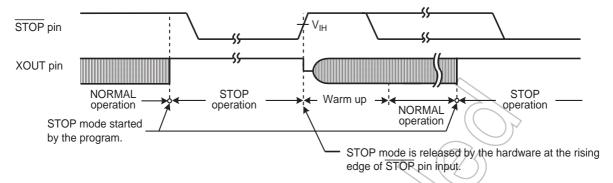


Figure 2-8 Edge-sensitive Release Mode

STOP mode is released by the following sequence.

- In the dual-clock mode, when returning to NORMAL2, both the high-frequency and low-frequency clock oscillators are turned on; when returning to SLOW1 mode, only the low-frequency clock oscillator is turned on. In the single-clock mode, only the high-frequency clock oscillator is turned on.
- 2. A warm-up period is inserted to allow oscillation time to stabilize. During warm up, all internal operations remain halted. Four different warm-up times can be selected with the SYSCR1<WUT> in accordance with the resonator characteristics.
- 3. When the warm-up time has elapsed, normal operation resumes with the instruction following the STOP mode start instruction.
- Note 1: When the STOP mode is released, the start is made after the prescaler and the divider of the timing generator are cleared to "0".
- Note 2: STOP mode can also be released by inputting low level on the RESET pin, which immediately performs the normal reset operation.
- Note 3: When STOP mode is released with a low hold voltage, the following cautions must be observed. The power supply voltage must be at the operating voltage level before releasing STOP mode. The RESET pin input must also be "H" level, rising together with the power supply voltage. In this case, if an external time constant circuit has been connected, the RESET pin input voltage will increase at a slower pace than the power supply voltage. At this time, there is a danger that a reset may occur if input voltage level of the RESET pin drops below the non-inverting high-level input voltage (Hysteresis input).

Table 2-2 Warm-up Time Example (at fc = 16.0 MHz, fs = 32.768 kHz)

WUT	Warm-up Time [ms]			
WOT	Return to NORMAL Mode	Return to SLOW Mode		
00 01 10	12.288 4.096 3.072 1.024	750 250 5.85 1.95		

Note 1: The warm-up time is obtained by dividing the basic clock by the divider. Therefore, the warm-up time may include a certain amount of error if there is any fluctuation of the oscillation frequency when STOP mode is released. Thus, the warm-up time must be considered as an approximate value


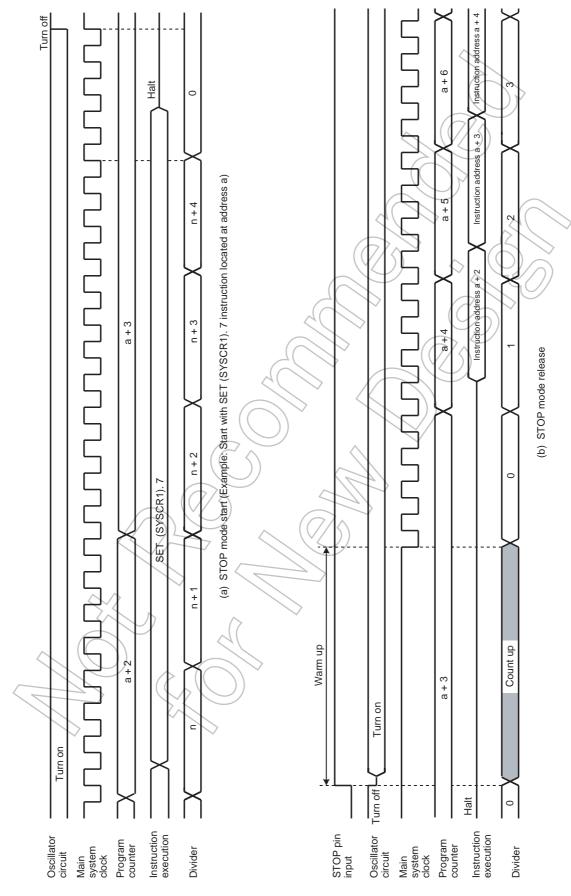


Figure 2-9 STOP Mode Start/Release

2.2.4.2 IDLE1/2 mode and SLEEP1/2 mode

IDLE1/2 and SLEEP1/2 modes are controlled by the system control register 2 (SYSCR2) and maskable interrupts. The following status is maintained during these modes.

- 1. Operation of the CPU and watchdog timer (WDT) is halted. On-chip peripherals continue to operate.
- 2. The data memory, CPU registers, program status word and port output latches are all held in the status in effect before these modes were entered.
- 3. The program counter holds the address 2 ahead of the instruction which starts these modes.

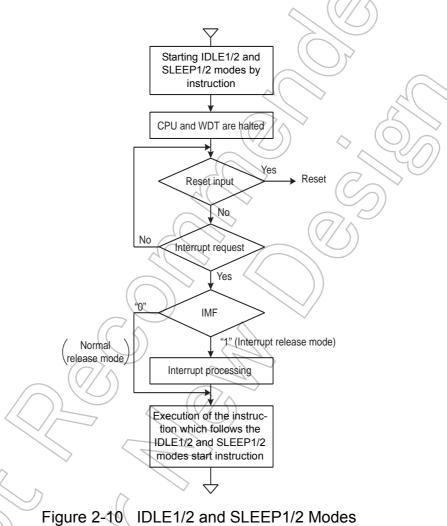

• Start the IDLE1/2 and SLEEP1/2 modes

After IMF is set to "0", set the individual interrupt enable flag (EF) which releases IDLE1/2 and SLEEP1/2 modes. To start IDLE1/2 and SLEEP1/2 modes, set SYSCR2<IDLE> to "1".

• Release the IDLE1/2 and SLEEP1/2 modes

IDLE1/2 and SLEEP1/2 modes include a normal release mode and an interrupt release mode. These modes are selected by interrupt master enable flag (IMF). After releasing IDLE1/2 and SLEEP1/2 modes, the SYSCR2<IDLE> is automatically cleared to "0" and the operation mode is returned to the mode preceding IDLE1/2 and SLEEP1/2 modes.

IDLE1/2 and SLEEP1/2 modes can also be released by inputting low level on the RESET pin. After releasing reset, the operation mode is started from NORMAL1 mode.

(1) Normal release mode (IMF = "0")

IDLE1/2 and SLEEP1/2 modes are released by any interrupt source enabled by the individual interrupt enable flag (EF). After the interrupt is generated, the program operation is resumed from the instruction following the IDLE1/2 and SLEEP1/2 modes start instruction. Normally, the interrupt latches (IL) of the interrupt source used for releasing must be cleared to "0" by load instructions.

(2) Interrupt release mode (IMF = "1"

IDLE1/2 and SLEEP1/2 modes are released by any interrupt source enabled with the individual interrupt enable flag (EF) and the interrupt processing is started. After the interrupt is processed, the program operation is resumed from the instruction following the instruction, which starts IDLE1/2 and SLEEP1/2 modes.

Note: When a watchdog timer interrupts is generated immediately before IDLE1/2 and SLEEP1/2 modes are started, the watchdog timer interrupt will be processed but IDLE1/2 and SLEEP1/2 modes will not be started.

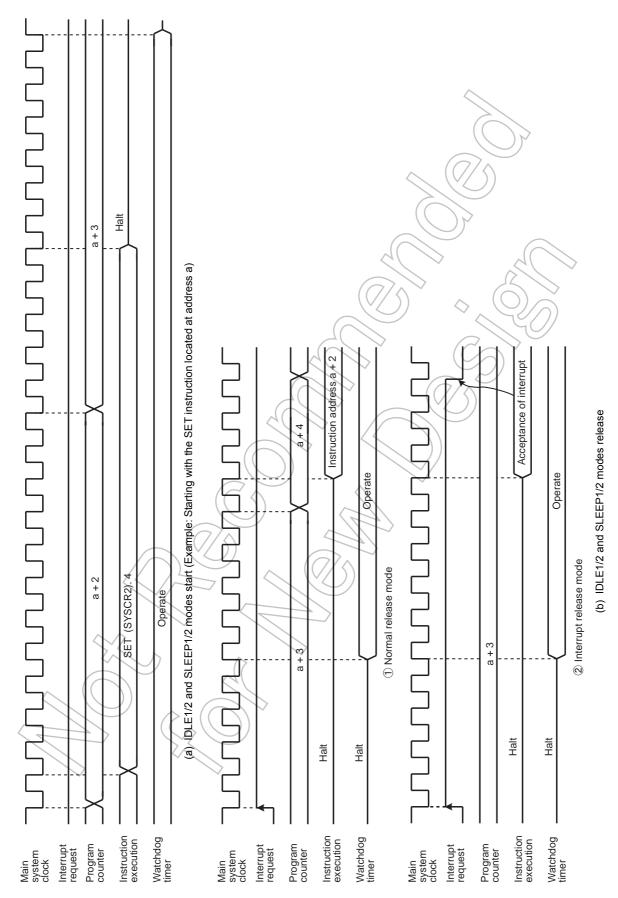


Figure 2-11 IDLE1/2 and SLEEP1/2 Modes Start/Release

2.2.4.3 IDLE0 and SLEEP0 modes (IDLE0, SLEEP0)

IDLE0 and SLEEP0 modes are controlled by the system control register 2 (SYSCR2) and the time base timer control register (TBTCR). The following status is maintained during IDLE0 and SLEEP0 modes.

- 1. Timing generator stops feeding clock to peripherals except TBT.
- 2. The data memory, CPU registers, program status word and port output latches are all held in the status in effect before IDLE0 and SLEEP0 modes were entered.
- 3. The program counter holds the address 2 ahead of the instruction which starts IDLE0 and SLEEP0 modes.

Note: Before starting IDLE0 or SLEEP0 mode, be sure to stop (Disable) peripherals.

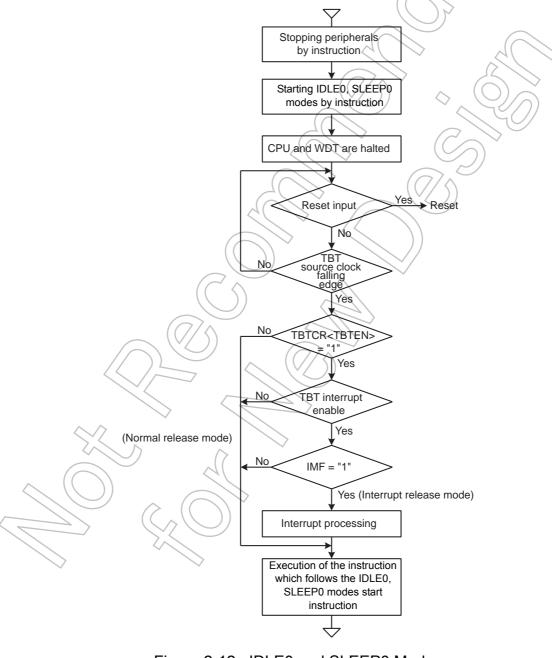


Figure 2-12 IDLE0 and SLEEP0 Modes

· Start the IDLE0 and SLEEP0 modes

Stop (Disable) peripherals such as a timer counter.

To start IDLE0 and SLEEP0 modes, set SYSCR2<TGHALT> to "1".

Release the IDLE0 and SLEEP0 modes

IDLE0 and SLEEP0 modes include a normal release mode and an interrupt release mode.

These modes are selected by interrupt master flag (IMF), the individual interrupt enable flag of TBT and TBTCR<TBTEN>.

After releasing IDLE0 and SLEEP0 modes, the SYSCR2<TGHALT> is automatically cleared to "0" and the operation mode is returned to the mode preceding IDLE0 and SLEEP0 modes. Before starting the IDLE0 or SLEEP0 mode, when the TBTCR<TBTEN> is set to "1", INTTBT interrupt latch is set to "1".

IDLE0 and SLEEP0 modes can also be released by inputting low level on the RESET pin. After releasing reset, the operation mode is started from NORMAL1 mode.

Note: IDLE0 and SLEEP0 modes start/release without reference to TBTCR<TBTEN> setting

(1) Normal release mode (IMF•EF6•TBTCR<TBTEN> = "0"

IDLE0 and SLEEP0 modes are released by the source clock falling edge, which is setting by the TBTCR<TBTCK>. After the falling edge is detected, the program operation is resumed from the instruction following the IDLE0 and SLEEP0 modes start instruction. Before starting the IDLE0 or SLEEP0 mode, when the TBTCR<TBTEN> is set to "1", INTTBT interrupt latch is set to "1".

(2) Interrupt release mode (IMF•EF6•TBTCR<TBTEN> = "1")

IDLE0 and SLEEP0 modes are released by the source clock falling edge, which is setting by the TBTCR<TBTCK> and INTTBT interrupt processing is started.

- Note 1: Because returning from IDLE0, SLEEP0 to NORMAL1, SLOW1 is executed by the asynchronous internal clock, the period of IDLE0, SLEEP0 mode might be the shorter than the period setting by TBTCR<TBTCK>.
- Note 2: When a watchdog timer interrupt is generated immediately before IDLE0/SLEEP0 mode is started, the watchdog timer interrupt will be processed but IDLE0/SLEEP0 mode will not be started.

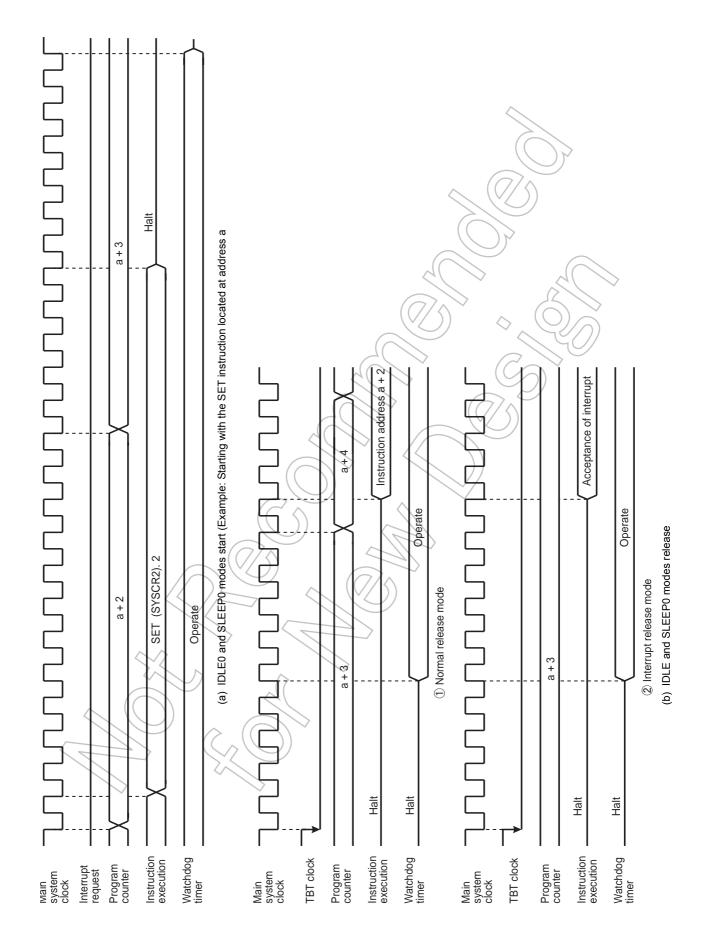


Figure 2-13 IDLE0 and SLEEP0 Modes Start/Release

2.2.4.4 SLOW mode

SLOW mode is controlled by the system control register 2 (SYSCR2).

The following is the methods to switch the mode with the warm-up counter.

Switching from NORMAL2 mode to SLOW1 mode

First, set SYSCR2<SYSCK> to switch the main system clock to the low-frequency clock for SLOW2 mode. Next, clear SYSCR2<XEN> to turn off high-frequency oscillation.

Note: The high-frequency clock can be continued oscillation in order to return to NORMAL2 mode from SLOW mode quickly. Always turn off oscillation of high-frequency clock when switching from SLOW mode to stop mode.

Example 1: Switching from NORMAL2 mode to SLOW1 mode.

SET (SYSCR2). 5 ; SYSCR2<SYSCK> ←

(Switches the main system clock to the low-frequency

clock for SLOW2)

CLR (SYSCR2). 7 ; SYSCR2<XEN> \leftarrow 0

(Turns off high-frequency oscillation)

Example 2 :Switching to the SLOW1 mode after low-frequency clock has stabilized.

SET (SYSCR2). 6 SYSCR2<XTEN> ← 1

LD (TC3CR), 43H Sets mode for TC4, 3 (16-bit mode, fs for source)

LD (TC4CR), 05H ; Sets warming-up counter mode

LDW (TTREG3), 8000H ; Sets warm-up time (Depend on oscillator accompanied)

DI ; IMF $\leftarrow 0$

SET (EIRH). 3 ; Enables INTTC4

Εļ IMF ←

SET (TC4CR). 3 ; Starts TC4, 3

PINTTC4: **CLR** (TC4CR). 3 Stops TC4, 3

CLR

RETI

(SYSCR2), 5 SET : SYSCR2<SYSCK> ← 1

(Switches the main system clock to the low-frequency clock)

(SYSCR2). 7 ; SYSCR2<XEN> \leftarrow 0

(Turns off high-frequency oscillation)


VINTTC4: DW PINTTC4 ; INTTC4 vector table

(2) Switching from SLOW1 mode to NORMAL2 mode


First, set SYSCR2<XEN> to turn on the high-frequency oscillation. When time for stabilization (Warm up) has been taken by the timer/counter (TC4,TC3), clear SYSCR2<SYSCK> to switch the main system clock to the high-frequency clock.

SLOW mode can also be released by inputting low level on the RESET pin. After releasing reset, the operation mode is started from NORMAL1 mode.

Note: After SYSCK is cleared to "0", executing the instructions is continued by the low-frequency clock for the period synchronized with low-frequency and high-frequency clocks.



Example :Switching from the SLOW1 mode to the NORMAL2 mode (fc = 16 MHz, warm-up time is 4.0 ms).

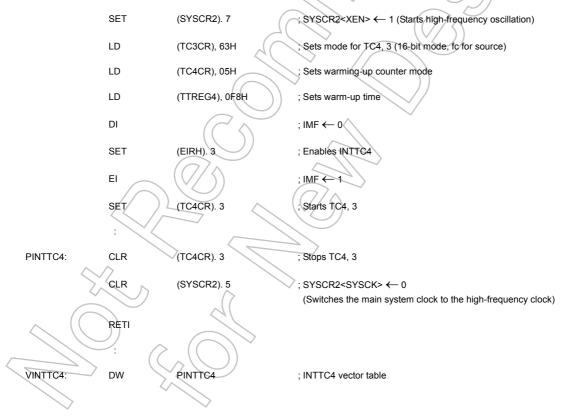

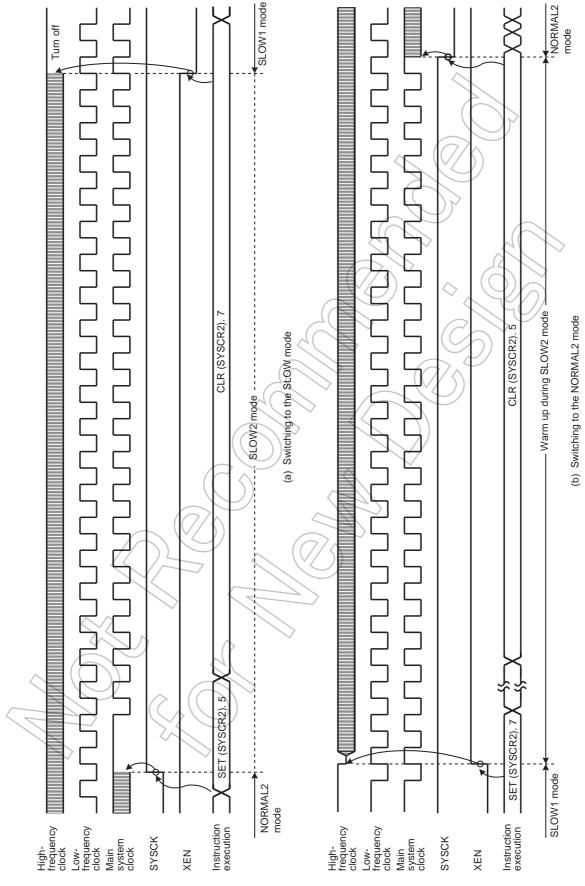


Figure 2-14 Switching between the NORMAL2 and SLOW Modes

TOSHIBA TMP86F409NG

2.3 Reset Circuit

The TMP86F409NG has four types of reset generation procedures: An external reset input, an address trap reset, a watchdog timer reset and a system clock reset. Of these reset, the address trap reset, the watchdog timer and the system clock reset are a malfunction reset. When the malfunction reset request is detected, reset occurs during the maximum 24/fc[s].

The malfunction reset circuit such as watchdog timer reset, address trap reset and system clock reset is not initialized when power is turned on. Therefore, reset may occur during maximum 24/fc[s] (1.5µs at 16.0 MHz) when power is turned on.

Table 2-3 shows on-chip hardware initialization by reset action.

Table 2-3	Initializing	Internal	Status	by	Reset	Action
-----------	--------------	----------	--------	----	-------	--------

On-chip Hardware		Initial Value	On-chip Hardware	Initial Value
Program counter	(PC)	(FFFEH)	4()	
Stack pointer	(SP)	Not initialized	Prescaler and divider of timing generator	
General-purpose registers (W, A, B, C, D, E, H, L, IX, IY	')	Not initialized		
Jump status flag	(JF)	Not initialized	Watchdog timer	Enable
Zero flag	(ZF)	Not initialized		\bigcirc
Carry flag	(CF)	Not initialized		
Half carry flag	(HF)	Not initialized	Output latches of I/O ports	Defer to I/O part circuitme
Sign flag	(SF)	Not initialized	Output lateries of 1/O ports	Refer to I/O port circuitry
Overflow flag	(VF)	Not initialized		
Interrupt master enable flag	(IMF)	(6)		
Interrupt individual enable flags	(EF)		Control registers	Refer to each of control
Interrupt latches	(IL)	(0)	Control registers	register
		,	RAM	Not initialized

2.3.1 External Reset Input

The RESET pin contains a Schmitt trigger (Hysteresis) with an internal pull-up resistor.

When the RESET pin is held at "L" level for at least 3 machine cycles (12/fc [s]) with the power supply voltage within the operating voltage range and oscillation stable, a reset is applied and the internal state is initialized.

When the RESET pin input goes high, the reset operation is released and the program execution starts at the vector address stored at addresses FFFEH to FFFFH.


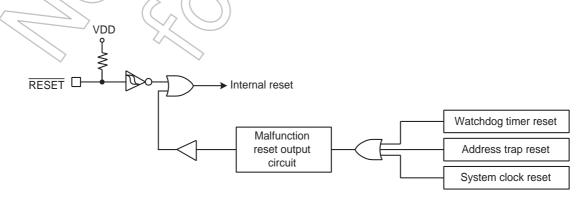


Figure 2-15 Reset Circuit

2.3.2 Address trap reset

If the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (when WDTCR1<ATAS> is set to "1"), DBR or SFR area, address trap reset will be generated. The reset time is maximum 24/fc[s] (1.5µs at 16.0 MHz).

Note: The operating mode under address trapped is alternative of reset or interrupt. The address trap area is alternative.



Note 1: Address "a" is on-chip RAM (WDTCR1<ATAS> = "1") space, DBR or SFR area.

Note 2: During reset release, reset vector "r" is read out, and an instruction at address "r" is fetched and decoded.

Figure 2-16 Address Trap Reset

2.3.3 Watchdog timer reset

Refer to Section "Watchdog Timer".

2.3.4 System clock reset

If the condition as follows is detected, the system clock reset occurs automatically to prevent dead lock of the CPU. (The oscillation is continued without stopping.)

- In case of clearing SYSCR2<XEN> and SYSCR2<XTEN> simultaneously to "0".
- In case of clearing SYSCR2<XEN> to "0", when the SYSCR2<SYSCK> is "0".
- In case of clearing SYSCR2<XTEN> to "0", when the SYSCR2<SYSCK> is "1".

The reset time is maximum 24/fc (1.5 µs at 16.0 MHz).







3. Interrupt Control Circuit

The TMP86F409NG has a total of 17 interrupt sources excluding reset, of which 1 source levels are multiplexed. Interrupts can be nested with priorities. Four of the internal interrupt sources are non-maskable while the rest are maskable.

Interrupt sources are provided with interrupt latches (IL), which hold interrupt requests, and independent vectors. The interrupt latch is set to "1" by the generation of its interrupt request which requests the CPU to accept its interrupts. Interrupts are enabled or disabled by software using the interrupt master enable flag (IMF) and interrupt enable flag (EF). If more than one interrupts are generated simultaneously, interrupts are accepted in order which is dominated by hardware. However, there are no prioritized interrupt factors among non-maskable interrupts.

	Interrupt Factors	Enable Condition	Interrupt Latch	Vector Address	Priority
Internal/External	(Reset)	Non-maskable	- 41	FFFE	1
Internal	INTSWI (Software interrupt)	Non-maskable	-12	FFFC	2
Internal	INTUNDEF (Executed the undefined instruction interrupt)	Non-maskable		FFFC	2
Internal	INTATRAP (Address trap interrupt)	Non-maskable	IL2	// FFFA	2
Internal	INTWDT (Watchdog timer interrupt)	Non-maskable	IL3	FFF8	2
External	ĪNTŌ	IMF• EF4 = 1, INT0EN = 1)IJ4	FFF6	5
External	INT1	IMF• EF5 = 1	IL5	FFF4	6
Internal	INTTBT	MF• EF6 = 1) IL6	FFF2	7
Internal	INTTC1	IMF• EF7 = 1	IL7	FFF0	8
Internal	INTRXD	IMF• EF8 = 1	IL8	FFEE	9
Internal	INTTXD	IMF• EF9 = 1	IL9	FFEC	10
Internal	INTTC3	IMF• EF10 = 1	IL10	FFEA	11
Internal	INTTC4	IMF• EF11 = 1, IL11ER = 0	IL11	FFE8	12
External	INT3	IMF• EF11 = 1, IL11ER = 1			
Internal	INTADC (7)	IMF• EF12 = 1	IL12	FFE6	13
Internal	INTSEL	IMF• EF13 = 1	IL13	FFE4	14
External	INT4	IMF• EF14 = 1	IL14	FFE2	15
External	ĪNT5	JMF• EF15 = 1	IL15	FFE0	16

- Note 1: The INTSEL register is used to select the interrupt source to be enabled for each multiplexed source level (see 3.3 Interrupt Source Selector (INTSEL)).
- Note 2: To use the address trap interrupt (INTATRAP), clear WDTCR1<ATOUT> to "0" (It is set for the "reset request" after reset is cancelled). For details, see "Address Trap".
- Note 3: To use the watchdog timer interrupt (INTWDT), clear WDTCR1<WDTOUT> to "0" (It is set for the "Reset request" after reset is released). For details, see "Watchdog Timer".

3.1 Interrupt latches (IL15 to IL2)

An interrupt latch is provided for each interrupt source, except for a software interrupt and an executed the undefined instruction interrupt. When interrupt request is generated, the latch is set to "1", and the CPU is requested to accept the interrupt if its interrupt is enabled. The interrupt latch is cleared to "0" immediately after accepting interrupt. All interrupt latches are initialized to "0" during reset.

The interrupt latches are located on address 003CH and 003DH in SFR area. Each latch can be cleared to "0" individually by instruction. However, IL2 and IL3 should not be cleared to "0" by software. For clearing the interrupt latch, load instruction should be used and then IL2 and IL3 should be set to "1". If the read-modify-write instructions such as bit manipulation or operation instructions are used, interrupt request would be cleared inadequately if interrupt is requested while such instructions are executed.

Interrupt latches are not set to "1" by an instruction.

Since interrupt latches can be read, the status for interrupt requests can be monitored by software.

Note: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".

Example 1 :Clears interrupt latches

DI ; IMF \leftarrow 0

LDW (ILL), 1110100000111111B ; IL12, IL10 to IL6 \leftarrow 0/

EI ; IMF \leftarrow 1

Example 2 :Reads interrupt latchess

LD WA, (ILL) ; W \leftarrow ILH, A \leftarrow ILL

Example 3: Tests interrupt latches

TEST (ILL). 7 ; if IL7 = 1, then jump

JR F, SSET

3.2 Interrupt enable register (EIR)

The interrupt enable register (EIR) enables and disables the acceptance of interrupts, except for the non-maskable interrupts (Software interrupt, undefined instruction interrupt, address trap interrupt and watchdog interrupt). Non-maskable interrupt is accepted regardless of the contents of the EIR.

The EIR consists of an interrupt master enable flag (IMF) and the individual interrupt enable flags (EF). These registers are located on address 003AH and 003BH in SFR area, and they can be read and written by an instructions (Including read-modify-write instructions such as bit manipulation or operation instructions).

3.2.1 Interrupt master enable flag (IMF)

The interrupt enable register (IMF) enables and disables the acceptance of the whole maskable interrupt. While IMF = "0", all maskable interrupts are not accepted regardless of the status on each individual interrupt enable flag (EF). By setting IMF to "I", the interrupt becomes acceptable if the individuals are enabled. When an interrupt is accepted, IMF is cleared to "0" after the latest status on IMF is stacked. Thus the maskable interrupts which follow are disabled. By executing return interrupt instruction [RETI/RETN], the stacked data, which was the status before interrupt acceptance, is loaded on IMF again.

The IMF is located on bit0 in EIRL (Address: 003AH in SFR), and can be read and written by an instruction. The IMF is normally set and cleared by [EI] and [DI] instruction respectively. During reset, the IMF is initialized to "0"

3.2.2 Individual interrupt enable flags (EF15 to EF4)

Each of these flags enables and disables the acceptance of its maskable interrupt. Setting the corresponding bit of an individual interrupt enable flag to "1" enables acceptance of its interrupt, and setting the bit to "0" disables acceptance. During reset, all the individual interrupt enable flags (EF15 to EF4) are initialized to "0" and all maskable interrupts are not accepted until they are set to "1".

Note: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".

Example 1 :Enables interrupts individually and sets IMF

DI ; IMF ← 0 LDW (EIRL), 1110100010100000B ; EF15 to EF13, EF11, EF7, EF5 \leftarrow 1 Note: IMF should not be set. ΕI ; IMF ← 1 Example 2: C compiler description example unsigned int _io (3AH) EIRL; /* 3AH shows EIRL address _DI(); EIRL = 10100000B; _EI();

Interrupt Latches

(Initial value: 00000000 000000**)

15 14 13 12 11 10 6 ILH,ILL (003DH, 003CH) IL5 IL15 IL14 IL13 IL12 IL11 IL10 IL9 IL8 IL7 IL6 IL4 IL3 IL2

ILH (003DH) ILL (003CH)

		at RD	at WR	
IL15 to IL2	Interrupt latches	0: No interrupt request	0: Clears the interrupt request	R/W
		1: Interrupt request	1: (Interrupt latch is not set.)	

Note 1: To clear any one of bits IL7 to IL4, be sure to write "1" into IL2 and IL3.

Note 2: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".

Note 3: Do not clear IL with read-modify-write instructions such as bit operations.

Interrupt Enable Registers

(Initial value: 00000000 0000***0)

4 3 15 14 13 12 11 10 2 0 EIRH,EIRL (003BH, 003AH) EF15 EF5 ₿F4 EF14 EF13 EF11 EF10 IMF EF12 (EF9 EF8 EF7 EF6 EIRL (003AH) EIRH (003BH)

EF15 to EF4	Individual-interrupt enable flag (Specified for each bit)	Disables the acceptance of each maskable interrupt. Enables the acceptance of each maskable interrupt.	R/W
IMF	Interrupt master enable flag	Disables the acceptance of all maskable interrupts Enables the acceptance of all maskable interrupts	1000

Note 1: *: Don't care

Note 2: Do not set IMF and the interrupt enable flag (EF15 to EF4) to "1" at the same time.

Note 3: In main program, before manipulating the interrupt enable flag (EF) or the interrupt latch (IL), be sure to clear IMF to "0" (Disable interrupt by DI instruction). Then set IMF newly again as required after operating on the EF or IL (Enable interrupt by EI instruction)

In interrupt service routine, because the IMF becomes "0" automatically, clearing IMF need not execute normally on interrupt service routine. However, if using multiple interrupt on interrupt service routine, manipulating EF or IL should be executed before setting IMF="1".


3.3 Interrupt Source Selector (INTSEL)

Each interrupt source that shares the interrupt source level with another interrupt source is allowed to enable the interrupt latch only when it is selected in the INTSEL register. The interrupt controller does not hold interrupt requests corresponding to interrupt sources that are not selected in the INTSEL register. Therefore, the INTSEL register must be set appropriately before interrupt requests are generated.

The following interrupt sources share their interrupt source level; the source is selected onnthe register INTSEL.

1. INTTC4 and INT3 share the interrupt source level whose priority is 12.

Interrupt source selector



Note: Always set "0" to bit 5 of INTSEL register.


3.4 Interrupt Sequence

An interrupt request, which raised interrupt latch, is held, until interrupt is accepted or interrupt latch is cleared to "0" by resetting or an instruction. Interrupt acceptance sequence requires 8 machine cycles (2 µs @16 MHz) after the completion of the current instruction. The interrupt service task terminates upon execution of an interrupt return instruction [RETI] (for maskable interrupts) or [RETN] (for non-maskable interrupts). Figure 3-1 shows the timing chart of interrupt acceptance processing.

3.4.1 Interrupt acceptance processing is packaged as follows.

- a. The interrupt master enable flag (IMF) is cleared to "0" in order to disable the acceptance of any following interrupt.
- b. The interrupt latch (IL) for the interrupt source accepted is cleared to "0".
- c. The contents of the program counter (PC) and the program status word, including the interrupt master enable flag (IMF), are saved (Pushed) on the stack in sequence of PSW + IMF, PCH, PCL. Meanwhile, the stack pointer (SP) is decremented by 3.
- d. The entry address (Interrupt vector) of the corresponding interrupt service program, loaded on the vector table, is transferred to the program counter.
- e. The instruction stored at the entry address of the interrupt service program is executed.

Note: When the contents of PSW are saved on the stack, the contents of IMF are also saved.

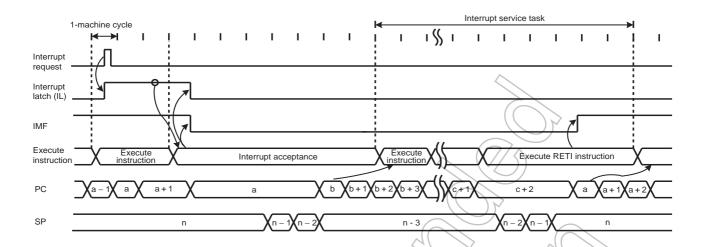


Note 1: a: Return address entry address, b: Entry address, c: Address which RETI instruction is stored

Note 2: On condition that interrupt is enabled, it takes 38/fc [s] or 38/fs [s] at maximum (If the interrupt latch is set at the first machine cycle on 10 cycle instruction) to start interrupt acceptance processing since its interrupt latch is set.

Figure 3-1 Timing Chart of Interrupt Acceptance/Return Interrupt Instruction

Example: Correspondence between vector table address for INTTBT and the entry address of the interrupt service program

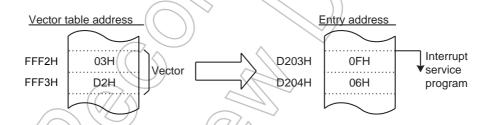

A maskable interrupt is not accepted until the IMF is set to "1" even if the maskable interrupt higher than the level of current servicing interrupt is requested.

In order to utilize nested interrupt service, the IMF is set to "1" in the interrupt service program. In this case, acceptable interrupt sources are selectively enabled by the individual interrupt enable flags.


To avoid overloaded nesting, clear the individual interrupt enable flag whose interrupt is currently serviced, before setting IMF to "1". As for non-maskable interrupt, keep interrupt service shorten compared with length between interrupt requests; otherwise the status cannot be recovered as non-maskable interrupt would simply nested.


3.4.2 Saving/restoring general-purpose registers

During interrupt acceptance processing, the program counter (PC) and the program status word (PSW, includes IMF) are automatically saved on the stack, but the accumulator and others are not. These registers are saved by software if necessary. When multiple interrupt services are nested, it is also necessary to avoid using the same data memory area for saving registers. The following methods are used to save/restore the general-purpose registers.

3.4.2.1 Using PUSH and POP instructions


If only a specific register is saved or interrupts of the same source are nested, general-purpose registers can be saved/restored using the PUSH/POP instructions.



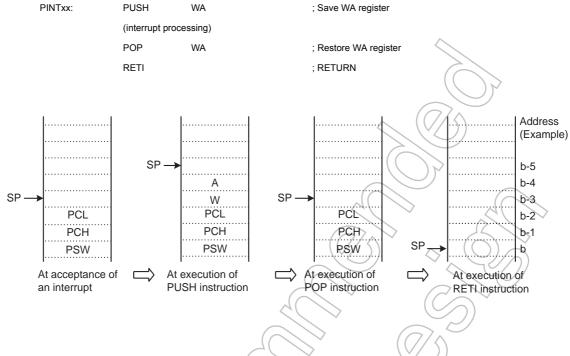

3.4.2.2 Using data transfer instructions

To save only a specific register without nested interrupts, data transfer instructions are available.

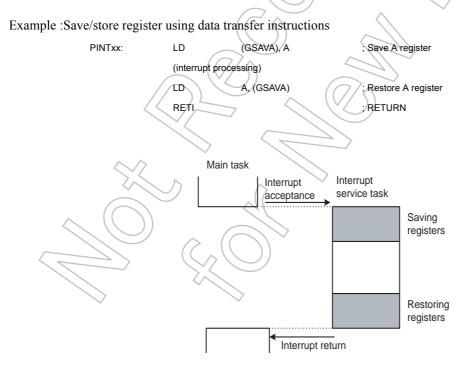

Saving/Restoring general-purpose registers using PUSH/POP data transfer instruction

Figure 3-2 Saving/Restoring General-purpose Registers under Interrupt Processing

3.4.3 Interrupt return

Interrupt return instructions [RETI]/[RETN] perform as follows.

[RETI]/[RETN] Interrupt Return

 Program counter (PC) and program status word (PSW, includes IMF) are restored from the stack.
 Stack pointer (SP) is incremented by 3.

As for address trap interrupt (INTATRAP), it is required to alter stacked data for program counter (PC) to restarting address, during interrupt service program.

Note: If [RETN] is executed with the above data unaltered, the program returns to the address trap area and INTATRAP occurs again. When interrupt acceptance processing has completed, stacked data for PCL and PCH are located on address (SP + 1) and (SP + 2) respectively.

Example 1: Returning from address trap interrupt (INTATRAP) service program

PINTxx: POP WA ; Recover SP by 2

LD WA, Return Address

PUSH WA ; Alter stacked data

(interrupt processing)

RETN ; RETURN

Example 2: Restarting without returning interrupt

(In this case, PSW (Includes IMF) before interrupt acceptance is discarded.)

PINTxx: INC SP ; Recover SP by 3
INC SP ;
INC SP ;
(interrupt processing)
LD EIRL, data ; Set IMF to "1" or clear it to "0"
JP Restart Address ; Jump into restarting address

Interrupt requests are sampled during the final cycle of the instruction being executed. Thus, the next interrupt can be accepted immediately after the interrupt return instruction is executed.

Note 1: It is recommended that stack pointer be return to rate before INTATRAP (Increment 3 times), if return interrupt instruction [RETN] is not utilized during interrupt service program under INTATRAP (such as Example

Note 2: When the interrupt processing time is longer than the interrupt request generation time, the interrupt service task is performed but not the main task.

3.5 Software Interrupt (INTSW)

Executing the SWI instruction generates a software interrupt and immediately starts interrupt processing (INTSW is highest prioritized interrupt).

Use the SWI instruction only for detection of the address error or for debugging.

3.5.1 Address error detection

FFH is read if for some cause such as noise the CPU attempts to fetch an instruction from a non-existent memory address during single chip mode. Code FFH is the SWI instruction, so a software interrupt is generated and an address error is detected. The address error detection range can be further expanded by writing FFH to unused areas of the program memory. Address trap reset is generated in case that an instruction is fetched from RAM, DBR or SFR areas.

3.5.2 Debugging

Debugging efficiency can be increased by placing the SWI instruction at the software break point setting address.

3.6 Undefined Instruction Interrupt (INTUNDEF)

Taking code which is not defined as authorized instruction for instruction causes INTUNDEF. INTUNDEF is generated when the CPU fetches such a code and tries to execute it. INTUNDEF is accepted even if non-maskable interrupt is in process. Contemporary process is broken and INTUNDEF interrupt process starts, soon after it is requested.

Note: The undefined instruction interrupt (INTUNDEF) forces CPU to jump into vector address, as software interrupt (SWI) does.

3.7 Address Trap Interrupt (INTATRAP)

Fetching instruction from unauthorized area for instructions (Address trapped area) causes reset output or address trap interrupt (INTATRAP). INTATRAP is accepted even if non-maskable interrupt is in process. Contemporary process is broken and INTATRAP interrupt process starts, soon after it is requested.

Note: The operating mode under address trapped, whether to be reset output or interrupt processing, is selected on watchdog timer control register (WDTCR).

3.8 External Interrupts

The TMP86F409NG has 5 external interrupt inputs. These inputs are equipped with digital noise reject circuits (Pulse inputs of less than a certain time are eliminated as noise).

Edge selection is also possible with INT1 to INT4. The INT0/P10 pin can be configured as either an external interrupt input pin or an input/output port, and is configured as an input port during reset.

Edge selection, noise reject control and $\overline{\text{INT0}}/\text{P10}$ pin function selection are performed by the external interrupt control register (EINTCR).



Source	Pin	Enable Conditions	Release Edge (level)	Digital Noise Reject
INT0	ĪNT0	IMF • EF4 • INT0EN=1	Falling edge	Pulses of less than 2/fc [s] are eliminated as noise. Pulses of 7/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.
INT1	INT1	IMF • EF5 = 1	Falling edge or Rising edge	Pulses of less than 15/fc or 63/fc [s] are eliminated as noise. Pulses of 49/fc or 193/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.
INT3	INT3	IMF • EF11 = 1 and IL11ER	Falling edge, Rising edge, Falling and Rising edge or H level	Pulses of less than 7/fc [s] are eliminated as noise. Pulses of 25/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.
INT4	INT4	IMF • EF14 = 1	Falling edge, Rising edge, Falling and Rising edge or H.level	Pulses of less than 7/fc [s] are eliminated as noise. Pulses of 25/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.
INT5	īNT5	IMF • EF15 = 1	Falling edge	Pulses of less than 2/fc [s] are eliminated as noise. Pulses of 7/fc [s] or more are considered to be signals. In the SLOW or the SLEEP mode, pulses of less than 1/fs [s] are eliminated as noise. Pulses of 3.5/fs [s] or more are considered to be signals.

Note 1: In NORMAL1/2 or IDLE1/2 mode, if a signal with no noise is input on an external interrupt pin, it takes a maximum of "signal establishment time + 6/fs[s]" from the input signal's edge to set the interrupt latch.

Note 2: When INT0EN = "0", IL4 is not set even if a falling edge is detected on the INT0 pin input.

Note 3: When a pin with more than one function is used as an output and a change occurs in data or input/output status, an interrupt request signal is generated in a pseudo manner. In this case, it is necessary to perform appropriate processing such as disabling the interrupt enable flag.

External Interrupt Control Register

EINTCR	7	6	5	4	3	2	1	0	
(0037H)	INT1NC	INT0EN	INT	BES	INT	4ES	INT1ES		(Initial value: 0000 000*)

INT1NC	Noise reject time select	O: Pulses of less than 63/fc [s] are eliminated as noise 1: Pulses of less than 15/fc [s] are eliminated as noise	R/W
INT0EN	P10/INT0 pin configuration	0: P10 input/output port 1: \overline{\text{INT0}} \text{ pin (Port P10 should be set to an input mode)}	R/W
INT4 ES	INT4 edge select	00: Rising edge 01: Falling edge 10: Rising edge and Falling edge 11: "H" level	R/W
INT3 ES	INT3 edge select	00: Rising edge 01: Falling edge 10: Rising edge and Falling edge 11: "H" level	R/W
INT1 ES	INT1 edge select	0: Rising edge 1: Falling edge	R/W

- Note 1: fc: High-frequency clock [Hz], *: Don't care
- Note 2: When the system clock frequency is switched between high and low or when the external interrupt control register (EINTCR) is overwritten, the noise canceller may not operate normally. It is recommended that external interrupts are disabled using the interrupt enable register (EIR).
- Note 3: The maximum time from modifying INT1NC until a noise reject time is changed is 26/fc.
- Note 4: In case RESET pin is released while the state of INT3 pin keeps "H" level, the external interrupt 3 request is not generated even if the INT3 edge select is specified as "H" level. The rising edge is needed after RESET pin is released.
- Note 5: In case RESET pin is released while the state of INT4 pin keeps "H" level, the external interrupt 4 request is not generated even if the INT4 edge select is specified as "H" level. The rising edge is needed after RESET pin is released.





TOSHIBA TMP86F409NG

4. Special Function Register (SFR)

The TMP86F409NG adopts the memory mapped I/O system, and all peripheral control and data transfers are performed through the special function register (SFR) or the data buffer register (DBR). The SFR is mapped on address 0000H to 003FH, DBR is mapped on address 0F80H to 0FFFH.

This chapter shows the arrangement of the special function register (SFR) and data buffer register (DBR) for TMP86F409NG.

4.1 SFR

Address	Read	1	Write
0000H		Po	DR \
0001H		P1	DR
0002H		(/P2	DR ()
0003H		P3	DR OR
0004H		Rese	erved
0005H		Rese	erved
0006H		Rese	erved
0007H		Rese	erved (7/
0008H		Rese	erved
0009H		/P1	CR
000AH		P3	CR
000BH		POOL	JTCR
000CH	POPRD	^	-
000DH	P2PRD		-
000EH		ADC	CR1
000FH		ADC	CR2
0010H		TC1E	DRAL
0011H) TC1E)RAH
0012H		TC1E	DRBL
0013H		TC1E	DRBH
0014H		TC1	ICR
0015H		Rese	erved
0016H		Rese	erved
0017H		Rese	erved
0018H		Rese	erved
0019H ()		Rese	erved
001AH		TC	BCR
001BH		TC ²	ICR
001CH	•	TTR	EG3
001DH		TTR	EG4
001EH			REG3
001FH		PWR	REG4
0020H	ADCDR2		-
0021H	ADCDR1		-
0022H		Rese	erved
0023H		Rese	erved
0024H		Rese	erved
0025H	UARTSR		UARTCR1


Address	Read	Write
0026H	-	UARTCR2
0027H	RDBUF	TDBUF
0028H	SESR	-
0029H	SE	EDR
002AH	SE	ECR
002BH	Rese	erved
002CH	Rese	erved
002DH	Rese	erved
002EH	Rese	erved
002FH	Resc	erved
0030H	Rese	erved
0031H	-	STOPCR
0032H	Resi	erved
0033H	Rese	erved
0034H	- (0)	WDTCR1
0035H	- (/	WDTCR2
0036H	TB	TCR
0037H	EÍN	TCR
0038H	SYS	SCR1
0039H	SYS	SCR2
003AH	EI	RL (//)
003BH	A E	RH
003CH		LL \
003DH	()	H
003EH	INT	SEL
003FH	PS	SW

Note 1: Do not access reserved areas by the program.

Note 2: -; Cannot be accessed.

Note 3: Write-only registers and interrupt latches cannot use the read-modify-write instructions (Bit manipulation instructions such as SET, CLR, etc. and logical operation instructions such as AND, OR, etc.).

4.2 DBR

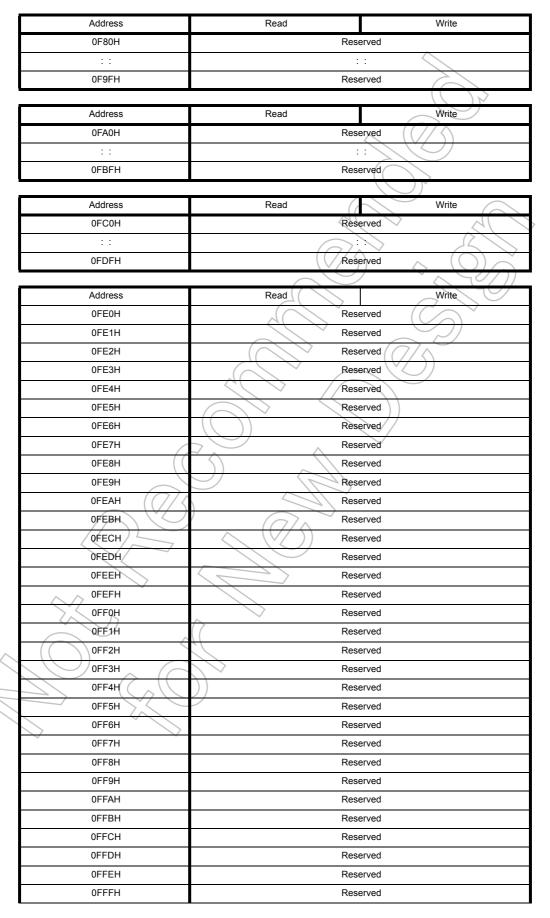

Note 1: Do not access reserved areas by the program.

Note 2: -; Cannot be accessed.

Note 3: Write-only registers and interrupt latches cannot use the read-modify-write instructions (Bit manipulation instructions such as SET, CLR, etc. and logical operation instructions such as AND, OR, etc.).



5. I/O Ports


The TMP86F409NG have 4 parallel input/output ports as follows.

	Primary Function	Secondary Functions
Port P0	8-bit I/O port	External interrupt input, Timer/Counter input/output, serial interface input/output, serial PROM mode control input/output.
Port P1	7-bit I/O port	External interrupt input and divider output
Port P2	3-bit I/O port	External interrupt input and STOP mode release signal input
Port P3	8-bit I/O port	Analog input, STOP mode release signal input and Timer/Counter input/output

Each output port contains a latch, which holds the output data. All input ports do not have latches, so the external input data should be externally held until the input data is read from outside or reading should be performed several timer before processing. Figure 5-1 shows input/output timing examples.

External data is read from an I/O port in the S1 state of the read cycle during execution of the read instruction. This timing cannot be recognized from outside, so that transient input such as chattering must be processed by the program.

Output data changes in the S2 state of the write cycle during execution of the instruction which writes to an I/O port.

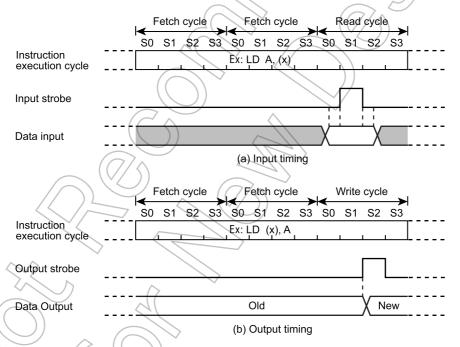

Note: The positions of the read and write cycles may vary, depending on the instruction.

Figure 5-1 Input/Output Timing (Example)

5.1 P0 (P07 to P00) Port (High Current)

The P0 port is an 8-bit input/output port shared with external interrupt input, SEI serial interface input/output, and UART and 16-bit timer counter input/output. When using this port as an input port or for external interrupt input, SEI serial interface input/output, or UART input/output, set the output latch to 1. When using this port as an output port, the output latch data (P0DR) is output to the P0 port.


When reset, the output latch (P0DR) and the push-pull control register (P0OUTCR) are initialized to 1 and 0, respectively.

The P0 port allows its output circuit to be selected between N-channel open-drain output or push-pull output by the P0OUTCR register.

When using this port as an input port, set the POOUTCR register's corresponding bit to 0 after setting the PODR to

The P0 port has independent data input registers. To inspect the output latch status, read the P0DR register. To inspect the pin status, read the P0PRD register.

In the serial PROM mode, P02 pin used as a BOOT/RXD0 pin, P03 pin used as a TXD0 pin. For details, see "Serial PROM Mode Setting". In the MCU mode, P01 pin used as a RXD pin, P00 pin used as a TXD pin.

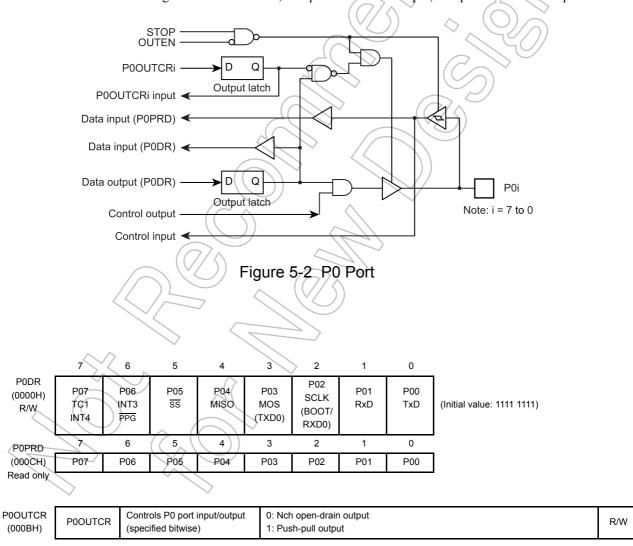

TOSHIBA


TMP86F409NG

5.2 P1 (P16 to P10) Port

The P1 port is a 7-bit input/output port that can be specified for input or output bitwise. The P1 Port Input/output Control Register (P1CR) is used to specify this port for input or output. When reset, the P1CR register is initialized to 0, with the P1 port set for input mode. The P1 port output latch is initialized to 0.

The P1 port is shared with external interrupt input and divider output. When using the P1 port as function pin, set its input pins for input mode. For the output pins, first set their output latches to 1 before setting the pins for output mode.


Note that the P11 pin is an external interrupt input. (When used as an output port, its interrupt latch is set at the rising or falling edge.) The P10 pin can be used as an input/output port or an external interrupt input by selecting its function with the External Interrupt Control Register (INT0EN). When reset, the P10 pin is chosen to be an input port

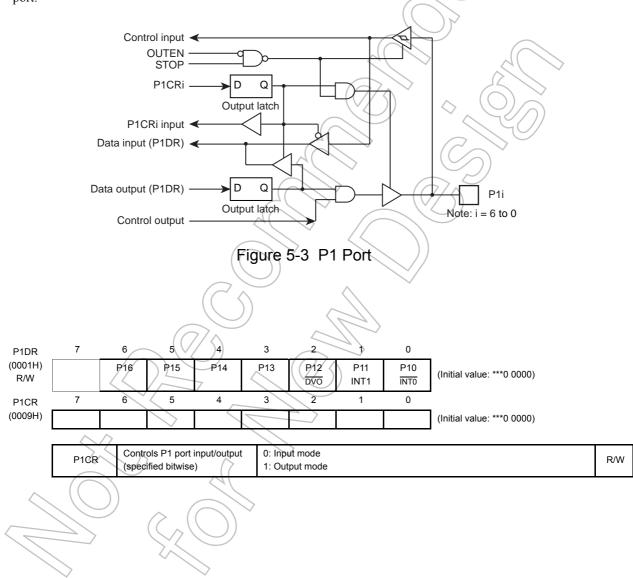

5.3 P2 (P22 to P20) Port

The P2 port is a 3-bit input/output port shared with external interrupt input, STOP canceling signal input, and low-frequency resonator connecting pin. When using this port as an input port or function pin, set the output latch to 1. The output latch is initialized to 1 when reset. When operating in dual-clock mode, connect a low-frequency resonator (32.768 kHz) to the P21 (XTIN) and P22 (XTOUT) pins. When operating in single-clock mode, the P21 and P22 pins can be used as ordinary input/output ports. We recommend using the P20 pin for external interrupt input or STOP canceling signal input or as an input port. (When used as an output port, the interrupt latch is set by a falling edge.)

The P2 port has independent data input registers. To inspect the output latch status, read the P2DR register. To inspect the pin status, read the P2PRD register. When the P2DR or P2PRD read instruction is executed for the P2 port, the values read from bits 7 to 3 are indeterminate.

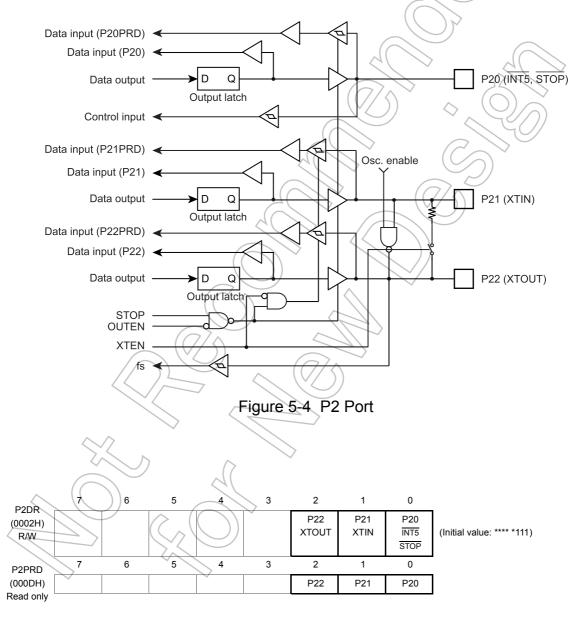

Note: The P20 pin is shared with the STOP pin, so that when in STOP mode, its output goes to a High-Z state regardless of the OUTEN status.

TOSHIBA TMP86F409NG

5.4 P3 (P37 to P30) Port

The P3 port is an 8-bit input/output port that can be specified for input or output bitwise, and is shared with analog input, key-on wakeup input, and 8-bit timer counter input/output. The P3 Port Input/output Control Register (P3CR) and ADCCR1<AINDS> are used to specify this port for input or output. When reset, the P3CR register and P3DR are cleared to 0, while AINDS is set to 1, so that P37 to P30 function as input port.

When using the P3 port as an input port, set AINDS = 1 while at the same time setting the P3CR register to 0.

When using the P3 port for analog input, set AINDS = 0 and the pins selected with ADCCR1<SAIN > are set for analog input no matter what values are set in the P3DR and P3CR. When using the P3 port as an output port, set the P3CR to 1 and the pin associated with that bit is set for output mode, so that P3DR (output latch data) is output from that pin.

When an input instruction is executed for the P3 port while using the AD converter, the pins selected for analog input read in the P3DR value into the internal circuit and those not selected for analog input read in a 1 or 0 according to the logic level on each pin. Even when an output instruction is executed, no latch data are forwarded to the pins selected for analog input.

Any pins of the P3 port which are not used for analog input can be used as input/output ports. During AD conversion, however, avoid executing output instructions on these ports, because this is necessary to maintain the accuracy of conversion. Also, during AD conversion, take care not to enter a rapidly changing signal to any port adjacent to analog input.


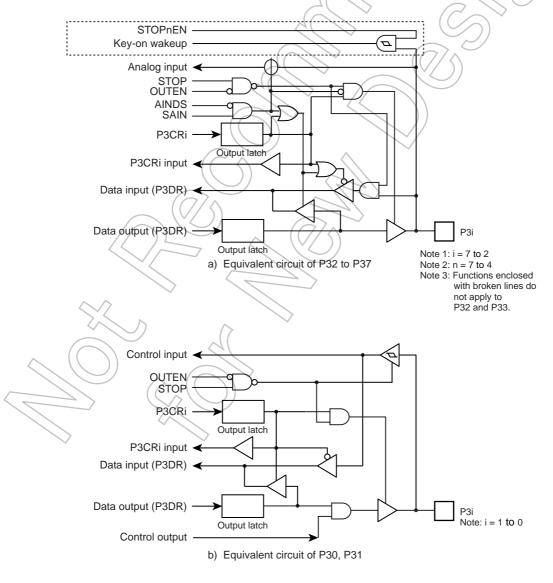


Figure 5-5 P3 Port

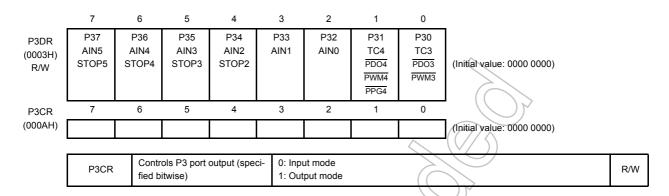

<P3 Port Input/Output>

	Analog Input Mode	Input Mode	Output Mode
P3CR		0	1 /2
AINDS	0	$(\langle // $	1 (())
P3DR	0		* \\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\

- Note 1: When using the port for key-on wakeup input (STOP2 to 5), set the P3CR register's corresponding bits to 0.
- Note 2: P30 and P31 are hysteresis inputs. P34 to P37 become hysteresis inputs only during key-on wakeup.

Note 3: Input status on ports set for input mode are read in into the internal circuit. Therefore, when using the ports in a mixture of input and output modes, the contents of the output latches for the ports that are set for input mode may be rewritten by



TOSHIBA TMP86F409NG

6. Time Base Timer (TBT)

The time base timer generates time base for key scanning, dynamic displaying, etc. It also provides a time base timer interrupt (INTTBT).

6.1 Time Base Timer

6.1.1 Configuration


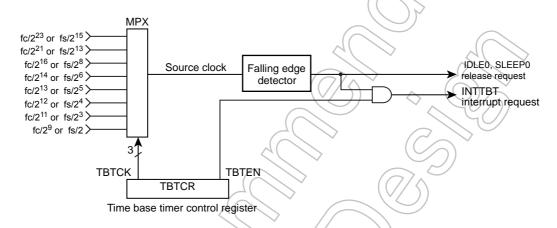


Figure 6-1 Time Base Timer configuration

6.1.2 Control

Time Base Timer is controlled by Time Base Timer control register (TBTCR).

Time Base Timer Control Register



<	TBTEN	Time Base Timer enable / disable	0: Disab 1: Enab				
				NORMAL1/2,	IDLE1/2 Mode	SLOW1/2	
				DV7CK = 0	DV7CK = 1	SLEEP1/2 Mode	
			000	fc/2 ²³	fs/2 ¹⁵	fs/2 ¹⁵	
	*		001	fc/2 ²¹	fs/2 ¹³	fs/2 ¹³	
	ТВТСК	Time Base Timer interrupt	010	fc/2 ¹⁶	fs/2 ⁸	-	R/W
	IBIOR	Frequency select : [Hz]	011	fc/2 ¹⁴	fs/2 ⁶	-	1000
			100	fc/2 ¹³	fs/2 ⁵	-	
			101	fc/2 ¹²	fs/2 ⁴	-	
			110	fc/2 ¹¹	fs/2 ³	-	
			111	fc/2 ⁹	fs/2	_	

Note 1: fc; High-frequency clock [Hz], fs; Low-frequency clock [Hz], *; Don't care

Note 2: The interrupt frequency (TBTCK) must be selected with the time base timer disabled (TBTEN="0"). (The interrupt frequency must not be changed with the disable from the enable state.) Both frequency selection and enabling can be performed simultaneously.

Example :Set the time base timer frequency to fc/2¹⁶ [Hz] and enable an INTTBT interrupt.

LD (TBTCR), 00000010B ; TBTCK \leftarrow LD (TBTCR), 00001010B ; TBTEN \leftarrow DI ; IMF \leftarrow SET (EIRL). 6

Table 6-1 Time Base Timer Interrupt Frequency (Example: (fc = 16.0 MHz, fs = 32.768 kHz)

ТВТСК	Time Base Timer Interrupt Frequency [Hz]							
IBICK	NORMAL1/2, IDLE1/2 Mode	NORMAL1/2, IDLE1/2 Mode	SLOW1/2, SLEEP1/2 Mode					
	DV7CK = 0	DV7CK=1						
000	1.91	1	\$ (D)					
001	7.63	4	4 50					
010	244.14	128						
011	976.56	512						
100	1953.13	1024	(7/4) -					
101	3906.25	2048	-					
110	7812.5	4096	_					
111	31250	16384	_					

6.1.3 Function

An INTTBT (Time Base Timer Interrupt) is generated on the first falling edge of source clock (The divider output of the timing generato which is selected by TBTCK.) after time base timer has been enabled.

The divider is not cleared by the program; therefore, only the first interrupt may be generated ahead of the set interrupt period (Figure 6-2).

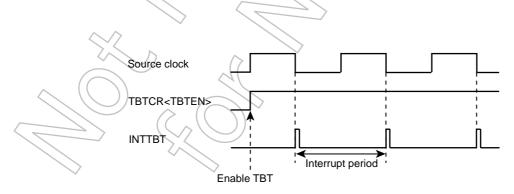


Figure 6-2 Time Base Timer Interrupt

6.2 Divider Output (DVO)

Approximately 50% duty pulse can be output using the divider output circuit, which is useful for piezoelectric buzzer drive. Divider output is from \overline{DVO} pin.


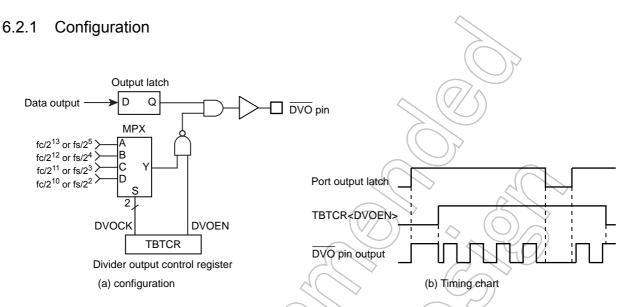


Figure 6-3 Divider Output

6.2.2 Control

The Divider Output is controlled by the Time Base Timer Control Register.

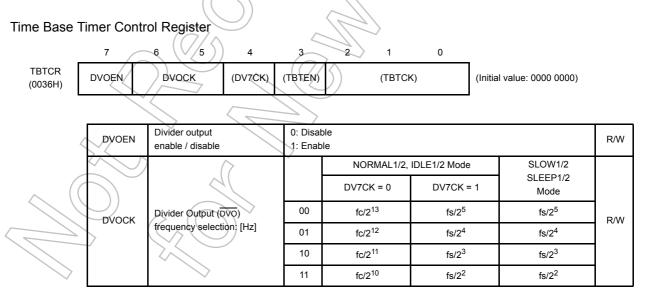

Note: Selection of divider output frequency (DVOCK) must be made while divider output is disabled (DVOEN="0"). Also, in other words, when changing the state of the divider output frequency from enabled (DVOEN="1") to disable(DVOEN="0"), do not change the setting of the divider output frequency.

Example :1.95 kHz pulse output (fc = 16.0 MHz)

LD (TBTCR), 00000000B ; DVOCK \leftarrow "00" LD (TBTCR), 10000000B ; DVOEN \leftarrow "1"

Table 6-2 Divider Output Frequency (Example: fc = 16.0 MHz, fs = 32.768 kHz)

	D	ivider Output Frequency [F	łz]
DVOCK	NORMAL1/2,	SLOW1/2, SLEEP1/2	
	DV7CK = 0	DV7CK = 1	Mode
00	1.953 k	1.024 k	1.024 k
01	3.906 k	2.048 k	2.048 k
10	7.813 k	4.096 k	4.096 k
11	15.625 k	8.192 k	8.192 k

TOSHIBA TMP86F409NG


7. Watchdog Timer (WDT)

The watchdog timer is a fail-safe system to detect rapidly the CPU malfunctions such as endless loops due to spurious noises or the deadlock conditions, and return the CPU to a system recovery routine.

The watchdog timer signal for detecting malfunctions can be programmed only once as "reset request" or "interrupt request". Upon the reset release, this signal is initialized to "reset request".

When the watchdog timer is not used to detect malfunctions, it can be used as the timer to provide a periodic interrupt.

Note: Care must be taken in system design since the watchdog timer functions are not be operated completely due to effect of disturbing noise.

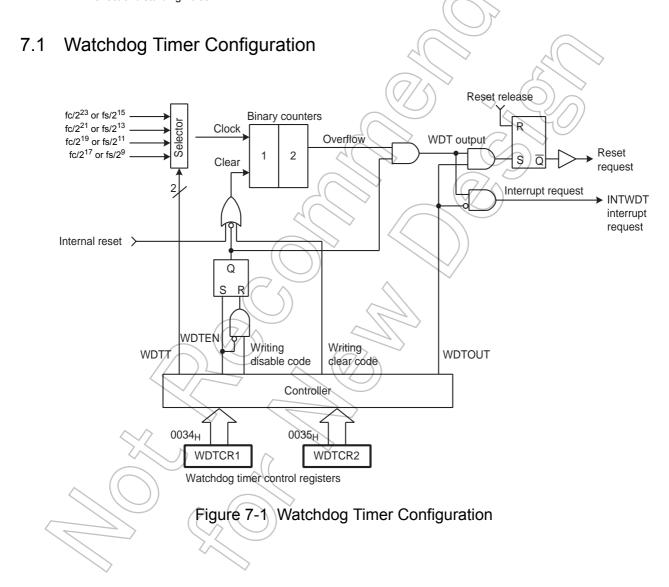

7.2 Watchdog Timer Control

The watchdog timer is controlled by the watchdog timer control registers (WDTCR1 and WDTCR2). The watchdog timer is automatically enabled after the reset release.

7.2.1 Malfunction Detection Methods Using the Watchdog Timer

The CPU malfunction is detected, as shown below.


- 1. Set the detection time, select the output, and clear the binary counter.
- 2. Clear the binary counter repeatedly within the specified detection time.

If the CPU malfunctions such as endless loops or the deadlock conditions occur for some reason, the watchdog timer output is activated by the binary-counter overflow unless the binary counters are cleared. When WDTCR1<WDTOUT> is set to "1" at this time, the reset request is generated and then internal hardware is initialized. When WDTCR1<WDTOUT> is set to "0", a watchdog timer interrupt (INTWDT) is generated.

The watchdog timer temporarily stops counting in the STOP mode including the warm-up or IDLE/SLEEP mode, and automatically restarts (continues counting) when the STOP/IDLE/SLEEP mode is inactivated.

Note: The watchdog timer consists of an internal divider and a two-stage binary counter. When the clear code 4EH is written, only the binary counter is cleared, but not the internal divider. The minimum binary-counter overflow time, that depends on the timing at which the clear code (4EH) is written to the WDTCR2 register, may be 3/4 of the time set in WDTCR1<WDTT>. Therefore, write the clear code using a cycle shorter than 3/4 of the time set to WDTCR1<WDTT>.

Example :Setting the watchdog timer detection time to 2²¹/fc [s], and resetting the CPU malfunction detection

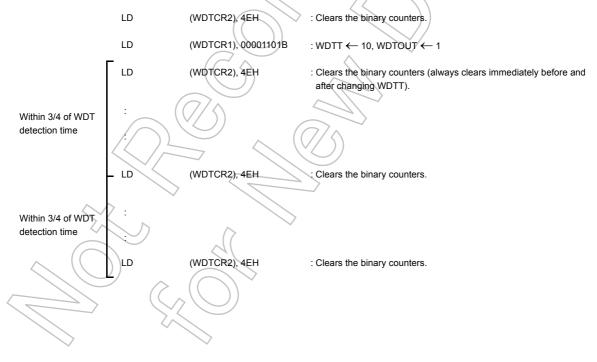

Watchdog Timer Control Register 1

WDTCR1	7	6	5	4	3	2	1	0	
(0034H)			(ATAS)	(ATOUT)	WDTEN	WD	ΓT	WDTOUT	(Initial value: **11 1001)

WDTEN	Watchdog timer enable/disable		0: Disable (Writing the disable code to WDTCR2 is required.) 1: Enable				
	Watchdog timer detection time [s]		NORMAL1/2 mode SLOW1/2				
			DV7CK = 0	DV7CK = 1	mode		
		00	2 ²⁵ /fc	2 ¹⁷ /fs	2 ¹⁷ /fs	Write	
WDTT		01	2 ²³ /fc	2 ¹⁵ /fs	2 ¹⁵ fs	only	
		10	2 ²¹ fc	2 ¹³ /fs	2 ¹³ fs		
		11	2 ¹⁹ /fc	2 ¹¹ /fs	2 ¹¹ /fs		
WDTOUT	Watchdog timer output select	0: Interrupt request 1: Reset request					

- Note 1: After clearing WDTOUT to "0", the program cannot set it to "1".
- Note 2: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz], f: Døn't care
- Note 3: WDTCR1 is a write-only register and must not be used with any of read-modify-write instructions. If WDTCR1 is read, a don't care is read.
- Note 4: To activate the STOP mode, disable the watchdog timer or clear the counter immediately before entering the STOP mode.

 After clearing the counter, clear the counter again immediately after the STOP mode is inactivated.
- Note 5: To clear WDTEN, set the register in accordance with the procedures shown in "1.2.3 Watchdog Timer Disable".

Watchdog Timer Control Register 2

WDTCR2	7	6	5	4	3	2	(1)	0	_	
(0035H)								\]]	(Initial value: **** ****)	
	·		·					~//	•	
					4EH: C	lear the	watchdog timer	binary co	ounter (Clear code)	
	WDTCR	Write		((\(\)	B1H: D	isable th	e watchdog tim	ner (Disab	le code)	Write
	WDTCK	Watch	ndog timer co	ontrol code	/ D2H: E	nable as	signing addres	s trap are	a	only
				\rightarrow	Others:	Invalid				

Note 1: The disable code is valid only when WDTCR1<WDTEN> = 0.

Note 2: *: Don't care

Note 3: The binary counter of the watchdog timer must not be cleared by the interrupt task.

Note 4: Write the clear code 4EH using a cycle shorter than 3/4 of the time set in WDTCR1<WDTT>.

7.2.2 Watchdog Timer Enable

Setting WDTCR1<WDTEN> to "1" enables the watchdog timer. Since WDTCR1<WDTEN> is initialized to "1" during reset, the watchdog timer is enabled automatically after the reset release.

7.2.3 Watchdog Timer Disable

To disable the watchdog timer, set the register in accordance with the following procedures. Setting the register in other procedures causes a malfunction of the microcontroller.

- 1. Set the interrupt master flag (IMF) to "0".
- 2. Set WDTCR2 to the clear code (4EH).
- 3. Set WDTCR1<WDTEN> to "0".
- 4. Set WDTCR2 to the disable code (B1H).

Note: While the watchdog timer is disabled, the binary counters of the watchdog timer are cleared.

Example :Disabling the watchdog timer

DI : IMF ← 0

LD (WDTCR2), 04EH : Clears the binary coutner

LDW (WDTCR1), 0B101H : WDTEN ← 0, WDTCR2 ← Disable code

Table 7-1 Watchdog Timer Detection Time (Example: fc = 16.0 MHz, fs = 32.768 kHz)

	Watchdog Timer Detection Time[s]								
WDTT	NORMAL	SLOW							
	DV7CK = 0	mode							
00	2.097	4	4						
01	524.288 m	1	1						
10	131.072 m	250 m	250 m						
11	32.768 m	62.5 m	62.5 m						

7.2.4 Watchdog Timer Interrupt (INTWDT)

When WDTCR1<WDTOUT> is cleared to "0", a watchdog timer interrupt request (INTWDT) is generated by the binary-counter overflow.

A watchdog timer interrupt is the non-maskable interrupt which can be accepted regardless of the interrupt master flag (IMF).

When a watchdog timer interrupt is generated while the other interrupt including a watchdog timer interrupt is already accepted, the new watchdog timer interrupt is processed immediately and the previous interrupt is held pending. Therefore, if watchdog timer interrupts are generated continuously without execution of the RETN instruction, too many levels of nesting may cause a malfunction of the microcontroller.

To generate a watchdog timer interrupt, set the stack pointer before setting WDTCR1<WDTOUT>.

Example :Setting watchdog timer interrupt

LD SP, 023FH : Sets the stack pointer

LD (WDTCR1), 00001000B : WDTOUT ← 0

7.2.5 Watchdog Timer Reset

When a binary-counter overflow occurs while WDTCR1<WDTOUT> is set to "1", a watchdog timer reset request is generated. When a watchdog timer reset request is generated, the internal hardware is reset. The reset time is maximum 24/fc [s] (1.5 μ s @ fc = 16.0 MHz).

Note: When a watchdog timer reset is generated in the SLOW1 mode, the reset time is maximum 24/fc (high-frequency clock) since the high-frequency clock oscillator is restarted. However, when crystals have inaccuracies upon start of the high-frequency clock oscillator, the reset time should be considered as an approximate value because it has slight errors.


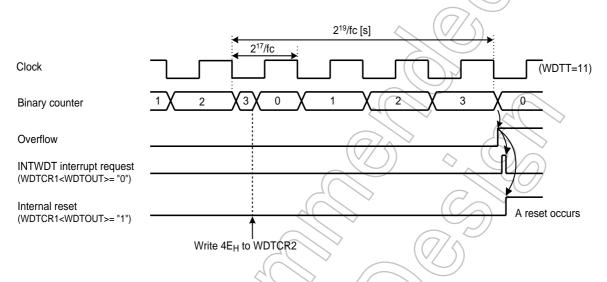


Figure 7-2 Watchdog Timer Interrupt



7.3 Address Trap

The Watchdog Timer Control Register 1 and 2 share the addresses with the control registers to generate address traps.

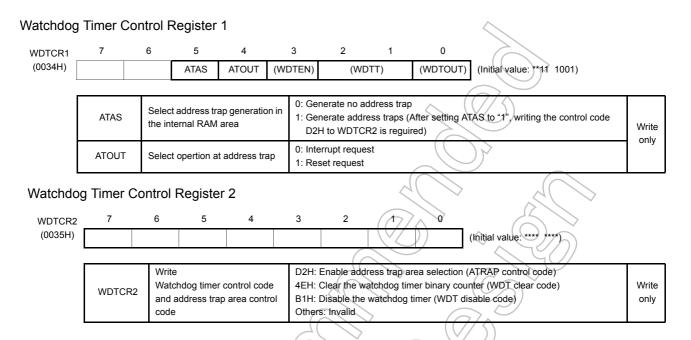

7.3.1 Selection of Address Trap in Internal RAM (ATAS)

WDTCR1<ATAS> specifies whether or not to generate address traps in the internal RAM area. To execute an instruction in the internal RAM area, clear WDTCR1<ATAS> to "0". To enable the WDTCR1<ATAS> setting, set WDTCR1<ATAS> and then write D2H to WDTCR2.

Executing an instruction in the SFR or DBR area generates an address trap unconditionally regardless of the setting in WDTCR1<ATAS>.

7.3.2 Selection of Operation at Address Trap (ATOUT)

When an address trap is generated, either the interrupt request or the reset request can be selected by WDTCR1<ATOUT>.

7.3.3 Address Trap Interrupt (INTATRAP)

While WDTCR1<ATOUT> is "0", if the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (while WDTCR1<ATAS> is "1"), DBR or the SFR area, address trap interrupt (INTATRAP) will be generated.

An address trap interrupt is a non-maskable interrupt which can be accepted regardless of the interrupt master flag (IMF).

When an address trap interrupt is generated while the other interrupt including a watchdog timer interrupt is already accepted, the new address trap is processed immediately and the previous interrupt is held pending. Therefore, if address trap interrupts are generated continuously without execution of the RETN instruction, too many levels of nesting may cause a malfunction of the microcontroller.

To generate address trap interrupts, set the stack pointer beforehand.

7.3.4 Address Trap Reset

While WDTCR1<ATOUT> is "1", if the CPU should start looping for some cause such as noise and an attempt be made to fetch an instruction from the on-chip RAM (while WDTCR1<ATAS> is "1"), DBR or the SFR area, address trap reset will be generated.

When an address trap reset request is generated, the internal hardware is reset. The reset time is maximum 24/fc [s] (1.5 μ s @ fc = 16.0 MHz).

Note: When an address trap reset is generated in the SLOW1 mode, the reset time is maximum 24/fc (high-frequency clock) since the high-frequency clock oscillator is restarted. However, when crystals have inaccuracies upon start of the high-frequency clock oscillator, the reset time should be considered as an approximate value because it has slight errors.



TOSHIBA

TMP86F409NG

8. 16-Bit TimerCounter 1 (TC1)

8.1 Configuration

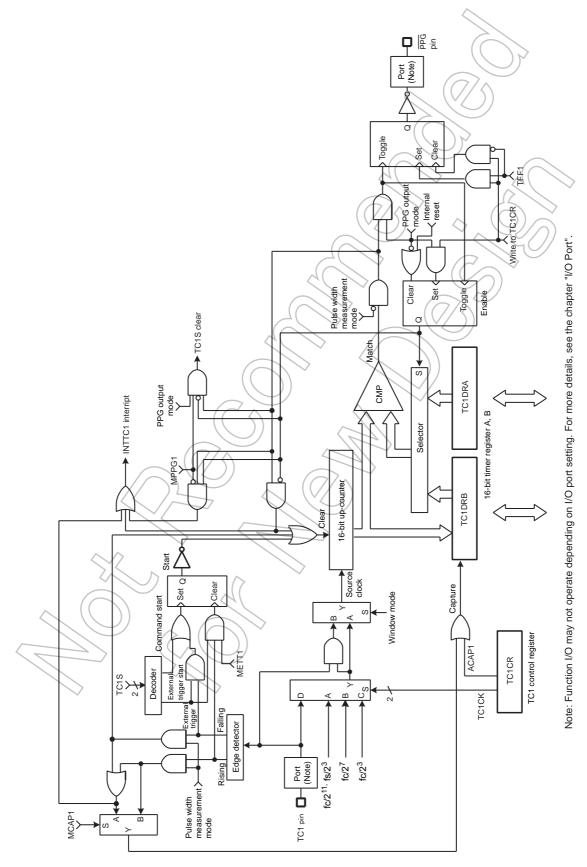


Figure 8-1 TimerCounter 1 (TC1)

8.2 TimerCounter Control

The TimerCounter 1 is controlled by the TimerCounter 1 control register (TC1CR) and two 16-bit timer registers (TC1DRA and TC1DRB).

imer Regist	er															
	15	14	13	12	11	10	9	8	7		6	5 4	3	2	1	0
TC1DRA				ΓC1DRA	H (0011H)						TC1D	RAL (001	0H)		
(0011H, 0010H)		(In	itial va	lue: 1111	l 1111 1	111 1111)					R	ead/Write			
TC1DRB			7	C1DRBI	H (0013H)				<		\ <u> </u>	RBL (001			
(0013H, 0012H)	to n 1 C	`			I 1111 1 [,]	111 1111)		ſ	Read	Write (W	rite enable	ed only in	the PPG	output mo	de)
TimerCou			Regi						<	1(d		>	
	7	6		5	4	3		2	1		0		12			
TC1CR (0014H)	TFF1	ACAP1 MCAP1 METT1 MPPG1		TC1	S		TC1CK			TC1N		Read/Wr (Initial va	ite lue: 0000	0000)		
TFF1	Timer F/F1	1 control		0: Clea	r		4		\rightarrow		1: Set))			R/W
ACAP1	Auto captu	ire control		0:Auto-	capture d	isable					1:Auto-	capture er	able			
MCAP1	Pulse width		e-	0:Doub	le edge c	apture	1				1:Single	edge car	oture			R/W
METT1	External tri	-	r	0:Trigge	er start						1:Trigge	er start and	d stop			R/VV
MPPG1	PPG outpu	ut control		0:Conti	nuous pu	lse genei	ration				1:One-s	hot				
									Tir	mer	Extrig- ger	Event	Win- dow	Pulse	PPG	
				00: Sto	p and cou	inter clea	ır	1	/	2	0	0	0	0	0	
				-	nmand st				7/7	Š	_	-	_	_	0	
TC1S	TC1 start of	control		Risi	ing edge ing edge sitive logic	(Ex-tri	vent)	llse/PPG) _	-	0	0	0	0	0	R/W
	5	2		Fall	ing edge ling edge gative log	(Ex-tri count (E	vent)	ilse/PPG		-	0	0	0	0	0	
					21		NC	RMAL1	/2, IDLE	1/2 n	node				SLOW,	
))				DV7C	K = 0				DV70	CK = 1		Divider	SLEEP mode	
TC1CK	TC1 sourc	e clock se	lect	00		fc/2	2 ¹¹				fs	/2 ³		DV9	fs/2 ³	R/W
	[Hz]			01		fc/	2 ⁷				fo	/2 ⁷		DV5	-	
				10	>	fc/	2 ³				fo	/2 ³		DV1	-	
	~			11				E	kternal o	clock	(TC1 pin	input)			•	
TC1M	TC1 opera	iting mode	,	01: Win 10: Pul	er/externation ndow moduse width r G (Progra	le neasurer	ment mo	ode								R/W

- Note 1: fc: High-frequency clock [Hz], fs: Low-frequency clock [Hz]
- Note 2: The timer register consists of two shift registers. A value set in the timer register becomes valid at the rising edge of the first source clock pulse that occurs after the upper byte (TC1DRAH and TC1DRBH) is written. Therefore, write the lower byte and the upper byte in this order (it is recommended to write the register with a 16-bit access instruction). Writing only the lower byte (TC1DRAL and TC1DRBL) does not enable the setting of the timer register.
- Note 3: To set the mode, source clock, PPG output control and timer F/F control, write to TC1CR1 during TC1S=00. Set the timer F/F1 control until the first timer start after setting the PPG mode.

- Note 4: Auto-capture can be used only in the timer, event counter, and window modes.
- Note 5: To set the timer registers, the following relationship must be satisfied.

 TC1DRA > TC1DRB > 1 (PPG output mode), TC1DRA > 1 (other modes)
- Note 6: Set TFF1 to "0" in the mode except PPG output mode.
- Note 7: Set TC1DRB after setting TC1M to the PPG output mode.
- Note 8: When the STOP mode is entered, the start control (TC1S) is cleared to "00" automatically, and the timer stops. After the STOP mode is exited, set the TC1S to use the timer counter again.
- Note 9: Use the auto-capture function in the operative condition of TC1. A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition.
- Note 10:Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

8.3 Function

TimerCounter 1 has six types of operating modes: timer, external trigger timer, event counter, window, pulse width measurement, programmable pulse generator output modes.

8.3.1 Timer mode

In the timer mode, the up-counter counts up using the internal clock. When a match between the up-counter and the timer register 1A (TC1DRA) value is detected, an INTTC1 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting. Setting TC1CR<ACAP1> to "1" captures the up-counter value into the timer register 1B (TC1DRB) with the auto-capture function. Use the auto-capture function in the operative condition of TC1. A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition. Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

Table 8-1 Internal Source Clock for TimerCounter 1 (Example, fc = 16 MHz, fs = 32,768 kHz)

Ī	T040V		NORMAL1/2, IDLE1/2 mode									
	TC1CK	DV70	K = 0	DV70	CK = 1	SLOW, SL	EEP mode					
		Resolution [μs]	Maximum Time Setting [s]	Resolution [μs]	Maximum Time Setting	Resolution [μs]	Maximum Time Set- ting [s]					
I	00	128	8.39	244.14	16.0	244.14	16.0					
	01	8.0	0.524	8.0	0.524	_	-					
	10	0.5	32.77 m	0.5	32.77 m	-	_					

Example 1 :Setting the timer mode with source clock $fc/2^{11}$ [Hz] and generating an interrupt 1 second later (fc = 16 MHz, TBTCR < DV7CK > = "0")

ไปฟ (TC1DRA), 1E84H Sets the timer register (1 s \div 2¹¹/fc = 1E84H) IMF= "0" (EIRL). Enables INTTC1 SFT ΕI : IMF= "1" (TC1CR), 00000000B ; Selects the source clock and mode LD (TC1CR), 00010000B ; Starts TC1 Example 2: Auto-capture (TC1CR), 01010000B LD ; ACAP1 ← 1 LD WA, (TC1DRB) ; Reads the capture value

Note: Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1".

Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

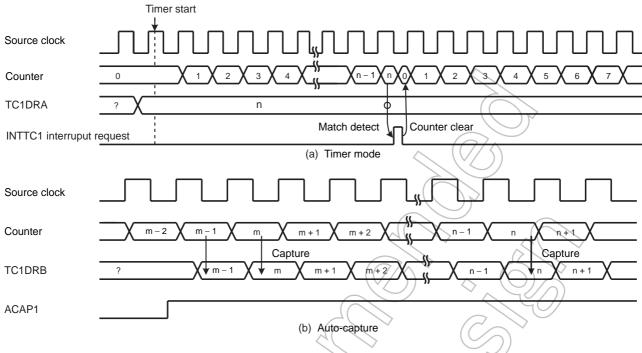


Figure 8-2 Timer Mode Timing Chart

8.3.2 External Trigger Timer Mode

In the external trigger timer mode, the up-counter starts counting by the input pulse triggering of the TC1 pin, and counts up at the edge of the internal clock. For the trigger edge used to start counting, either the rising or falling edge is defined in TC1CR<TC1S>.

• When TC1CR<METT1> is set to "1" (trigger start and stop)

When a match between the up-counter and the TC1DRA value is detected after the timer starts, the up-counter is cleared and halted and an INTTC1 interrupt request is generated.

If the edge opposite to trigger edge is detected before detecting a match between the up-counter and the TC1DRA, the up-counter is cleared and halted without generating an interrupt request. Therefore, this mode can be used to detect exceeding the specified pulse by interrupt.

After being halted, the up-counter restarts counting when the trigger edge is detected.

• When TC1CR<METT1> is set to "0" (trigger start)

When a match between the up-counter and the TC1DRA value is detected after the timer starts, the up-counter is cleared and halted and an INTTC1 interrupt request is generated.

The edge opposite to the trigger edge has no effect in count up. The trigger edge for the next counting is ignored if detecting it before detecting a match between the up-counter and the TC1DRA.

Since the TC1 pin input has the noise rejection, pulses of 4/fc [s] or less are rejected as noise. A pulse width of 12/fc [s] or more is required to ensure edge detection. The rejection circuit is turned off in the SLOW1/2 or SLEEP1/2 mode, but a pulse width of one machine cycle or more is required.

Example 1: Generating an interrupt 1 ms after the rising edge of the input pulse to the TC1 pin

(fc = 16 MHz)

LDW (TC1DRA), 007DH ; $1ms \div 2^7/fc = 7DH$ USET (EIRL). 7 ; Enables INTTC1 interrupt

EI ; 1mF = "1"LD (TC1CR), 00000100B ; Selects the source clock and mode

LD (TC1CR), 00100100B ; Starts TC1 external trigger, METT1 = 0

Example 2 Generating an interrupt when the low-level pulse with 4 ms or more width is input to the TC1 pin (fc = 16 MHz)

LDW (TC1DRA), 01F4H ; 4 ms $\div 2^{7}/\text{fc} = 1F4H$

DI ; IMF= "0"

SET (EIRL). 7 ; Enables INTTC1 interrupt

EI ; IMF= "1"

LD (TC1CR), 00000100B ; Selects the source clock and mode

LD (TC1CR), 01110100B ; Starts TC1 external trigger, METT1 = 0

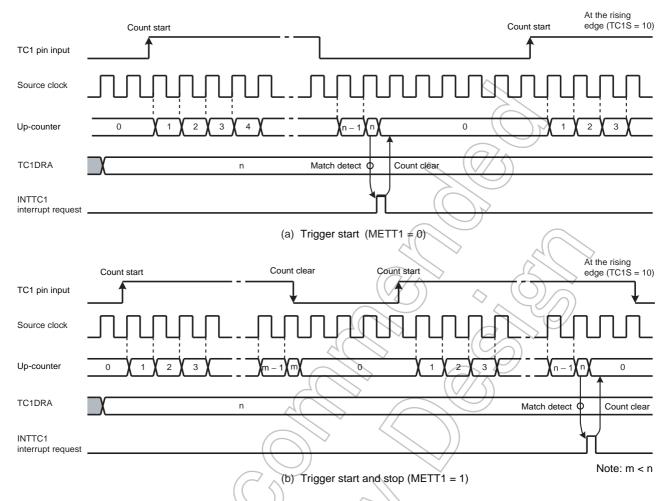


Figure 8-3 External Trigger Timer Mode Timing Chart

8.3.3 Event Counter Mode

In the event counter mode, the up-counter counts up at the edge of the input pulse to the TC1 pin. Either the rising or falling edge of the input pulse is selected as the count up edge in TC1CR < TC1S >.

When a match between the up-counter and the TC1DRA value is detected, an INTTC1 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting at each edge of the input pulse to the TC1 pin. Since a match between the up-counter and the value set to TC1DRA is detected at the edge opposite to the selected edge, an INTTC1 interrupt request is generated after a match of the value at the edge opposite to the selected edge.

Two or more machine cycles are required for the low-or high-level pulse input to the TC1 pin.

Setting TC1CR<ACAP1> to "1" captures the up-counter value into TC1DRB with the auto capture function. Use the auto-capture function in the operative condition of TC1. A captured value may not be fixed if it's read after the execution of the timer stop or auto-capture disable. Read the capture value in a capture enabled condition. Since the up-counter value is captured into TC1DRB by the source clock of up-counter after setting TC1CR<ACAP1> to "1". Therefore, to read the captured value, wait at least one cycle of the internal source clock before reading TC1DRB for the first time.

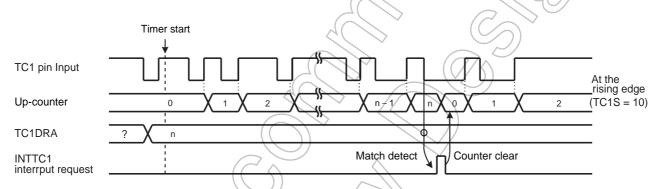


Figure 8-4 Event Counter Mode Timing Chart

Table 8-2 Input Pulse Width to TC1 Pin


		Minimum Pulse Width [s]								
	2	NORMAL1/2, IDLE1/2 Mode	SLOW1/2, SLEEP1/2 Mode							
\ 	High-going	2 ³ /fc	2 ³ /fs							
	Low-going	2 ³ /fc	2 ³ /fs							

8.3.4 Window Mode

In the window mode, the up-counter counts up at the rising edge of the pulse that is logical ANDed product of the input pulse to the TC1 pin (window pulse) and the internal source clock. Either the positive logic (count up during high-going pulse) or negative logic (count up during low-going pulse) can be selected.

When a match between the up-counter and the TC1DRA value is detected, an INTTC1 interrupt is generated and the up-counter is cleared.

Define the window pulse to the frequency which is sufficiently lower than the internal source clock programmed with TC1CR<TC1CK>.

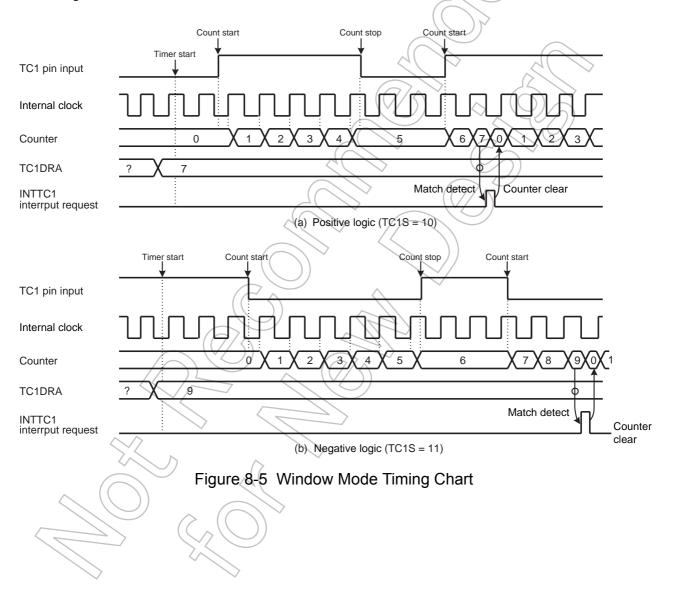

8.3.5 Pulse Width Measurement Mode

In the pulse width measurement mode, the up-counter starts counting by the input pulse triggering of the TC1 pin, and counts up at the edge of the internal clock. Either the rising or falling edge of the internal clock is selected as the trigger edge in TC1CR<TC1S>. Either the single- or double-edge capture is selected as the trigger edge in TC1CR<MCAP1>.

• When TC1CR<MCAP1> is set to "1" (single-edge capture)

Either high- or low-level input pulse width can be measured. To measure the high-level input pulse width, set the rising edge to TC1CR<TC1S>. To measure the low-level input pulse width, set the falling edge to TC1CR<TC1S>.

When detecting the edge opposite to the trigger edge used to start counting after the timer starts, the up-counter captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request. The up-counter is cleared at this time, and then restarts counting when detecting the trigger edge used to start counting.

• When TC1CR<MCAP1> is set to "0" (double-edge capture)

The cycle starting with either the high- or low-going input pulse can be measured. To measure the cycle starting with the high-going pulse, set the rising edge to TC1CR<TC1S>. To measure the cycle starting with the low-going pulse, set the falling edge to TC1CR<TC1S>.

When detecting the edge opposite to the trigger edge used to start counting after the timer starts, the up-counter captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request. The up-counter continues counting up, and captures the up-counter value into TC1DRB and generates an INTTC1 interrupt request when detecting the trigger edge used to start counting. The up-counter is cleared at this time, and then continues counting.

- Note 1: The captured value must be read from TC1DRB until the next trigger edge is detected. If not read, the captured value becomes a don't care. It is recommended to use a 16-bit access instruction to read the captured value from TC1DRB.
- Note 2: For the single-edge capture, the counter after capturing the value stops at "1" until detecting the next edge.

 Therefore, the second captured value is "1" larger than the captured value immediately after counting starts
- Note 3: The first captured value after the timer starts may be read incorrectively, therefore, ignore the first captured value

Example :Duty measurement (resolution fc/2⁷ [Hz]) CLR (INTTC1SW). 0 ; INTTC1 service switch initial setting Address set to convert INTTC1SW at each INTTC1 (TC1CR), 00000110B ; Sets the TC1 mode and source clock LD DI ; IMF= "0" SET (EIRL). 7 ; Enables INTTC1 ; IMF= "1" ΕI LD (TC1CR), 00100110B ; Starts TC1 with an external trigger at MCAP1 = 0 (INTTC1SW). 0 ; INTTC1 interrupt, inverts and tests INTTC1 service switch PINTTC1: CPL JRS F, SINTTC1 LD A, (TC1DRBL) ; Reads TC1DRB (High-level pulse width) LD W,(TC1DRBH) LD (HPULSE), WA ; Stores high-level pulse width in RAM RETI SINTTC1: LD A, (TC1DRBL) ; Reads TC1DRB (Cycle) LD W,(TC1DRBH) (WIDTH), WA LD Stores cycle in RAM RETI ; Duty calculation VINTTC1: DW PINTTQ1 ; INTTC1 Interrupt vector WIDTH HPULSE TC1 pin INTTC1 interrupt request INTTC1SW

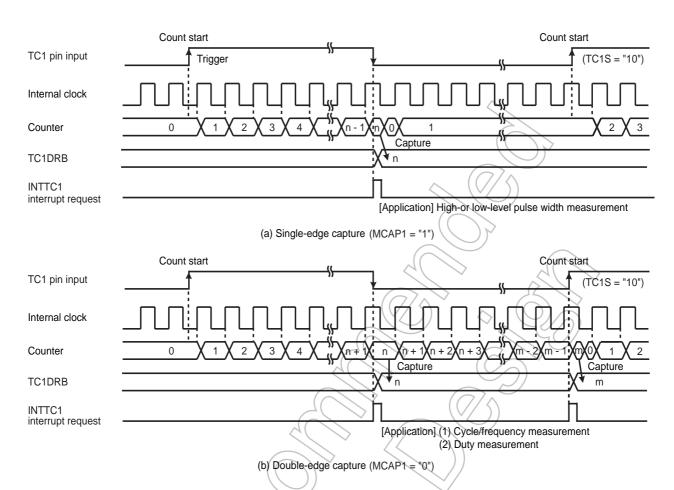


Figure 8-6 Pulse Width Measurement Mode

8.3.6 Programmable Pulse Generate (PPG) Output Mode

In the programmable pulse generation (PPG) mode, an arbitrary duty pulse is generated by counting performed in the internal clock. To start the timer, TC1CR<TC1S> specifies either the edge of the input pulse to the TC1 pin or the command start. TC1CR<MPPG1> specifies whether a duty pulse is produced continuously or not (one-shot pulse).

• When TC1CR<MPPG1> is set to "0" (Continuous pulse generation)

When a match between the up-counter and the TC1DRB value is detected after the timer starts, the level of the \overline{PPG} pin is inverted and an INTTC1 interrupt request is generated. The up-counter continues counting. When a match between the up-counter and the TC1DRA value is detected, the level of the \overline{PPG} pin is inverted and an INTTC1 interrupt request is generated. The up-counter is cleared at this time, and then continues counting and pulse generation.

When TC1S is cleared to "00" during PPG output, the PPG pin retains the level immediately before the counter stops.

• When TC1CR<MPPG1> is set to "1" (One-shot pulse generation)

When a match between the up-counter and the TC1DRB value is detected after the timer starts, the level of the \overline{PPG} pin is inverted and an INTTC1 interrupt request is generated. The up-counter continues counting. When a match between the up-counter and the TC1DRA value is detected, the level of the \overline{PPG} pin is inverted and an INTTC1 interrupt request is generated. TC1CR<TC1S> is cleared to "00" automatically at this time, and the timer stops. The pulse generated by PPG retains the same level as that when the timer stops.

Since the output level of the \overline{PPG} pin can be set with TC1CR<TFF1> when the timer starts, a positive or negative pulse can be generated. Since the inverted level of the timer F/F1 output level is output to the \overline{PPG} pin, specify TC1CR<TFF1> to "0" to set the high level to the \overline{PPG} pin, and "1" to set the low level to the \overline{PPG} pin. Upon reset, the timer F/F1 is initialized to "0".

Note 1: To change TC1DRA or TC1DRB during a run of the timer, set a value sufficiently larger than the count value of the counter. Setting a value smaller than the count value of the counter during a run of the timer may generate a pulse different from that specified.

Note 2: Do not change TC1CR<TFF1> during a run of the timer. TC1CR<TFF1> can be set correctly only at initialization (after reset). When the timer stops during PPG, TC1CR<TFF1> can not be set correctly from this
point onward if the PPG output has the level which is inverted of the level when the timer starts. (Setting
TC1CR<TFF1> specifies the timer F/F1 to the level inverted of the programmed value.) Therefore, the
timer F/F1 needs to be initialized to ensure an arbitrary level of the PPG output. To initialize the timer F/F1,
change TC1CR<TC1M> to the timer mode (it is not required to start the timer mode), and then set the PPG
mode. Set TC1CR<TFF1> at this time.

Note 3: In the PPG mode, the following relationship must be satisfied.

TC1DRA > TC1DRB

Note 4: Set TC1DRB after changing the mode of TC1M to the PPG mode.

Example :Generating a pulse which is high-going for 800 μ s and low-going for 200 μ s (fc = 16 MHz)

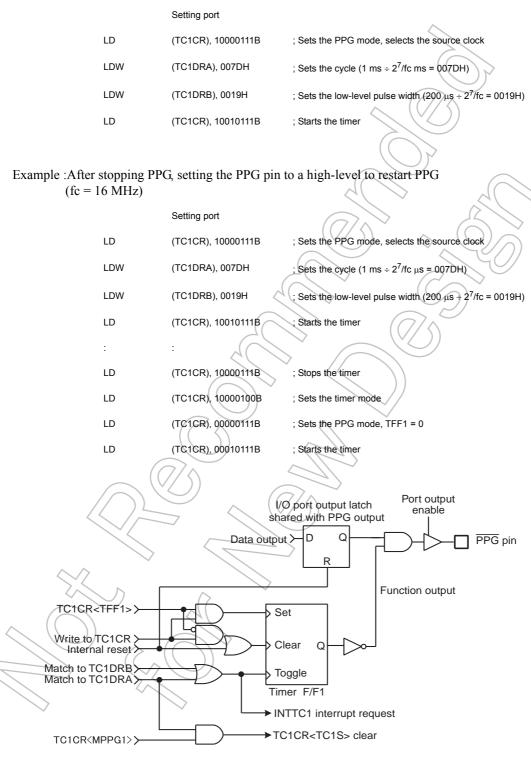


Figure 8-7 PPG Output

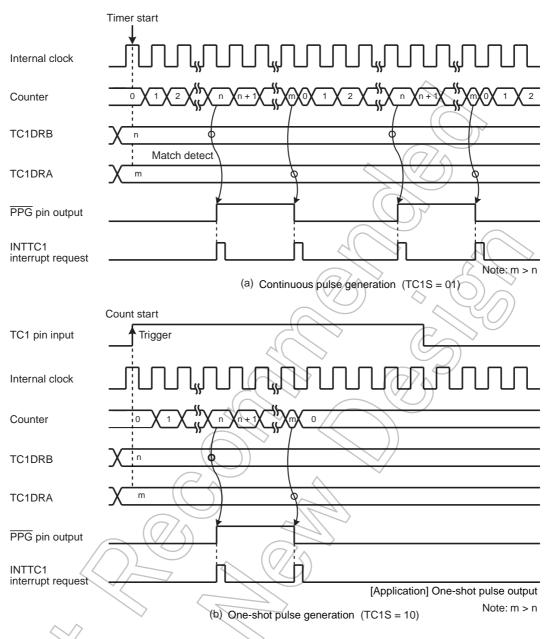


Figure 8-8 PPG Mode Timing Chart




TOSHIBA

TMP86F409NG


9. 8-Bit TimerCounter (TC3, TC4)

9.1 Configuration

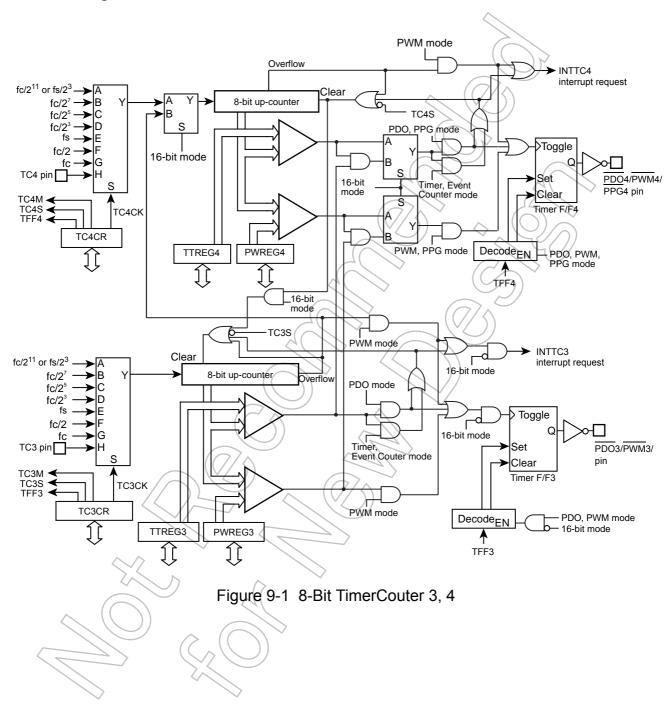

9.2 TimerCounter Control

The TimerCounter 3 is controlled by the TimerCounter 3 control register (TC3CR) and two 8-bit timer registers (TTREG3, PWREG3).

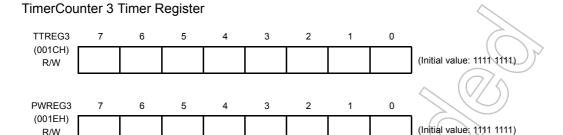

Note 1: Do not change the timer register (TTREG3) setting while the timer is running.

Note 2: Do not change the timer register (PWREG3) setting in the operating mode except the 8-bit and 16-bit PWM modes while the timer is running.

TimerCounter 3 Control Register

TC3CR	7	6	5	4	3	2		0	
(001AH)	TFF3		TC3CK		TC3S		тсзм	\supset	(Initial value: 0000 0000)

TFF3	Time F/F3 control	0: Clear 1: Set				R/W
			NORMAL1/2, DV7CK = 0	IDLE1/2 mode DV7CK = 1	SLOW1/2 SLEEP1/2 mode	
		000	fc/2 ¹¹	fs/2 ³	fs/2 ³	1
		001	fc/2 ⁷	fc/2 ⁷	-	
тсзск	Operating clock selection [Hz]	010	fc/2 ⁵	fc/2 ⁵	-	R/W
		011	fc/2 ³	fc/2 ³	-	
		100	fs	fs	fs	
		101	fc/2	fc/2	-	
		110	fc	fc	fc (Note 8)	
		7 111		TC3 pin input		
TC3S	TC3 start control	0: Operati 1: Operati	on stop and counter cl on start	ear		R/W
ТСЗМ	TC3M operating mode select	001: 8-bit pro 010: 8-bit pu 011: 16-bit m	node is selectable with	rtput (PDO) mode PWM) output mode		R/W

- Note 1: fc: High-frequency clock [Hz] fs: Low-frequency clock[Hz]
- Note 2: Do not change the TC3M, TC3CK and TFF3 settings while the timer is running.
- Note 3: To stop the timer operation (TC3S= 1 \rightarrow 0), do not change the TC3M, TC3CK and TFF3 settings. To start the timer operation (TC3S= 0 \rightarrow 1), TC3M, TC3CK and TFF3 can be programmed.
- Note 4: To use the TimerCounter in the 16-bit mode, set the operating mode by programming TC4CR<TC4M>, where TC3M must be fixed to 011.
- Note 5: To use the TimerCounter in the 16-bit mode, select the source clock by programming TC3CK. Set the timer start control and timer F/F control by programming TC4CR<TC4S> and TC4CR<TFF4>, respectively.
- Note 6: The operating clock settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 9-1 and Table 9-2.


Note 7: The timer register settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 9-

Note 8: The operating clock fc in the SLOW or SLEEP mode can be used only as the high-frequency warm-up mode.



The TimerCounter 4 is controlled by the TimerCounter 4 control register (TC4CR) and two 8-bit timer registers (TTREG4 and PWREG4).

TimerCounter 4 Timer Register

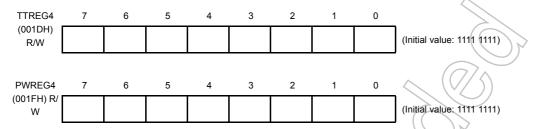

Note 1: Do not change the timer register (TTREG4) setting while the timer is running.

Note 2: Do not change the timer register (PWREG4) setting in the operating mode except the 8-bit and 16-bit PWM modes while the timer is running.

TimerCounter 4 Control Register

TC4CR	7	6	5	4	3	2	1 0	
(001BH)	TFF4		TC4CK		TC4S		TC4M	(Initial value: 0000 0000)

Timer F/F4 control	0: Clear 1: Set	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\			R/W
		NORMAL1/2,	IDLE1/2 mode	SLOW1/2	
		DV7CK = 0	DV7CK = 1	mode	
(000	fc/2 ¹¹	fs/2 ³	fs/2 ³	
	001	fc/2 ⁷	fc/2 ⁷	-	
Operating clock selection [Hz]	010	fc/2 ⁵	fc/2 ⁵	-	R/W
	011	fc/2 ³	fc/2 ³	-	
	100	fs	fs	fs	
		fc/2	fc/2	-	
$\langle \rangle$		fc		_	-
	111	7	TC4 pin input		
TC4 start control	VII.	•	lear		R/W
		er/event counter mod	e		
)) 0 5.0 p. 0	•			
	7 411 91	,	Pyvivi) output mode		
TC4M operating mode select	100: 16-bit ti	mer/event counter mo	de		R/W
			(D)(///) output m = -1 -		
			(Pvvivi) output mode		
	Operating clock selection [Hz]	1: Set	1: Set NORMAL 1/2, DV7CK = 0 000 fc/2 ¹¹ 001 fc/2 ⁷ 010 fc/2 ⁶ 011 fc/2 ³ 100 fs 101 fc/2 110 fc 111 110 fc 111 110 111 110 111 110 111 11	NORMAL1/2, IDLE1/2 mode	NORMAL 1/2, IDLE 1/2 mode SLOW1/2

Note 1: fc: High-frequency clock [Hz] fs: Low-frequency clock [Hz]

Note 2: Do not change the TC4M, TC4CK and TFF4 settings while the timer is running.

Note 3: To stop the timer operation (TC4S= $1 \rightarrow 0$), do not change the TC4M, TC4CK and TFF4 settings. To start the timer operation (TC4S= $0 \rightarrow 1$), TC4M, TC4CK and TFF4 can be programmed.

Note 4: When TC4M= 1** (upper byte in the 16-bit mode), the source clock becomes the TC4 overflow signal regardless of the TC3CK setting.

Note 5: To use the TimerCounter in the 16-bit mode, select the operating mode by programming TC4M, where TC3CR<TC3 M> must be set to 011.



- Note 6: To the TimerCounter in the 16-bit mode, select the source clock by programming TC3CR<TC3CK>. Set the timer start control and timer F/F control by programming TC4S and TFF4, respectively.
- Note 7: The operating clock settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 9-1 and Table 9-2.
- Note 8: The timer register settings are limited depending on the timer operating mode. For the detailed descriptions, see Table 9-3.

Table 9-1 Operating Mode and Selectable Source Clock (NORMAL1/2 and IDLE1/2 Modes)

Operating mode	fc/2 ¹¹ or fs/2 ³	fc/2 ⁷	fc/2 ⁵	fc/2 ³	fs	fc/2	fc	TC3 pin input	TC4 pin input
8-bit timer	О	О	О	О	-))	_	-
8-bit event counter	ı	ı	ı	-	ı	(-)	> -	О	О
8-bit PDO	О	О	О	О	(($\Big)_{l}$	-		-
8-bit PWM	О	О	О	О	0/	0	0	4(- /	> -
16-bit timer	О	О	О	0 /	\bigcirc	> -	- (_
16-bit event counter	-	-	-	- \	<u> </u>	- <	> -(-
Warm-up counter	_	-	ı	7)0	-	-	~(<i>-//</i>	_
16-bit PWM	О	0	0	0	0	0 (0	> o	_
16-bit PPG	0	О	0	(0)	_	_	-	0	_

Note 1: For 16-bit operations (16-bit timer/event counter, warm-up counter, 16-bit PWM and 16-bit PPG), set its source clock on lower bit (TC3CK).

Note 2: O: Available source clock

Table 9-2 Operating Mode and Selectable Source Clock (SLOW1/2 and SLEEP1/2 Modes)

Operating mode	fc/2 ¹¹ or fs/2 ³	fc/2 ⁷	fc/2 ⁵	fc/2 ³	fs	fc/2	fc	TC3 pin input	TC4 pin input
8-bit timer	0//))-	- /	// // ₍₍	> -	-	-	-	-
8-bit event counter		-	((//-	1	-	-	О	О
8-bit PDO	0	_	-		-	-	-	-	-
8-bit PWM	o			- /	О	-	-	-	-
16-bit timer	0	-	<u> </u>	-	-	-	-	-	-
16-bit event counter	-	<u> </u>		ı	ı	-	ı	О	-
Warm-up counter	-	7	_	ı	ı	1	О	-	_
16-bit PWM	0		_	-	О	_	_	О	_
16-bit PPG) o (}	_	-	-	-	-	О	_

Note1: For 16-bit operations (16-bit timer/event counter, warm-up counter, 16-bit PWM and 16-bit PPG), set its source clock on lower bit (TC3CK).

Note2: O : Available source clock

Table 9-3 Constraints on Register Values Being Compared

Operating mode	Register Value
8-bit timer/event counter	1≤ (TTREGn) ≤255
8-bit PDO	1≤ (TTREGn) ≤255
8-bit PWM	2≤ (PWREGn) ≤254
16-bit timer/event counter	1≤ (TTREG4, 3) ≤65535
Warm-up counter	256≤ (TTREG4, 3) ≤65535
16-bit PWM	2≤ (PWREG4, 3) ≤65534
16-bit PPG	1≤ (PWREG4, 3) < (TTREG4, 3) ≤65535 and (PWREG4, 3) + 1 < (TTREG4, 3)



9.3 Function

The TimerCounter 3 and 4 have the 8-bit timer, 8-bit event counter, 8-bit programmable divider output (PDO), 8-bit pulse width modulation (PWM) output modes. The TimerCounter 3 and 4 (TC3, 4) are cascadable to form a 16-bit timer. The 16-bit timer has the operating modes such as the 16-bit timer, 16-bit event counter, warm-up counter, 16-bit pulse width modulation (PWM) output and 16-bit programmable pulse generation (PPG) modes.

9.3.1 8-Bit Timer Mode (TC3 and 4)

In the timer mode, the up-counter counts up using the internal clock. When a match between the up-counter and the timer register j (TTREGj) value is detected, an INTTCj interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting.

Note 1: In the timer mode, fix TCjCR<TFFj> to 0. If not fixed, the PDOj, PWMi and PPGj pins may output pulses.

Note 2: In the timer mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the timer mode, the new value programmed in TTREGj is in effect immediately after the programming. Therefore, if TTREGi is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

Table 9-4 Source Clock for TimerCounter 3, 4 (Internal Clock)

DI

ΕI

	Source Clock		Reso	olution	Repeated Cycle		
NORMAL1/2,	IDLE1/2 mode	SLOW1/2,					
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz	
fc/2 ¹¹ [Hz]	fs/2 ³ [Hz]	fs/2 ³ [Hz]	128 μs	244.14 μs	32.6 ms	62.3 ms	
fc/2 ⁷	fc/2 ⁷	- (8 μs	-	2.0 ms	_	
fc/2 ⁵	fc/2 ⁵		2 μs		510 μs	-	
fc/2 ³	fc/2 ³	((-))	500 ns	_	127.5 μs	_	

Example :Setting the timer mode with source clock $fc/2^7$ Hz and generating an interrupt 80 μ s later (TimerCounter4, fc = 16.0 MHz)

LD (TTREG4), 0AH : Sets the timer register (80 μ s÷2 7 /fc = 0AH).

SET (EIRH), 3 : Enables INTTC4 interrupt.

LD (TC4CR), 00010000B : Sets the operating cock to fc/2⁷, and 8-bit timer mode.

LD (TC4CR), 00011000B : Starts TC4.

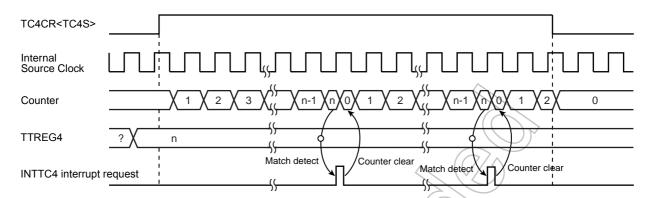


Figure 9-2 8-Bit Timer Mode Timing Chart (TC4)

9.3.2 8-Bit Event Counter Mode (TC3, 4)

In the 8-bit event counter mode, the up-counter counts up at the falling edge of the input pulse to the TCj pin. When a match between the up-counter and the TTREGj value is detected, an INTTCj interrupt is generated and the up-counter is cleared. After being cleared, the up-counter restarts counting at the falling edge of the input pulse to the TCj pin. Two machine cycles are required for the low- or high-level pulse input to the TCj pin. Therefore, a maximum frequency to be supplied is fc/2⁴ Hz in the NORMAL1/2 or IDLE1/2 mode, and fs/2⁴ Hz in the SLOW1/2 or SLEEP1/2 mode.

Note 1: In the event counter mode, fix TCjCR<TFFj> to 0. If not fixed, the PDOj, PWMj and PPGj pins may output pulses.

Note 2: In the event counter mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the event counter mode, the new value programmed in TTREGj is in effect immediately after the programming. Therefore, if TTREGi is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

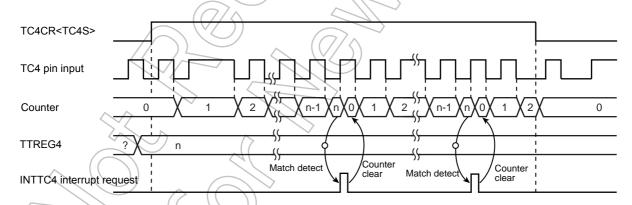


Figure 9-3 8-Bit Event Counter Mode Timing Chart (TC4)

9.3.3 8-Bit Programmable Divider Output (PDO) Mode (TC3, 4)

This mode is used to generate a pulse with a 50% duty cycle from the PDOj pin.

In the PDO mode, the up-counter counts up using the internal clock. When a match between the up-counter and the TTREGj value is detected, the logic level output from the \overline{PDOj} pin is switched to the opposite state and the up-counter is cleared. The INTTCj interrupt request is generated at the time. The logic state opposite to the timer F/Fj logic level is output from the \overline{PDOj} pin. An arbitrary value can be set to the timer F/Fj by TCjCR<TFFj>. Upon reset, the timer F/Fj value is initialized to 0.

To use the programmable divider output, set the output latch of the I/O port to 1.

Example : Generating 1024 Hz pulse using TC4 (fc = 16.0 MHz)

Setting port

: $1/1024 \div 2^7/\text{fc} \div 2 = 3DH$ LD (TTREG4), 3DH

: Sets the operating clock to ${\rm fc/2}^7$, and 8-bit PDO mode. LD (TC4CR), 00010001B

: Starts TC4. LD (TC4CR), 00011001B

Note 1: In the programmable divider output mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the programmable divider output mode, the new value programmed in TTREGj is in effect immediately after programming. Therefore, if TTREGi is changed while the timer is running, an expected operation may not be obtained.

Note 2: When the timer is stopped during PDO output, the PDOj pin holds the output status when the timer is stopped. To change the output status, program TCjCR<TFFj> after the timer is stopped. Do not change the TCjCR<TFFj> setting upon stopping of the timer.

Example: Fixing the PDOj pin to the high level when the TimerCounter is stopped

CLR (TCjCR).3: Stops the timer.

CLR (TCjCR).7: Sets the PDOj pin to the high level.

Note 3: j = 3, 4

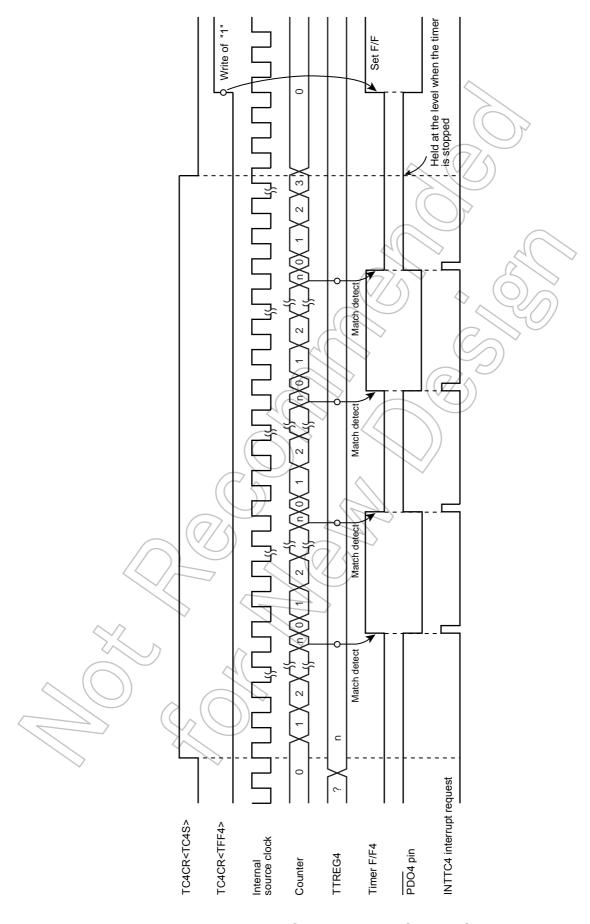


Figure 9-4 8-Bit PDO Mode Timing Chart (TC4)

8-Bit Pulse Width Modulation (PWM) Output Mode (TC3, 4) 9.3.4

This mode is used to generate a pulse-width modulated (PWM) signals with up to 8 bits of resolution. The up-counter counts up using the internal clock.

When a match between the up-counter and the PWREGj value is detected, the logic level output from the timer F/Fi is switched to the opposite state. The counter continues counting. The logic level output from the timer F/Fj is switched to the opposite state again by the up-counter overflow, and the counter is cleared. The INTTCj interrupt request is generated at this time.

Since the initial value can be set to the timer F/Fj by TCjCR<TFFj>, positive and negative pulses can be generated. Upon reset, the timer F/Fj is cleared to 0.

(The logic level output from the PWMj pin is the opposite to the timer F/Fj logic level.)

Since PWREGj in the PWM mode is serially connected to the shift register, the value set to PWREGj can be changed while the timer is running. The value set to PWREGj during a run of the timer is shifted by the INTTCj interrupt request and loaded into PWREGj. While the timer is stopped, the value is shifted immediately after the programming of PWREGj. If executing the read instruction to PWREGj during PWM output, the value in the shift register is read, but not the value set in PWREG. Therefore, after writing to PWREG, the reading data of PWREGi is previous value until INTTCi is generated.

For the pin used for PWM output, the output latch of the I/O port must be set to 1.

- Note 1: In the PWM mode, program the timer register PWREGj immediately after the INTTCj interrupt request is generated (normally in the INTTCj interrupt service routine.) If the programming of PWREGj and the interrupt request occur at the same time, an unstable value is shifted, that may result in generation of the pulse different from the programmed value until the next INTTCj interrupt request is generated.
- Note 2: When the timer is stopped during PWM output, the PWMj pin holds the output status when the timer is stopped. To change the output status, program TCjCR<TFFj> after the timer is stopped. Do not change the TCjCR<TFFj> upon stopping of the timer.
 - Example: Fixing the PWMj pin to the high level when the TimerCounter is stopped
 - CLR (TCjCR).3: Stops the timer.
 - CLR (TCjCR).7: Sets the PWMj pin to the high level.
- Note 3: To enter the STOP mode during PWM output, stop the timer and then enter the STOP mode. If the STOP mode is entered without stopping the timer when fc, fc/2 or fs is selected as the source clock, a pulse is output from the PWMj pin during the warm-up period time after exiting the STOP mode.

Note 4: j = 3, 4

Table 9-5 PWM Output Mode

Source Clock		Resolution		Repeated Cycle		
NORMAL1/2,	IDLE1/2 mode	SLOW1/2,				
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 ¹¹ [Hz]	fs/2 ³ [Hz]	fs/2 ³ [Hz]	128 μs	244.14 μs	32.8 ms	62.5 ms
fc/2 ⁷	fc/2 ⁷	4	8 µs	-	2.05 ms	-
fc/2 ⁵	fc/2 ⁵		2 μs	-	512 μs	-
fc/2 ³	fc/2 ³	^((-))	500 ns	-	128 μs	-
fs	fs	fs	30.5 μs	30.5 μs	7.81 ms	7.81 ms
fc/2	fc/2		125 ns	-	32 μs	-
fc	fc	_	62.5 ns	-	16 μs	-

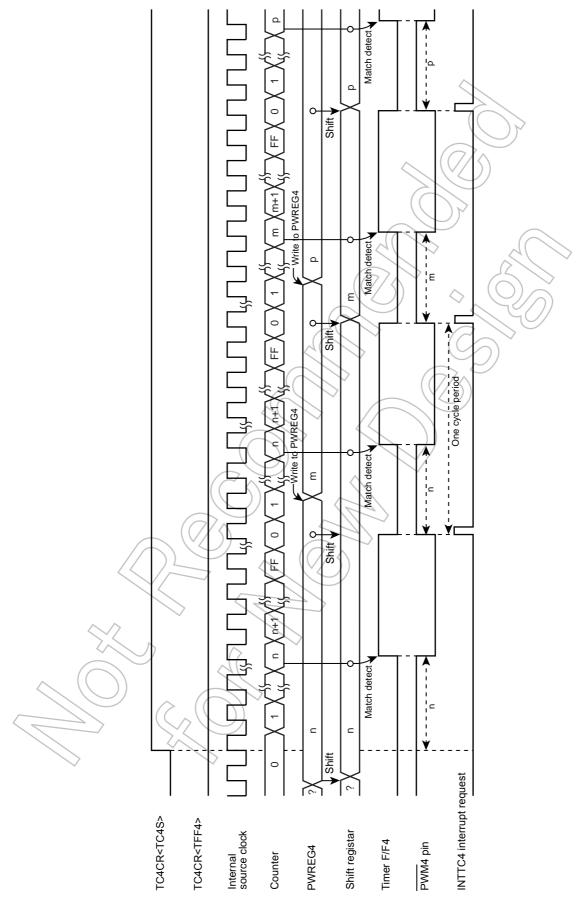


Figure 9-5 8-Bit PWM Mode Timing Chart (TC4)

9.3.5 16-Bit Timer Mode (TC3 and 4)

In the timer mode, the up-counter counts up using the internal clock. The TimerCounter 3 and 4 are cascadable to form a 16-bit timer.

When a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected after the timer is started by setting TC4CR<TC4S> to 1, an INTTC4 interrupt is generated and the up-counter is cleared. After being cleared, the up-counter continues counting. Program the upper byte and lower byte in this order in the timer register. (Programming only the upper or lower byte should not be attempted.)

Note 1: In the timer mode, fix TCjCR<TFFj> to 0. If not fixed, the PDOj, PWMj, and PPGj pins may output a pulse.


Note 2: In the timer mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the timer mode, the new value programmed in TTREGj is in effect immediately after programming of TTREGj. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

Table 9-6 Source Clock for 16-Bit Timer Mode

Source Clock			Resolution		Repeated Cycle	
NORMAL1/2, IDLE1/2 mode		SLOW1/2,			\$ (Q)	2
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 ¹¹	fs/2 ³	fs/2 ³	128 μs	244.14 μs	8.39 s	16 s
fc/2 ⁷	fc/2 ⁷	_	8 μs	· -	524.3 ms	_
fc/2 ⁵	fc/2 ⁵	-	2 μs	- ((131.1 ms	-
fc/2 ³	fc/2 ³	- <	500 ns		32.8 ms	_

Example :Setting the timer mode with source clock $fe/2^7$ Hz, and generating an interrupt 300 ms later (fc = 16.0 MHz)

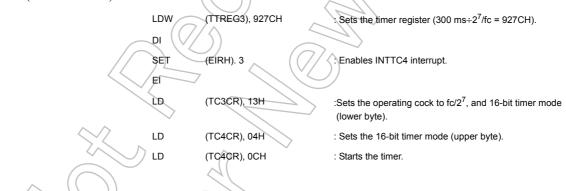

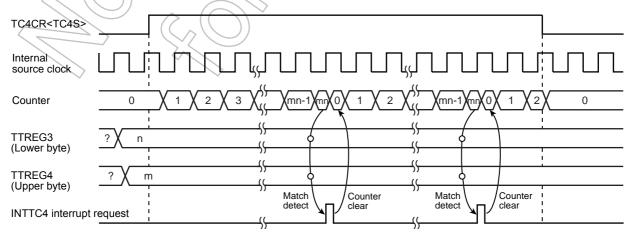


Figure 9-6 16-Bit Timer Mode Timing Chart (TC3 and TC4)

9.3.6 16-Bit Event Counter Mode (TC3 and 4)

In the event counter mode, the up-counter counts up at the falling edge to the TC3 pin. The TimerCounter 3 and 4 are cascadable to form a 16-bit event counter.

When a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected after the timer is started by setting TC4CR<TC4S> to 1, an INTTC4 interrupt is generated and the up-counter is cleared.

After being cleared, the up-counter restarts counting at the falling edge of the input pulse to the TC3 pin. Two machine cycles are required for the low- or high-level pulse input to the TC3 pin.

Therefore, a maximum frequency to be supplied is fc/2⁴ Hz in the NORMAL1 or IDLE1 mode, and fs/2⁴ in the SLOW1/2 or SLEEP1/2 mode. Program the lower byte (TTREG3), and upper byte (TTREG4) in this order in the timer register. (Programming only the upper or lower byte should not be attempted.)

Note 1: In the event counter mode, fix TCjCR<TFFj> to 0. If not fixed, the PDO; PWMj and PPGj pins may output pulses.

Note 2: In the event counter mode, do not change the TTREGj setting while the timer is running. Since TTREGj is not in the shift register configuration in the event counter mode, the new value programmed in TTREGj is in effect immediately after the programming. Therefore, if TTREGj is changed while the timer is running, an expected operation may not be obtained.

Note 3: j = 3, 4

9.3.7 16-Bit Pulse Width Modulation (PWM) Output Mode (TC3 and 4)

This mode is used to generate a pulse-width modulated (PWM) signals with up to 16 bits of resolution. The TimerCounter 3 and 4 are cascadable to form the 16-bit PWM signal generator.

The counter counts up using the internal clock or external clock.

When a match between the up-counter and the timer register (PWREG3, PWREG4) value is detected, the logic level output from the timer F/F4 is switched to the opposite state. The counter continues counting. The logic level output from the timer F/F4 is switched to the opposite state again by the counter overflow, and the counter is cleared. The INTTC4 interrupt is generated at this time.

Two machine cycles are required for the high- or low-level pulse input to the TC3 pin. Therefore, a maximum frequency to be supplied is fc/2⁴ Hz in the NORMAL1 or IDLE1 mode, and fs/2⁴ to in the SLOW1/2 or SLEEP1/2 mode.

Since the initial value can be set to the timer F/F4 by TC4CR<TFF4>, positive and negative pulses can be generated. Upon reset, the timer F/F4 is cleared to 0.

(The logic level output from the PWM4 pin is the opposite to the timer F/F4 logic level.)

Since PWREG4 and 3 in the PWM mode are serially connected to the shift register, the values set to PWREG4 and 3 can be changed while the timer is running. The values set to PWREG4 and 3 during a run of the timer are shifted by the INTTC; interrupt request and loaded into PWREG4 and 3. While the timer is stopped, the values are shifted immediately after the programming of PWREG4 and 3. Set the lower byte (PWREG3) and upper byte (PWREG3) in this order to program PWREG4 and 3. (Programming only the lower or upper byte of the register should not be attempted.)

If executing the read instruction to PWREG4 and 3 during PWM output, the values set in the shift register is read, but not the values set in PWREG4 and 3. Therefore, after writing to the PWREG4 and 3, reading data of PWREG4 and 3 is previous value until INTTC4 is generated.

For the pin used for PWM output, the output latch of the I/O port must be set to 1.

- Note 1: In the PWM mode, program the timer register PWREG4 and 3 immediately after the INTTC4 interrupt request is generated (normally in the INTTC4 interrupt service routine.) If the programming of PWREGj and the interrupt request occur at the same time, an unstable value is shifted, that may result in generation of pulse different from the programmed value until the next INTTC4 interrupt request is generated.
- Note 2: When the timer is stopped during PWM output, the PWM4 pin holds the output status when the timer is stopped. To change the output status, program TC4CR<TFF4> after the timer is stopped. Do not program TC4CR<TFF4> upon stopping of the timer.

Example: Fixing the PWM4 pin to the high level when the TimerCounter is stopped

CLR (TC4CR).3: Stops the timer.

CLR (TC4CR).7 : Sets the PWM4 pin to the high level.

Note 3: To enter the STOP mode, stop the timer and then enter the STOP mode. If the STOP mode is entered without stopping of the timer when fc, fc/2 or fs is selected as the source clock, a pulse is output from the PWM4 pin during the warm-up period time after exiting the STOP mode.

Table 9-7 16-Bit PWM Output Mode

Source Clock			Resolution		Repeated Cycle	
NORMAL1/2, IDLE1/2 mode		SLOW1/2,				
DV7CK = 0	DV7CK = 1	SLEEP1/2 mode	fc = 16 MHz	fs = 32.768 kHz	fc = 16 MHz	fs = 32.768 kHz
fc/2 ¹¹	fs/2 ³ [Hz]	fs/2 ³ [Hz]	128 μs	244.14 μs	8.39 s	16 s
fc/2 ⁷	fc/2 ⁷	_	8 µs	- (524.3 ms	-
fc/2 ⁵	fc/2 ⁵	_	2 μs	_	131.1 ms	-
fc/2 ³	fc/2 ³	_	500ns	\(- \)	32.8 ms	-
fs	fs	fs	30.5 μs	30.5 μs	2 s	2 s
fc/2	fc/2	_	125 ns	(7/4)	8.2 ms	_
fc	fc	-	62.5 ns	$\langle \mathcal{O} \rangle$	4.1 ms	-

Example :Generating a pulse with 1-ms high-level width and a period of 32.768 ms (fc = 16.0 MHz)

Setting ports

LDW (PWREG3), 07D0H

LD (TC3CR), 33H

LD

(TC4CR), 056H

LD (TC4CR), 05EH

: Sets the pulse width.

: Sets the operating clock to fc/2³, and 16-bit PWM output mode (lower byte).

: Sets TFF4 to the initial value 0, and 16-bit PWM signal generation mode (upper byte).

: Starts the timer.

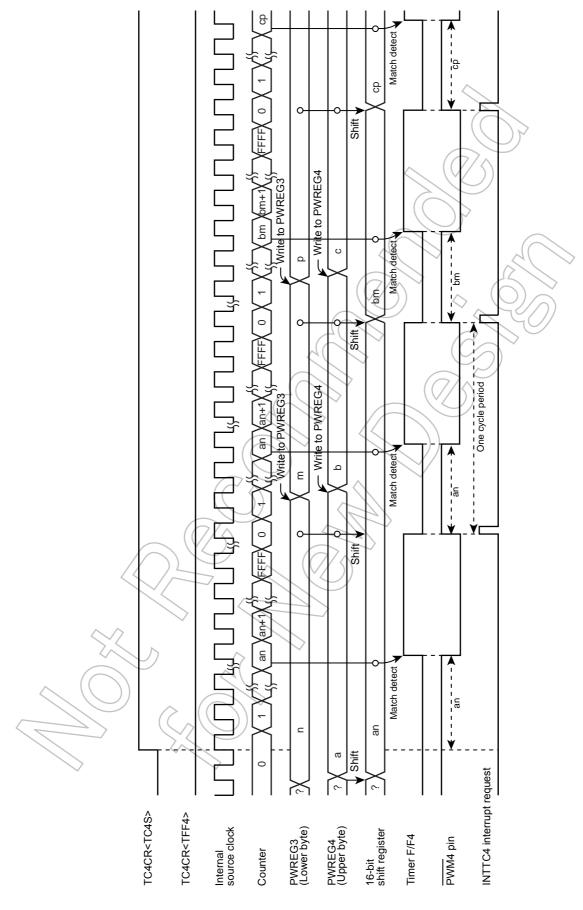


Figure 9-7 16-Bit PWM Mode Timing Chart (TC3 and TC4)

TMP86F409NG

9.3.8 16-Bit Programmable Pulse Generate (PPG) Output Mode (TC3 and 4)

This mode is used to generate pulses with up to 16-bits of resolution. The timer counter 3 and 4 are cascadable to enter the 16-bit PPG mode.

The counter counts up using the internal clock or external clock. When a match between the up-counter and the timer register (PWREG3, PWREG4) value is detected, the logic level output from the timer F/F4 is switched to the opposite state. The counter continues counting. The logic level output from the timer F/F4 is switched to the opposite state again when a match between the up-counter and the timer register (TTREG3, TTREG4) value is detected, and the counter is cleared. The INTTC4 interrupt is generated at this time.

Two machine cycles are required for the high- or low-level pulse input to the TC3 pin. Therefore, a maximum frequency to be supplied is fc/2⁴ Hz in the NORMAL1 or IDLE1 mode, and fc/2⁴ to in the SLOW1/2 or SLEEP1/2 mode.

Since the initial value can be set to the timer F/F4 by TC4CR<TFF4>, positive and negative pulses can be generated. Upon reset, the timer F/F4 is cleared to 0.

(The logic level output from the $\overline{PPG4}$ pin is the opposite to the timer F/F4.)

Set the lower byte and upper byte in this order to program the timer register. (TTREG3 \rightarrow TTREG4, PWREG3 \rightarrow PWREG4) (Programming only the upper or lower byte should not be attempted.)

For PPG output, set the output latch of the I/O port to 1.

Example: Generating a pulse with 1-ms high-level width and a period of 16.385 ms (fc = 16.0 MHz)

Setting ports : Sets the pulse width. LDW (PWREG3), 07D0H LDW (TTREG3), 8002F : Sets the cycle period : Sets the operating clock to fc/2³, and16-bit PPG mode (TC3CR), 33H LD (lower byte). Sets TFF4 to the initial value 0, and 16-bit ΙD (TC4CR), 057F PPG mode (upper byte). (TC4CR), 05FH Starts the timer. LD

Note 1: In the PPG mode, do not change the PWREG and TTREG settings while the timer is running. Since PWREG and TTREG are not in the shift register configuration in the PPG mode, the new values programmed in PWREG and TTREG are in effect immediately after programming PWREG and TTREG. Therefore, if PWREG and TTREG are changed while the timer is running, an expected operation may not be obtained.

Note 2: When the timer is stopped during PPG output, the PPG4 pin holds the output status when the timer is stopped. To change the output status, program TC4CR<TFF4> after the timer is stopped. Do not change TC4CR<TFF4> upon stopping of the timer.

Example: Fixing the PPG4 pin to the high level when the TimerCounter is stopped CLR (TC4CR).3: Stops the timer

CLR (TC4CR).7: Sets the PPG4 pin to the high level

Note 3: i = 3, 4

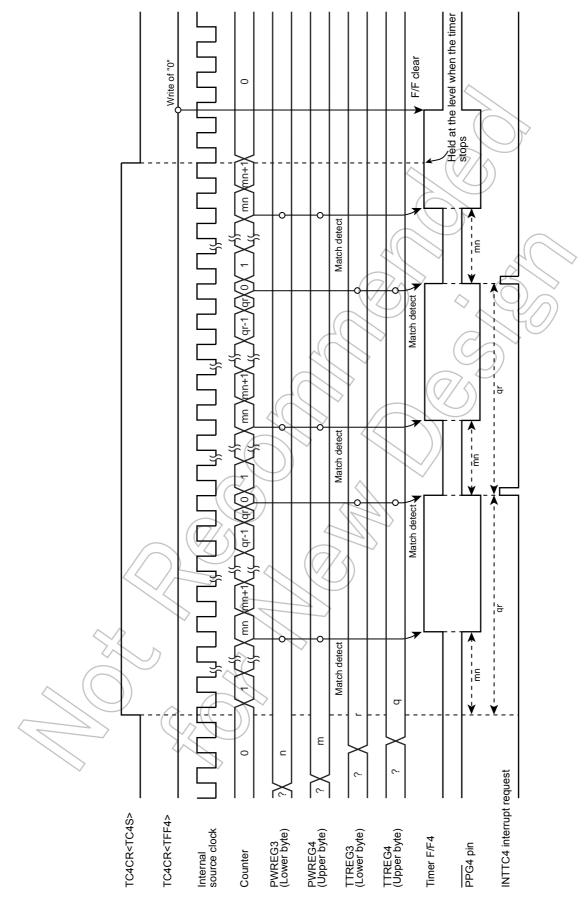


Figure 9-8 16-Bit PPG Mode Timing Chart (TC3 and TC40)

9.3.9 Warm-Up Counter Mode

In this mode, the warm-up period time is obtained to assure oscillation stability when the system clocking is switched between the high-frequency and low-frequency. The timer counter 3 and 4 are cascadable to form a 16-bit TimerCouter. The warm-up counter mode has two types of mode; switching from the high-frequency to low-frequency, and vice-versa.

Note 1: In the warm-up counter mode, fix TCiCR<TFFi> to 0. If not fixed, the PDOi, PWMi and PPGi pins may output pulses.

Note 2: In the warm-up counter mode, only upper 8 bits of the timer register TTREG4 and 3 are used for match detection and lower 8 bits are not used.

Note 3: i = 3, 4


9.3.9.1 Low-Frequency Warm-up Counter Mode (NORMAL1 → NORMAL2 → SLOW2 → SLOW1)

In this mode, the warm-up period time from a stop of the low-frequency clock is to oscillation stability is obtained. Before starting the timer, set SYSCR2<XTEN> to 1 to oscillate the low-frequency clock. When a match between the up-counter and the timer register (TTREG4, 3) value is detected after the timer is started by setting TC4CR<TC4S> to 1, the counter is cleared by generating the INTTC4 interrupt request. After stopping the timer in the INTTC4 interrupt service routine, set SYSCR2<SYSCK> to 1 to switch the system clock from the high-frequency to low-frequency, and then clear of SYSCR2<XTEN> to 0 to stop the high-frequency clock.

Table 9-8 Setting Time of Low-Frequency Warm-Up Counter Mode (fs = 32.768 kHz)

Maximum Time Setting (TTREG4, 3 = 0100H)		Maximum Time Setting (TTREG4, 3 = FF00H)
7.81 ms	(())	1.99 s

Example : After checking low-frequency clock oscillation stability with TC4 and 3, switching to the SLOW1 mode

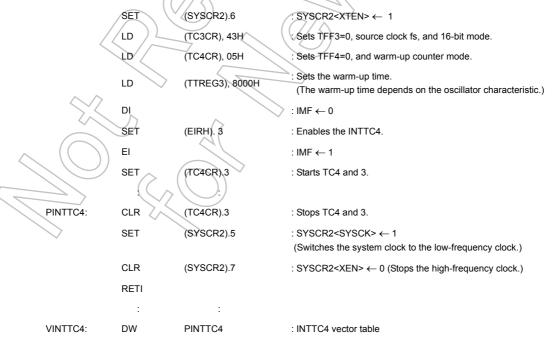


9.3.9.2 High-Frequency Warm-Up Counter Mode (SLOW1 → SLOW2 → NORMAL2 → NORMAL1)

In this mode, the warm-up period time from a stop of the high-frequency clock fc to the oscillation stability is obtained. Before starting the timer, set SYSCR2<XEN> to 1 to oscillate the high-frequency clock. When a match between the up-counter and the timer register (TTREG4, 3) value is detected after the timer is started by setting TC4CR<TC4S> to 1, the counter is cleared by generating the INTTC4 interrupt request. After stopping the timer in the INTTC4 interrupt service routine, clear SYSCR2<SYSCK> to 0 to switch the system clock from the low-frequency to high-frequency, and then SYSCR2<XTEN> to 0 to stop the low-frequency clock.

Table 9-9 Setting Time in High-Frequency Warm-Up Counter Mode

Minimum time (TTREG4, 3 = 0100H)	Maximum time (TTREG4, 3 = FF00H)
16 μs	4.08 ms

Example : After checking high-frequency clock oscillation stability with TC4 and 3, switching to the NORMAL1 mode

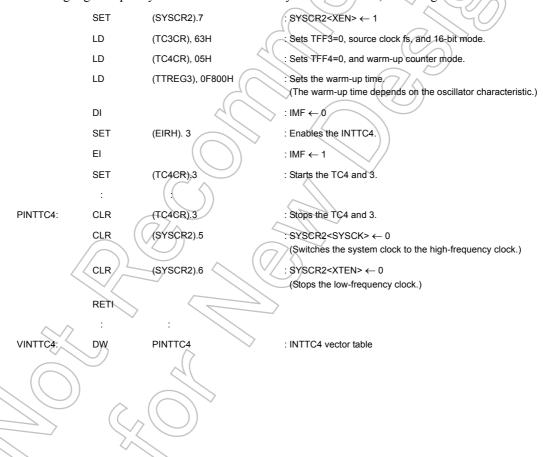

10. Asynchronous Serial interface (UART)

10.1 Configuration

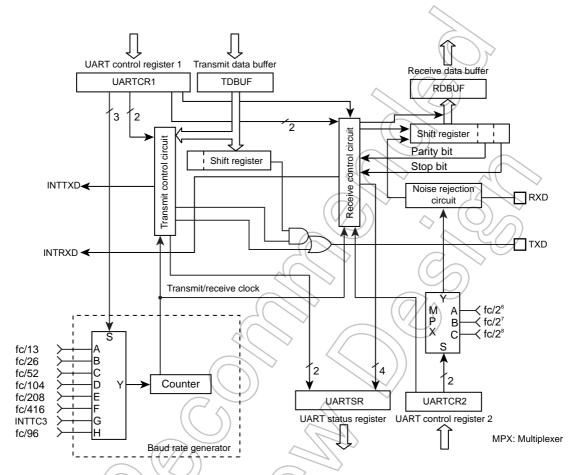


Figure 10-1 UART (Asynchronous Serial Interface)

10.2 Control

BRG

UART is controlled by the UART Control Registers (UARTCR1, UARTCR2). The operating status can be monitored using the UART status register (UARTSR).

UART Control Register1 7 UARTCR1 5 3 2 (0025H) RXE STBT EVEN PE BRG TXE (Initial value: 0000 0000) Disable TXE Transfer operation Enable 0: Disable RXE Receive operation Fnable 1. 0: 1 bit STBT Transmit stop bit length 1: 2 bits Odd-numbered parity **EVEN** Even-numbered parity 1: Even-numbered parity Write 0: No parity PΕ Parity addition only Parity 000: fc/13 [Hz] fc/26 001: 010: fc/52 011: fc/104

Note 1: When operations are disabled by setting TXE and RXE bit to "0", the setting becomes valid when data transmit or receive complete. When the transmit data is stored in the transmit data buffer, the data are not transmitted. Even if data transmit is enabled, until new data are written to the transmit data buffer, the current data are not transmitted.

fc/96

100: fc/208 101:

<u>110:</u>


fc/416

TC3 (Input INTTC3)

Note 2: The transmit clock and the parity are common to transmit and receive.

Transmit clock select

Note 3: UARTCR1<RXE> and UARTCR1</TXE> should be set to "0" before UARTCR1<BRG> is changed.

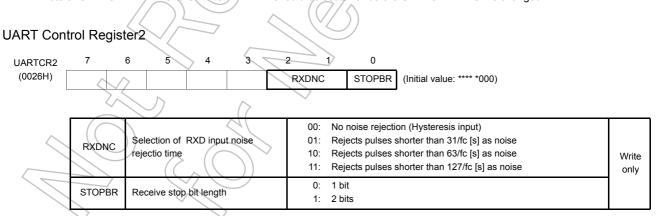

Note: When UARTCR2<RXDNC> = "01", pulses longer than 96/fc [s] are always regarded as signals; when UARTCR2<RXDNC> = "10", longer than 192/fc [s]; and when UARTCR2<RXDNC> = "11", longer than 384/fc [s].



UART Status Register

UARTSR (0025H)

7	6	5	4	3	2	1	0	
PERR	FERR	OERR	RBFL	TEND	TBEP			(Initial value: 0000 11**)

PERR	Parity error flag	O: No parity error Parity error	
FERR	Framing error flag	0: No framing error 1: Framing error	
OERR	Overrun error flag	0: No overrun error 1: Overrun error	Read
RBFL	Receive data buffer full flag	Receive data buffer empty Receive data buffer full	only
TEND	Transmit end flag	0: On transmitting 1: Transmit end	
TBEP	Transmit data buffer empty flag	Transmit data buffer full (Transmit data writing is finished) Transmit data buffer empty	

Note: When an INTTXD is generated, TBEP flag is set to "1" automatically.

UART Receive Data Buffer

RDBUF 7 6 5 4 3 2 1 0 Read only (0027H) (Initial value: 0000 0000)

UART Transmit Data Buffer

TDBUF 7 6 5 4 3 2 1 0 Write only (0027H) (Initial value: 0000 0000)

10.3 Transfer Data Format

In UART, an one-bit start bit (Low level), stop bit (Bit length selectable at high level, by UARTCR1<STBT>), and parity (Select parity in UARTCR1<PE>; even- or odd-numbered parity by UARTCR1<EVEN>) are added to the transfer data. The transfer data formats are shown as follows.

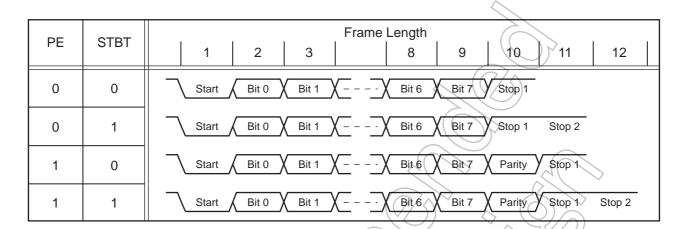


Figure 10-2 Transfer Data Format

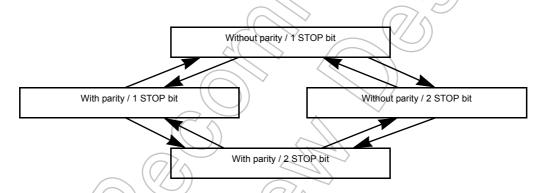


Figure 10-3 Caution on Changing Transfer Data Format

Note: In order to switch the transfer data format, perform transmit operations in the above Figure 10-3 sequence except for the initial setting.

1200

600

10.4 Transfer Rate

The baud rate of UART is set of UARTCR1<BRG>. The example of the baud rate are shown as follows.

BRG		Source Clock	
BRG	16 MHz	8 MHz	4 MHz
000	76800 [baud]	38400 [baud]	19200 [baud]
001	38400	19200	9600
010	19200	9600	4800
011	9600	4800	2400

Table 10-1 Transfer Rate (Example)

When TC3 is used as the UART transfer rate (when UARTCR1<BRG> = "110"), the transfer clock and transfer rate are determined as follows:

2400

1200

Transfer clock [Hz] = TC3 source clock [Hz] / TTREG3 setting value

4800

2400

Transfer Rate [baud] = Transfer clock [Hz] / 16

10.5 Data Sampling Method

100

101

The UART receiver keeps sampling input using the clock selected by UARTCR1<BRG> until a start bit is detected in RXD pin input. RT clock starts detecting "L" level of the RXD pin. Once a start bit is detected, the start bit, data bits, stop bit(s), and parity bit are sampled at three times of RT7, RT8, and RT9 during one receiver clock interval (RT clock). (RT0 is the position where the bit supposedly starts.) Bit is determined according to majority rule (The data are the same twice or more out of three samplings).

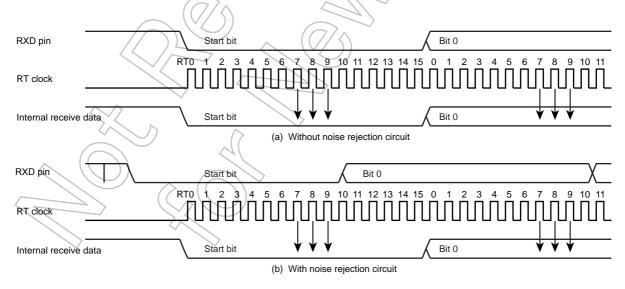


Figure 10-4 Data Sampling Method

10.6 STOP Bit Length

Select a transmit stop bit length (1 bit or 2 bits) by UARTCR1<STBT>.

10.7 Parity

Set parity / no parity by UARTCR1<PE> and set parity type (Odd- or Even-numbered) by UARTCR1<EVEN>.

10.8 Transmit/Receive Operation

10.8.1 Data Transmit Operation

Set UARTCR1<TXE> to "1". Read UARTSR to check UARTSR<TBEP> = "1", then write data in TDBUF (Transmit data buffer). Writing data in TDBUF zero-clears UARTSR<TBEP>, transfers the data to the transmit shift register and the data are sequentially output from the TXD pin. The data output include a one-bit start bit, stop bits whose number is specified in UARTCR1<STBT> and a parity bit if parity addition is specified. Select the data transfer baud rate using UARTCR1<BRG>. When data transmit starts, transmit buffer empty flag UARTSR<TBEP> is set to "1" and an INTTXD interrupt is generated.

While UARTCR1<TXE> = "0" and from when "1" is written to UARTCR1<TXE> to when send data are written to TDBUF, the TXD pin is fixed at high level.

When transmitting data, first read UARTSR, then write data in TDBUF. Otherwise, UARTSR<TBEP> is not zero-cleared and transmit does not start.

10.8.2 Data Receive Operation

Set UARTCR1<RXE> to "1". When data are received via the RXD pin, the receive data are transferred to RDBUF (Receive data buffer). At this time, the data transmitted includes a start bit and stop bit(s) and a parity bit if parity addition is specified. When stop bit(s) are received, data only are extracted and transferred to RDBUF (Receive data buffer). Then the receive buffer full flag UARTSR<RBFL> is set and an INTRXD interrupt is generated. Select the data transfer band rate using UARTCR1<BRG>.

If an overrun error (OERR) occurs when data are received, the data are not transferred to RDBUF (Receive data buffer) but discarded; data in the RDBUF are not affected.

Note: When a receive operation is disabled by setting UARTCR1<RXE> bit to "0", the setting becomes valid when data receive is completed. However, if a framing error occurs in data receive, the receive-disabling setting may not become valid. If a framing error occurs, be sure to perform a re-receive operation.

TOSHIBA

TMP86F409NG

10.9 Status Flag

10.9.1 Parity Error

When parity determined using the receive data bits differs from the received parity bit, the parity error flag UARTSR<PERR> is set to "1". The UARTSR<PERR> is cleared to "0" when the RDBUF is read after reading the UARTSR.

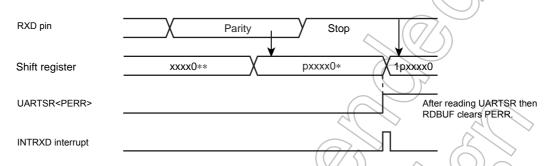


Figure 10-5 Generation of Parity Error

10.9.2 Framing Error

When "0" is sampled as the stop bit in the receive data, framing error flag UARTSR<FERR> is set to "1". The UARTSR<FERR> is cleared to "0" when the RDBUF is read after reading the UARTSR.

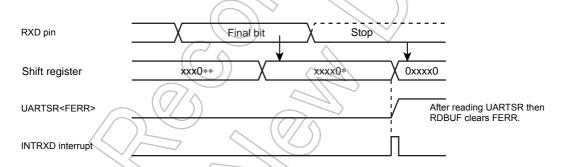


Figure 10-6 Generation of Framing Error

10.9.3 Overrun Error

When all bits in the next data are received while unread data are still in RDBUF, overrun error flag UARTSR<OERR> is set to "1". In this case, the receive data is discarded; data in RDBUF are not affected. The UARTSR<OERR> is cleared to "0" when the RDBUF is read after reading the UARTSR.

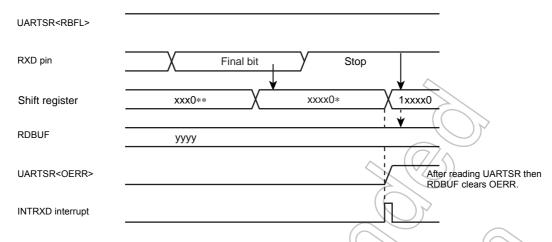


Figure 10-7 Generation of Overrun Error

Note: Receive operations are disabled until the overrun error flag UARTSR<OERR> is cleared

10.9.4 Receive Data Buffer Full

Loading the received data in RDBUF sets receive data buffer full flag UARTSR<RBFL> to "1". The UARTSR<RBFL> is cleared to "0" when the RDBUF is read after reading the UARTSR.

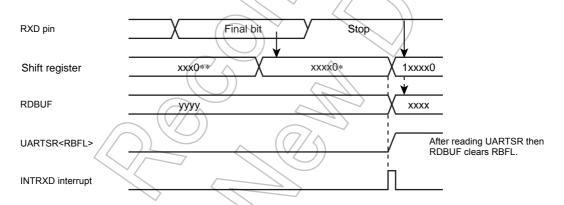


Figure 10-8 Generation of Receive Data Buffer Full

Note If the overrun error flag UARTSR<OERR> is set during the period between reading the UARTSR and reading the RDBUF, it cannot be cleared by only reading the RDBUF. Therefore, after reading the RDBUF, read the UARTSR again to check whether or not the overrun error flag which should have been cleared still remains set.

10.9.5 Transmit Data Buffer Empty

When no data is in the transmit buffer TDBUF, UARTSR<TBEP> is set to "1", that is, when data in TDBUF are transferred to the transmit shift register and data transmit starts, transmit data buffer empty flag UARTSR<TBEP> is set to "1". The UARTSR<TBEP> is cleared to "0" when the TDBUF is written after reading the UARTSR.

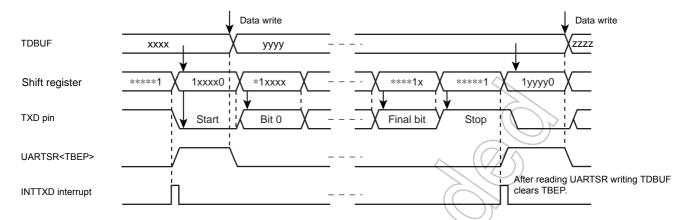


Figure 10-9 Generation of Transmit Data Buffer Empty

10.9.6 Transmit End Flag

When data are transmitted and no data is in TDBUF (UARTSR<TBEP> = "1"), transmit end flag UARTSR<TEND> is set to "1". The UARTSR<TEND> is cleared to "0" when the data transmit is stated after writing the TDBUF.

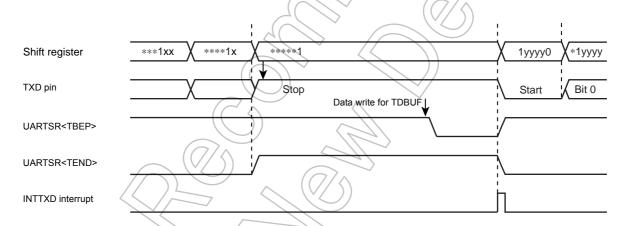


Figure 10-10 Generation of Transmit End Flag and Transmit Data Buffer Empty



11. Serial Expansion Interface (SEI)

SEI is one of the serial interfaces incorporated in the TMP86F409NG. It allows connection to peripheral devices via full-duplex synchronous communication protocols. The TMP86F409NG contain one channel of SEI.

SEI is connected with an external device through SCLK, MOSI, MISO and the terminal SS. SCLK, MOSI, MISO, and SS pins respectively are shared with P02, P03, P04 and P05. When using these ports as SCLK, MOSI, MISO, or SS pins, set the each Port Output Latch to "1".

11.1 Features

- The master outputs the shift clock for only a data transfer period.
- The clock polarity and phase are programmable.
- The data is 8 bits long.
- MSB or LSB-first can be selected.
- The programmable data and clock timing of SEI can be connected to almost all synchronous serial peripheral devices. Refer to "" 11.5 SEI Transfer Formats "".
- The transfer rate can be selected from the following four (master only):
 4 Mbps, 2 Mbps, 1 Mbps, or 250 kbps (when operating at 16 MHz)
- The error detection circuit supports the following functions:
 - a. Write collision detection: When the shift register is accessed for write during transfer
 - b. Overflow detection: When new data is received while the transfer-finished flag is set (slave only)

Note: Mode fault detect function is not supported. Make sure to set SECR<MODE> bit to "1" for disabling the Mode fault detection.

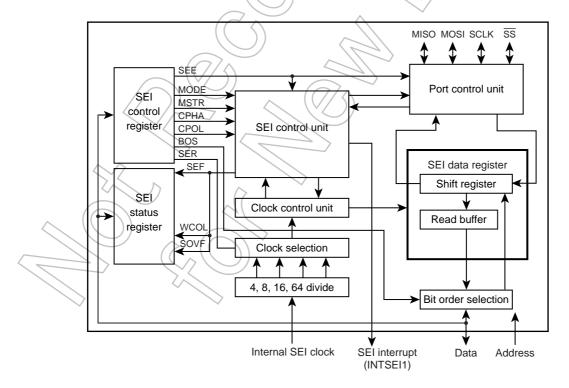


Figure 11-1 SEI (Serial Extended Interface)

SECR (002AH)

11.2 SEI Registers

The SEI interface has the SEI Control Register (SECR), SEI Status Register (SESR), and SEI Data Register (SEDR) which are used to set up the SEI system and enable/disable SEI operation.

11.2.1 SEI Control Register (SECR)

7	6	5	4	3	2	1	0	
MODE	SEE	BOS	MSTR	CPOL	СРНА	S	ER (Initial value: 0000 0100)
							7/	

Read-modify-write instruction are prohibited

	7		
MODE	Mode fault detection#1	O: Enables mode fault detection 1: Disables mode fault detection It is available in Master mode only. (Note: Make sure to set <mode> bit to "1" for disabling Mode fault detection</mode>	
SEE	SEI operation ^{#2}	Disables SEI operation Enables SEI operation	
BOS	Bit order selection	0: Transmitted beginning with the MSB (bit 7) of SEDR register 1: Transmitted beginning with the LSB (bit 0) of SEDR register	
MSTR	Mode selection ^{#3}	0: Sets SEI for slave 1: Sets SEI for master	R/W
CPOL	Clock polarity	0: Selects active-"H" clock. SCLK remains "L" when IDLE. 1: Selects active-"L" clock. SCLK remains "H" when IDLE.	
СРНА	Clock phase	Selects clock phase. For details, refer to Section "SEI Transfer Formats".	
SER	Selects SEI transfer rate	00: Divide-by-4 01: Divide-by-8 10: Divide-by-16 11: Divide-by-64	

- #1 If mode fault detection is enabled, an interrupt is generated when the MODF flag (SESR<MODF>) is set.
- #2 SEI operation can only be disabled after transfer is completed. Before the SEI can be used, the each Port Control Register and Output Latch Control must be set for the SEI function (In case P0 port, P0OUTCR and P0DR).
 - When using the SEI as the master, set the SECR<SEE> bit to "1" (to enable SEI operation) and then place transmit data in the SEDR register. This initiates transmission/reception.
- #3 Master/slave settings must be made before enabling SEI operation (This means that the SECR<MSTR> bit must first be set before setting the SECR<SEE> bit to "1").

11.2.1.1 Transfer rate

(1) Master mode (Transfer rate = fc/Internal clock divide ratio (unit : bps))

The table below shows the relationship between settings of the SER bit and transfer bit rates when the SEI is operating as the master.

Table 11-1 SEI Transfer Rate

SER	Internal Clock Divide Ratio of SEI	Transfer Rate when fc = 16 MHz
00	4 4 Mbps	
01	8	2 Mbps
10	16	1 Mbps
11	64	250 kbps



(2) Slave mode

When the SEI is operating as a slave, the serial clock is input from the master and the setting of the SER bit has no effect. The maximum transfer rate is fc/4.

Note: Take note of the following relationship between the serial clock speed and fc on the master side: 15.625 kbps < Transfer rate < fc/4 bps

Example) 15.625 kbps < Transfer rate < 4 Mbps (fc = 16 MHz at V_{DD} = 4.5 to 5.5 V) 15.625 kbps < Transfer rate < 2 Mbps (fc = 8 MHz at V_{DD} = 2.7 to 5.5 V)

11.2.2 SEI Status Register (SESR)

7 6 5 4 3 2 1 0

SR SEF WCOL SOVF - (Initial value: 0000 ****

SESR (0028H)

SEF	Transfer-finished flag ^{#1}	0: Transfer in progress 1: Transfer completed	
WCOL	Write collision error flag ^{#2}	0: No write collision error occurred 1: Write collision error occurred	Read only
SOVF	Overflow error flag (slave)#3	0; No overflow occurred 1: Overflow occurred	

- #1 The SEF flag is automatically set at completion of transfer. The SEF flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register.
- #2 The WCOL flag is automatically set by a write to the SEDR register while transfer is in progress. Writing to the SEDR register during transfer has no effect. The WCOL flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register. No interrupts are generated for reasons that the WCOL flag is set.
- #3 During master mode:

This bit does not function; its data when read is "0".

During slave mode:

The SOVF flag is automatically set when the device finishes reading the next data while the SEF flag is set. The SOVF flag thus set is automatically cleared by reading the SESR register and accessing the SEDR register. The SOVF flag also is cleared by a switchover to master mode. No interrupts are generated for reasons that the SOVF flag is set.

11.2.3 SEI Data Register (SEDR)

The SEL Data Register (SEDR) is used to send and receive data. When the SEI is set for master, data transfer is initiated by writing to this SEDR register. If the master device needs to write to the SEDR register after transfer began, always check to see by means of an interrupt or by polling that the SEF flag (SESR<SEF>) is set, before writing to the SEDR register.

 7
 6
 5
 4
 3
 2
 1
 0

 SEDR (0029H)
 SED7
 SED6
 SED5
 SED4
 SED3
 SED2
 SED1
 SED0
 R/W (Initial value: 0000 0000)

11.3 SEI Operation

During a SEI transfer, data transmission (serial shift-out) and reception (serial shift-in) are performed simultaneously. The serial clock synchronizes the timing at which information on the two serial data lines are shifted or sampled. Slave device can be selected individually using the slave select pin (\overline{SS}) pin). For unselected slave devices, data on the SEI bus cannot be taken in.

When operating as the master devices, the SS pin can be used to indicate multiple-master bus connection.

11.3.1 Controlling SEI clock polarity and phase

The SEI clock allows its phase and polarity to be selected in software from four combinations available by using two bits, CPHA and CPOL (SECR<CPHL,CPOL>).

The clock polarity is set by CPOL to select between active-high or active-low (The transfer format is unaffected).

The clock phase is set by CPHA. The master device and the slave devices to communicate with must have the same clock phase and polarity.

If multiple slave devices with different transfer formats exist on the same bus, the format can be changed to that of the slave device to which to transfer.

Table 11-2 Clock Phase and Polarity

СРНА	SEI control register (SECR 002AH) bit 2
CPOL	SEI control register (SECR 002AH) bit 3

11.3.2 SEI data and clock timing

The programmable data and clock timing of SEI allows connection to almost all synchronous serial peripheral devices. Refer to Section "11.5 SEI Transfer Formats".



11.4 SEI Pin Functions

The TMP86F409NG have four input/output pins associated with SEI transfer. The functionality of each pin depends on the SEI device's mode (master or slave).

The SCLK pin, MOSI pin and MISO pin of all SEI devices are connected with the same name pin to each other.

11.4.1 SCLK pin

The SCLK pin functions as an output pin when SEI is set for master, or as an input pin when SEI is set for slave.

When SEI is set for master, serial clock is output from the SCLK pin to external devices. After the master starts transfer, eight serial clock pulses are output from the SCLK pin only during transfer.

When SEI is set for slave, the SCLK pin functions as an input pin.

During data transfer between master and slave, device operation is synchronized by the serial clock output from the master.

When the SS pin of the slave device is "H", data is not taken in regardless of whether the serial clock is available.

For both master and slave devices, data is shifted in and out at a rising or falling edge of the serial clock, and is sampled at the opposite edge where the data is stable. The active edge is determined by SEI transfer protocols.

Note: Noise in a slave device's SCLK input may cause the device to operate erratically.

11.4.2 MISO/MOSI pins

The MISO and MOSI pins are used for serial data transmission/reception. The status of each pin during master and slave are shown in the table below.

Table 11-3 MISO/MOSI Pin Status

	MISO	MOSI
Master	Input	Output
Slave	Output	Input

Also, the SCLK, MOSI, and MISO pins can be set for open-drain by the each pin's input/output control register (In case P0 Port, Input/output Control Register is P0OUTCR).

The MISO pin of a slave device becomes an output when the SECR<SEE> bit is set to 1 (SEI operation enabled). To set the MISO pin of an inactive slave device to a high-impedance state, clear the SECR<SEE> bit to 0.

11.4.3 SS pin

The \overline{SS} pin function differently when the SEI is the master and when it is a slave.

When the SEI is a slave, this pin is used to enable the SEI transmission/reception. When the slave's \overline{SS} pin is high, the slave device ignores the serial clock from the master. Nor does it receive data from the MISO pin. When the slave's \overline{SS} pin is L, the SEI operates as slave.

11.5 SEI Transfer Formats

The transfer formats are set using CPHA and CPOL (SECR<CPHA,CPOL>). CPHA allows transfer protocols to be selected between two.

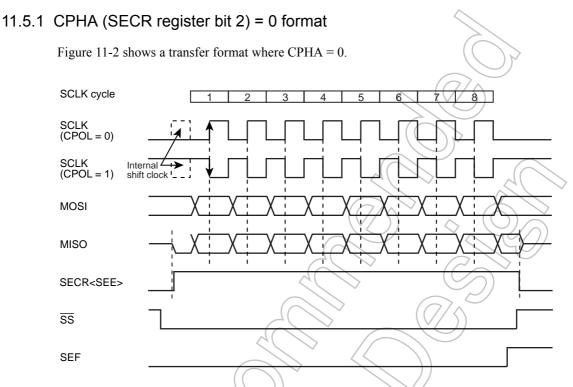


Figure 11-2 Transfer Format where CPHA = 0

Table 11-4 Transfer Format Details where CPHA = 0

	SCLK Level when not Communicating (IDLE)	Data Shift	Data Sampling
CPOL = 0	"L" level	Falling edge of transfer clock	Rising edge of transfer clock
CPOL = 1	"H" level	Rising edge of transfer clock	Falling edge of transfer clock

- In master mode, transfer is initiated by writing new data to the SEDR register. At this time, the new data changes state on the MOSI pin a half clock period before the shift clock starts pulsing. Use BOS (SECR<BOS>) to select whether the data should be shifted out beginning with the MSB or LSB. The SEF flag (SESR<SEF>) is set after the last shift cycle.
- In slave mode, writing data to the SEDR register is inhibited when the \overline{SS} pin is "L". A write during this period causes collision of writes, so that the WCOL flag (SESR<WCOL>) is set.

 Therefore, when writing data to the SEDR (SEI Data Register) after the SEF flag is set upon completion of transfer, make sure the \overline{SS} pin goes "H" again before writing the next data to the SEDR register.

Note: In slave mode, be careful not to write data while the SEF flag is set and the SS pin remains "L".

11.5.2 CPHA = 1 format

Figure 11-3 shows a transfer format where CPHA = 1.

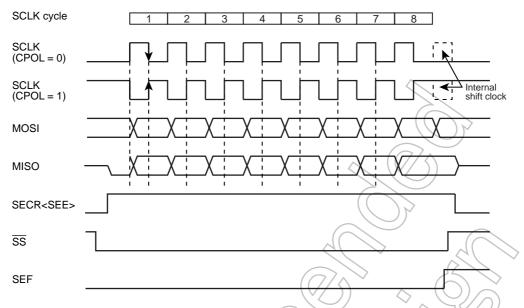


Figure 11-3 Transfer Format where CPHA = 1

Table 11-5 Transfer Format Details where CPHA = 1

	SCLK Level when Not Communicating (IDLE)	Data Shift	Data Sampling
CPOL=0	"L" level	Rising edge of transfer clock	Falling edge of transfer clock
CPOL=1	"H" level	Falling edge of transfer clock	Rising edge of transfer clock

- In master mode, transfer is initiated by writing new data to the SEDR register. The new data changes state on the MOSI pin at the first edge of the shift clock. Use BOS (SECR<BOS>) to select whether the data should be shifted out beginning with the MSB or LSB.
- In slave mode, unlike in the case of CPHA = 0 format, data can be written to the SEDR (SEI Data Register) regardless of whether the \$\overline{SS}\$ pin is "L" or "H".

 In both master and slave modes, the SEF flag (SESR<SEF>) is set after the last shift cycle.

 Writing data to the SEDR register while data transfer is in progress causes collision of writes. Therefore, wait until the SEF flag is set before writing new data to the SEDR register.

11.6 Functional Description

Figure 11-4 shows how the SEI master and slave are connected.

When the master device sends data from its MOSI pin to a slave device's MOSI pin, the slave device returns data from its MISO pin to the master device's MISO pin. This means that data are exchanged between master and slave via full-duplex communication, with data output and input operations synchronized by the same clock signal. After end of transfer, the transmit byte in 8 bit shift register is replaced with the receive byte.


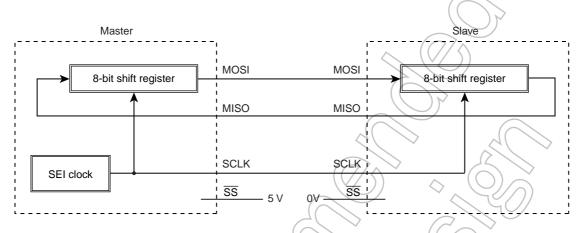


Figure 11-4 Master and Slave Connection in SEI

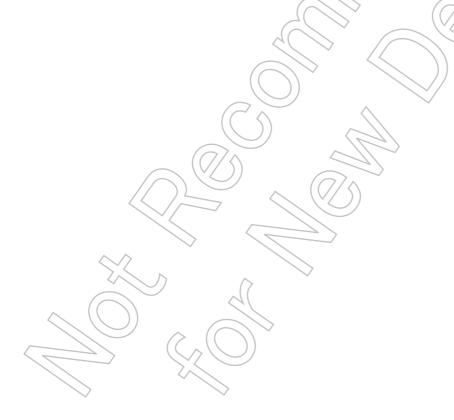

11.7 Interrupt Generation

The SEI for the TMP86F409NG uses INTSEI1. When the SESR<SEF> changes state from "0" to "1", respective interrupts is generated.

Table 11-6 SEI Interrupt

SEI interrupt channel 1 (INTSEI1) Interrupt generated for SEF

11.8 SEI System Errors

The SEI has the facility to detect following two system errors.

· Write collision error:

When the SEDR register is accessed for write during transfer.

· Overflow error:

When the new data byte is shift in before the previous data byte is read in slave mode.

11.8.1 Write collision error

Collision of writes occurs when an attempt is made to write to the SEDR register while transfer is in progress. Because the SEDR register is not configured as dual-buffers when sending data, a write to the SEDR register directly results in writing to the SEI shift register. Therefore, writing to the SEDR register while transfer is in progress causes a write collision error.

In no case is data transfer stopped in the middle, so that the write data which caused a write collision error will not be written to the shift register. Because slaves cannot control the timing at which the master starts a transfer, collision of writes normally occurs on the slave side.

Write collision errors do not normally occur on the master side because the master has the right to perform a transfer at any time, but in view of SEI logic both the master and slaves have the facility to detect write collision errors.

A write collision error tends to occur on the slave side when the master shifts out data at a speed faster than that at which the slave processes the transferred data. More specifically, a write collision error occurs in cases where the slave transfers a new value to the SEDR register when the master already started a shift cycle for the next byte.

11.8.2 Overflow error

The transfer bit rate on the SEI bus is determined by the master. A high bit rate causes a problem that a slave cannot keep abreast with transfer from the master, because the master is shifting out data faster than can be processed by the slave. The SEI module uses the SOVF flag (SESR<SOVF>) to detect that data has overflowed.

The SOVF flag is set in the following cases:

- · When the SEI module is set for slave
- When the old data byte remains to be read while a new data byte has been received

When the SOVF flag is set, the SEDR register is overwritten with a new data byte.

Note: Please carefully examine the communication processing routine and communication rate when designing your application system.

11.9 Bus Driver Protection

One method to protect the device against latch-up due to collision of the bus drivers is the use of an open-drain option. This means changing the SEI pins' CMOS outputs to the open-drain type, which is accomplished by setting the SCLK, MOSI, and MISO pins for open-drain individually by using the each Port Input/output Control Register. In this case, these pins must be provided with pull-up resistors external to the chip.

• When using the SEI pins as CMOS outputs, we recommend connecting them to the bus via resistors in order to protect the device against collision of drivers. However, be sure to select the appropriate resistance value which will not affect actual device operation (Example: 1Ω to several $k\Omega$).




12. 10-bit AD Converter (ADC)

The TMP86F409NG have a 10-bit successive approximation type AD converter.

12.1 Configuration

The circuit configuration of the 10-bit AD converter is shown in Figure 12-1.

It consists of control register ADCCR1 and ADCCR2, converted value register ADCDR1 and ADCDR2, a DA converter, a sample-hold circuit, a comparator, and a successive comparison circuit.

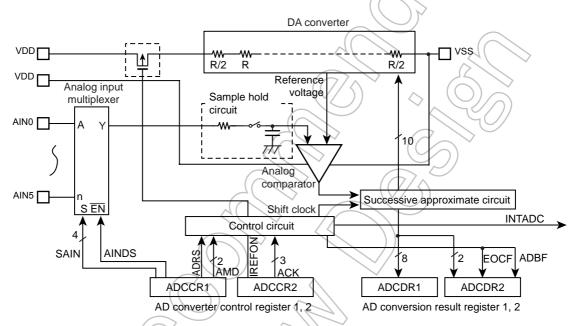

Note: Before using AD converter, set appropriate value to I/O port register conbining a analog input port. For details, see the section on "I/O ports".

Figure 12-1 10-bit AD Converter

12.2 Register configuration

The AD converter consists of the following four registers:

1. AD converter control register 1 (ADCCR1)

This register selects the analog channels and operation mode (Software start or repeat) in which to perform AD conversion and controls the AD converter as it starts operating.

2. AD converter control register 2 (ADCCR2)

This register selects the AD conversion time and controls the connection of the DA converter (Ladder resistor network).

3. AD converted value register 1 (ADCDR1)

This register used to store the digital value fter being converted by the AD converter.

4. AD converted value register 2 (ADCDR2)

This register monitors the operating status of the AD converter.

AD Converter Control Register 1

ADCCR1	7	6	5	4	3	2	0	_ (\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
(000EH)	ADRS	AM	D	AINDS		SAIN		(Initial value: 0001 0000)

ADRS	AD conversion start	0: 1: AD conversion start	
AMD	AD operating mode	00: AD operation disable 01: Software start mode 10: Reserved 11: Repeat mode	
AINDS	Analog input control	O: Analog input enable 1: Analog input disable	
SAIN	Analog input channel select	0000: AIN0 0001: AIN1 0010: AIN2 0011: AIN3 0100: AIN4 0101: AIN5 0110: Reserved 0111: Reserved 1000: Reserved 1001: Reserved 1011: Reserved 1101: Reserved 1101: Reserved 1101: Reserved 1101: Reserved 1101: Reserved 1101: Reserved 1110: Reserved 1110: Reserved 1111: Reserved	R/W

Note 1: Select analog input channel during AD converter stops (ADCDR2<ADBF> = "0").

Note 2: When the analog input channel is all use disabling, the ADCCR1<AINDS> should be set to "1".

Note 3: During conversion, Do not perform port output instruction to maintain a precision for all of the pins because analog input port use as general input port. And for port near to analog input, Do not input intense signaling of change.

Note 4: The ADCCR1<ADRS> is automatically cleared to "0" after starting conversion.

Note 5: Do not set ADCCR1<ADRS> newly again during AD conversion. Before setting ADCCR1<ADRS> newly again, check ADCDR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).

Note 6: After STOP or SLOW/SLEEP mode are started, AD converter control register1 (ADCCR1) is all initialized and no data can be written in this register. Therfore, to use AD converter again, set the ADCCR1 newly after returning to NORMAL1 or NORMAL2 mode.

AD Converter Control Register 2

ADCCR2	7	6	5	4	3	2	1	0	
(000FH)			IREFON	"1"		ACK		"0"	(Initial value: **0* 000*)

IREFON	DA converter (Ladder resistor) connection control	0: 1:	Connected only during AD conversion Always connected	
ACK	AD conversion time select (Refer to the following table about the conversion time)	000: 001: 010: 011: 100: 101: 110: 111:	39/fc Reserved 78/fc 156/fc 312/fc 624/fc 1248/fc Reserved	R/W

Note 1: Always set bit0 in ADCCR2 to "0" and set bit4 in ADCCR2 to "1"

Note 2: When a read instruction for ADCCR2, bit6 to 7 in ADCCR2 read in as undefined data.

Note 3: After STOP or SLOW/SLEEP mode are started, AD converter control register2 (ADCCR2) is all initialized and no data can be written in this register. Therfore, to use AD converter again, set the ADCCR2 newly after returning to NORMAL1 or NORMAL2 mode.

Table 12-1 ACK setting and Conversion time

			/					
Condition ACK	Conversion time	16 MHz	8 MHz	4 MHz	2 MHz	10 MHz	5 MHz	2.5 MHz
000	39/fc	-		//	19.5 μs))-	-	15.6 μs
001			(())	Rese	rved	//		
010	78/fc	- (19.5 μs	39.0 μs	-	15.6 μs	31.2 μs
011	156/fc	- ((19.5 μs	39.0 μs	78.0 μs	15.6 μs	31.2 μs	62.4 μs
100	312/fc	19.5 μs	39.0 μs	78.0 μs	156.0 μs	31.2 μs	62.4 μs	124.8 μs
101	624/fc	39.0 μs	78.0 μs	156.0 μs	- 1)	62.4 μs	124.8 μs	-
110	1248/fc	78.0 μs	156.0 μs	((/-//\$)	-	124.8 μs	-	-
111				Rese	rved			

Note 1: Setting for "-" in the above table are inhibited. fc: High Frequency oscillation clock [Hz]

Note 2: Set conversion time setting should be kept more than the following time by Analog reference voltage (VAREF).

- VAREF = 4.5 to 5.5 V

15.6 μs and more

- VAREF = 2.7 to 5.5 V

31.2 μs and more

AD Converted value Register 1

ADCDR1	7	6	5	4	3	2	1	0	_
(0021H)	AD09	AD08	AD07	AD06	AD05	AD04	AD03	AD02	(Initial value: 0000 0000)

AD Converted value Register 2

ADCDR2	7	6	5	4	3	2	1	0	
(0020H)	AD01	AD00	EOCF	ADBF					(Initial value: 0000 ****)

EOCF	AD conversion end flag	Before or during conversion Conversion completed	Read
ADBF	AD conversion BUSY flag	During stop of AD conversion During AD conversion	only

Note 1: The ADCDR2<EOCF> is cleared to "0" when reading the ADCDR1. Therfore, the AD conversion result should be read to ADCDR2 more first than ADCDR1.

Note 2: The ADCDR2<ADBF> is set to "1" when AD conversion starts, and cleared to "0" when AD conversion finished. It also is cleared upon entering STOP mode or SLOW mode .

Note 3: If a read instruction is executed for ADCDR2, read data of bit3 to bit0 are unstable.

12.3 Function

12.3.1 Software Start Mode

After setting ADCCR1<AMD> to "01" (software start mode), set ADCCR1<ADRS> to "1". AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is thereby started.

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDR1, ADCDR2) and at the same time ADCDR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

ADRS is automatically cleared after AD conversion has started. Do not set ADCCR1<ADRS> newly again (Restart) during AD conversion. Before setting ADRS newly again, check ADCDR2<EOCF> to see that the conversion is completed or wait until the interrupt signal (INTADC) is generated (e.g., interrupt handling routine).

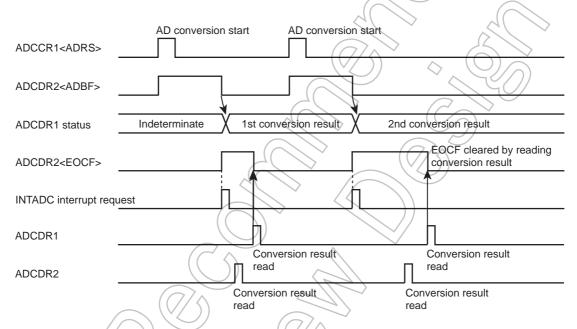


Figure 12-2 Software Start Mode

12.3.2 Repeat Mode

AD conversion of the voltage at the analog input pin specified by ADCCR1<SAIN> is performed repeatedly. In this mode, AD conversion is started by setting ADCCR1<ADRS> to "1" after setting ADCCR1<AMD> to "11" (Repeat mode).

After completion of the AD conversion, the conversion result is stored in AD converted value registers (ADCDR1, ADCDR2) and at the same time ADCDR2<EOCF> is set to 1, the AD conversion finished interrupt (INTADC) is generated.

In repeat mode, each time one AD conversion is completed, the next AD conversion is started. To stop AD conversion, set ADCCR1<AMD> to "00" (Disable mode) by writing 0s. The AD convert operation is stopped immediately. The converted value at this time is not stored in the AD converted value register.

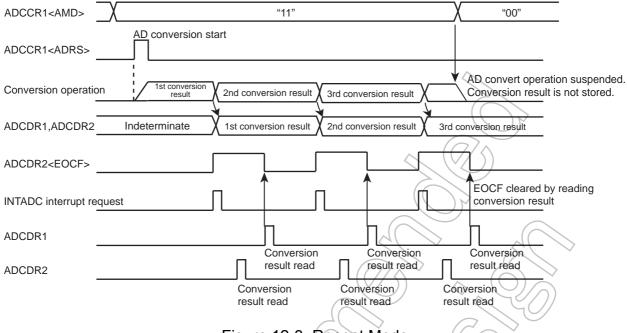


Figure 12-3 Repeat Mode

12.3.3 Register Setting

- 1. Set up the AD converter control register 1 (ADCCR1) as follows:
 - Choose the channel to AD convert using AD input channel select (SAIN).
 - Specify analog input enable for analog input control (AINDS).
 - Specify AMD for the AD converter control operation mode (software or repeat mode).
- 2. Set up the AD converter control register 2 (ADCCR2) as follows:
 - Set the AD conversion time using AD conversion time (ACK). For details on how to set the conversion time, refer to Figure 12-1 and AD converter control register 2.
 - Choose IREFON for DA converter control.
- 3. After setting up (1) and (2) above, set AD conversion start (ADRS) of AD converter control register 1 (ADCCR1) to "1". If software start mode has been selected, AD conversion starts immediately.
- 4. After an elapse of the specified AD conversion time, the AD converted value is stored in AD converted value register 1 (ADCDR1) and the AD conversion finished flag (EOCF) of AD converted value register 2 (ADCDR2) is set to "1", upon which time AD conversion interrupt INTADC is generated
- 5. EOCF is cleared to "0" by a read of the conversion result. However, if reconverted before a register read, although EOCF is cleared the previous conversion result is retained until the next conversion is completed.

Example :After selecting the conversion time 19.5 µs at 16 MHz and the analog input channel AIN3 pin, perform AD conversion once. After checking EOCF, read the converted value, store the lower 2 bits in address 0009EH nd store the upper 8 bits in address 0009FH in RAM. The operation mode is software start mode.

	: (port setting)	:	;Set port register approrriately before setting AD converter registers.
	:	:	(Refer to section I/O port in details)
	LD	(ADCCR1), 00100011B	; Select AIN3
	LD	(ADCCR2), 11011000B	;Select conversion time(312/fc) and operation mode
	SET	(ADCCR1).7	; ADRS = J(AD conversion start)
SLOOP:	TEST	(ADCDR2) . 5	; EOCF= 1 ?
	JRS	T, SLOOP	
	LD	A , (ADCDR2)	; Read result data
	LD	(9EH) , A	
	LD	A , (ADCDR1)	; Read result data
	LD	(9FH), A	
			_ //

12.4 STOP/SLOW Modes during AD Conversion

When standby mode (STOP or SLOW mode) is entered forcibly during AD conversion, the AD convert operation is suspended and the AD converter is initialized (ADCCR1 and ADCCR2 are initialized to initial value). Also, the conversion result is indeterminate. (Conversion results up to the previous operation are cleared, so be sure to read the conversion results before entering standby mode (STOP or SLOW mode).) When restored from standby mode (STOP or SLOW mode), AD conversion is not automatically restarted, so it is necessary to restart AD conversion. Note that since the analog reference voltage is automatically disconnected, there is no possibility of current flowing into the analog reference voltage.

12.5 Analog Input Voltage and AD Conversion Result

The analog input voltage is corresponded to the 10-bit digital value converted by the AD as shown in Figure 12-4.

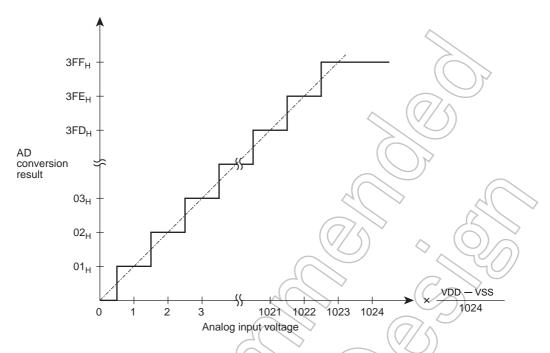


Figure 12-4 Analog Input Voltage and AD Conversion Result (Typ.)



12.6 Precautions about AD Converter

12.6.1 Analog input pin voltage range

Make sure the analog input pins (AIN0 to AIN5) are used at voltages within VDD to VSS. If any voltage outside this range is applied to one of the analog input pins, the converted value on that pin becomes uncertain. The other analog input pins also are affected by that.

12.6.2 Analog input shared pins

The analog input pins (AIN0 to AIN5) are shared with input/output ports. When using any of the analog inputs to execute AD conversion, do not execute input/output instructions for all other ports. This is necessary to prevent the accuracy of AD conversion from degrading. Not only these analog input shared pins, some other pins may also be affected by noise arising from input/output to and from adjacent pins.

12.6.3 Noise Countermeasure

The internal equivalent circuit of the analog input pins is shown in Figure 12-5. The higher the output impedance of the analog input source, more easily they are susceptible to noise. Therefore, make sure the output impedance of the signal source in your design is $5 \text{ k}\Omega$ or less. Toshiba also recommends attaching a capacitor external to the chip.

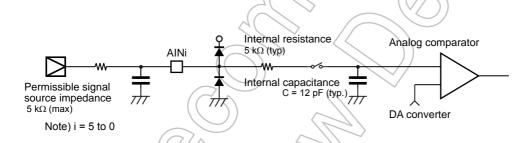



Figure 12-5 Analog Input Equivalent Circuit and Example of Input Pin Processing



TOSHIBA TMP86F409NG

13. Key-on Wakeup (KWU)

TMP86F409NG have four pins P34 to P37, in addition to the P20 (INT5/STOP) pin, that can be used to exit STOP mode.

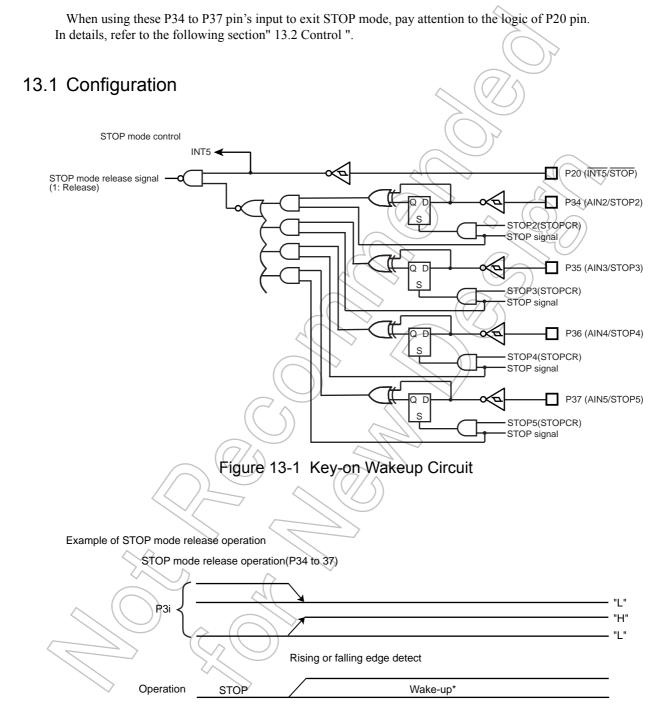

^{*:} The time required for wakeup from releasing STOP mode includes the warming-up time. For details, refer to section "Control of Operation Modes".

Figure 13-2 Example of STOP Mode Release Operation

13.2 Control

The P34 to P37 (STOP2 to STOP5) pins can individually be disabled/enabled using Key-on Wakeup Control Register (STOPCR). Before these pins can be used to place the device out of STOP mode, they must be set for input using the P3 Port Input/Output Register (P3CR), P3Port Output Latch (P3DR), AD Control Register (ADCCR1).

STOP mode can be entered by setting up the System Control Register (SYSCR1), and can be released by detecting the active edge (rising or falling edge) on any STOP2 to STOP5 pins which are available for STOP mode release.

Note: When using Key-on Wakeup function, select level mode (set SYSCR1<RELM> to "1") for selection of STOP mode release method.

Although P20 pin is shared with $\overline{\text{INT5}}$ and $\overline{\text{STOP}}$ pin input, use mainly $\overline{\text{STOP}}$ pin to release STOP mode. This is because Key-on Wakeup function is comprised of $\overline{\text{STOP}}$ pin and STOP2 to STOP5 pins as shown in the configuration diagram.

- Note 1: When STOP mode release by an edge on STOP pin, follow one of the two methods described below.
 - (1) Disable all of STOP2 to 5 pin inputs.
 - (2) Fix STOP2 to 5 pin inputs high or low level.
- Note 2: When using key-on wakeup (STOP2 to 5 pins) to exit STOP mode, make sure STOP pin is held low and STOP2 to 5 pin inputs are held high or low level, because STOP mode release signal is created by ORing the STOP pin input and the STOP2 to 5 pin input together.

Key-on Wakeup STOP Mode Control Register

STOPCR	7	6	5	4	3 2 1	0
(0031H)	STOP5	STOP4	STOP3	STOP2		(Initial value : 0000 ****)

STOP2	STOP mode release by P34 (STOP2)	0: Disable 1: Enable	
STOP3	STOP mode release by P35 (STOP3)	0: Disable 1: Enable	Write
STOP4	STOP mode release by P36 (STOP4)	0: Disable 1: Enable	only
STOP5	STOP mode release by P37 (STOP5)	0: Disable 1: Enable	

<example mode="" of="" release="" stop=""> The device is released from STOP mode in the following condition.</example>										
P20(STOP) P3x										
STOP mode release using P3x (STOP2 to 5)	Level detection mode: Low Edge detection mode: Disable	Edge detection Rising or falling edge								
STOP mode release using P20 (STOP)	Level detection mode: High Edge detection mode: Rising edge	STOPCR: inhibited								

Note: Assertion of the STOP mode release signal is not recognized within three instruction cycles after executing the STOP instruction.

14. Flash Memory

TMP86F409NG has 4096byte flash memory (address: F000H to FFFFH). The write and erase operations to the flash memory are controlled in the following three types of mode.

- MCU mode

The flash memory is accessed by the CPU control in the MCU mode. This mode is used for software bug correction and firmware change after shipment of the device since the write operation to the flash memory is available by retaining the application behavior.

- Serial PROM mode

The flash memory is accessed by the CPU control in the serial PROM mode. Use of the serial interface (UART) enables the flash memory to be controlled by the small number of pins. TMP86F409NG in the serial PROM mode supports on-board programming which enables users to program flash memory after the microcontroller is mounted on a user board.

- Parallel PROM mode


The parallel PROM mode allows the flash memory to be accessed as a stand-alone flash memory by the program writer provided by the third party. High-speed access to the flash memory is available by controlling address and data signals directly. For the support of the program writer, please ask Toshiba sales representative.

In the MCU and serial PROM modes, the flash memory control register (FLSCR) is used for flash memory control. This chapter describes how to access the flash memory using the flash memory control register (FLSCR) in the MCU and serial PROM modes.



14.1 Flash Memory Control

The flash memory is controlled via the flash memory control register (FLSCR) and flash memory stanby control resister (FLSCR).

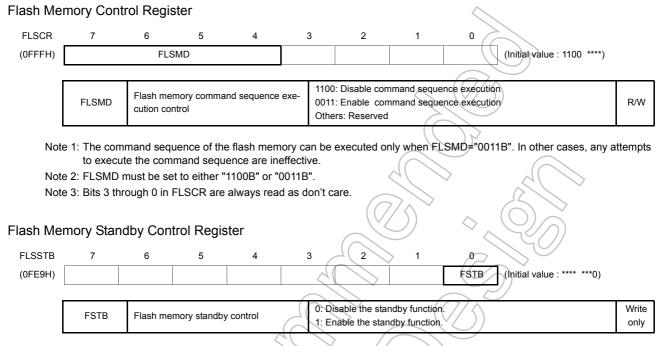

- Note 1: When FSTB is set to 1, do not execute the read/write instruction to the flash memory because there is a possibility that the expected data is not read or the program is not operated correctly. If executing the read/write instruction, FSTB is initialized to 0 automatically.
- Note 2: If an interrupt is issued when FSTB is set to 1, FSTB is initialized to 0 automatically and then the vector area of the flash memory is read.
- Note 3: If the IDLE0/1/2, SLEEP0/1/2 or STOP mode is activated when FSTB is set to 1, FSTB is initialized to 0 automatically. In the IDLE0/1/2, SLEEP0/1/2 or STOP mode, the standby function operates regardless of FSTB setting.

14.1.1 Flash Memory Command Sequence Execution Control (FLSCR<FLSMD>)

The flash memory can be protected from inadvertent write due to program error or microcontroller misoperation. This write protection feature is realized by disabling flash memory command sequence execution via the flash memory control register (write protect). To enable command sequence execution, set FLSCR<FLSMD> to "0011B". To disable command sequence execution, set FLSCR<FLSMD> to "1100B". After reset, FLSCR<FLSMD> is initialized to "1100B" to disable command sequence execution. Normally, FLSCR<FLSMD> should be set to "1100B" except when the flash memory needs to be written or erased.

14.1.2 Flash Memory Standby Control (FLSSTB<FSTB>)

Low power consumption is enabled by cutting off the steady-state current of the flash memory. In the IDLE0/1/2, SLEEP0/1/2 or STOP mode, the steady-state current of the flash memory is cut off automatically.

When the program is executed in the RAM area (without accessing the flash memory) in the NORMAL 1/2 or SLOW1/2 mode, the current can be cut off by the control of the register. To cut off the steady-state current of the flash memory, set FLSSTB<FSTB> to "1" by the control program in the RAM area. The procedures for controlling the FLSSTB register are explained below.

(Steps1 and 2 are controlled by the program in the flash memory, and steps 3 through 8 are controlled by the write control program executed in the RAM area.)

- 1. Transfer the control program of the FLSSTB register to the RAM area.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF = "0").
- 4. Set FLSSTB<FSTB> to "1".
- 5. Execute the user program.
- 6. Repeat step 5 until the return request to the flash memory is detected.
- 7. Set FLSSTB<FSTB> to "0".
- 8. Jump to the flash memory area.
- Note 1: The standby function is not operated by setting FLSSTB<FSTB> with the program in the flash memory. You must set FLSSTB<FSTB> by the program in the RAM area.
- Note 2: To use the standby function by setting FLSSTB<FSTB> to "1" with the program in the RAM area, FLSSTB<FSTB> must be set to "0" by the program in the RAM area before returning the program control to the flash memory. If the program control is returned to the flash memory with FLSSTB<FSTB> set to "1", the program may misoperate and run out of control.

14.2 Command Sequence

The command sequence in the MCU and the serial PROM modes consists of six commands (JEDEC compatible), as shown in Table 14-1. Addresses specified in the command sequence are recognized with the lower 12 bits (excluding BA, SA, and FF7FH used for read protection). The upper 4 bits are used to specify the flash memory area,

Table 14-1 Command Sequence

	Command	1st Bus Write Cycle		2nd Bus Write Cycle		3rd Bus Write Cycle		4th Bus Write Cycle		5th Bus Write Cycle		6th Bus Write Cycle	
	Sequence	Address	Data	Address	Data	Address	Data	Address	Data	Address	Data	Address	Data
1	Byte program	555H	AAH	AAAH	55H	555H	АОН	BA (Note 1)	Data (Note 1)	> -	-	-	-
2	Sector Erase (4-kbyte Erase)	555H	AAH	AAAH	55H	555H	80H	555H	AAH	AAAH	55H	SA (Note 2)	30H
3	Chip Erase (All Erase)	555H	AAH	AAAH	55H	555H	80H	555H	AAH	AAAH	55H	555H	10H
4	Product ID Entry	555H	AAH	AAAH	55H	555H	90H		- <	7-10	(/ <u>-</u> /)	-	-
-	Product ID Exit	XXH	F0H	-	-	-	7(-//	> -	- /	3 <u>-</u> //		-	-
5	Product ID Exit	555H	AAH	AAAH	55H	555H	F0H	-	- ((-	-	-
6	Read Protect	555H	AAH	AAAH	55H	555H	A5H	FF7FH	00H		-	-	-

Note 1: Set the address and data to be written.

Note 2: The area to be erased is specified with the upper 4 bits of the address.

14.2.1 Byte Program

This command writes the flash memory for each byte unit. The addresses and data to be written are specified in the 4th bus write cycle. Each byte can be programmed in a maximum of $40~\mu s$. The next command sequence cannot be executed until the write operation is completed. To check the completion of the write operation, perform read operations repeatedly until the same data is read twice from the same address in the flash memory. During the write operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

Note: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

14.2.2 Sector Erase (4-kbyte Erase)

This command erases the flash memory in units of 4 kbytes. The flash memory area to be erased is specified by the upper 4 bits of the 6th bus write cycle address. For example, to erase 4 kbytes from F000H to FFFFH, specify one of the addresses in F000H-FFFFH as the 6th bus write cycle. The sector erase command is effective only in the MCU and serial PROM modes, and it cannot be used in the parallel PROM mode.

A maximum of 30 ms is required to erase 4 kbytes. The next command sequence cannot be executed until the erase operation is completed. To check the completion of the erase operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the erase operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

14.2.3 Chip Erase (All Erase)

This command erases the entire flash memory in approximately 30 ms. The next command sequence cannot be executed until the erase operation is completed. To check the completion of the erase operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the erase operation, any consecutive attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1). After the chip is erased, all bytes contain FFH.

14.2.4 Product ID Entry

This command activates the Product ID mode. In the Product ID mode, the vendor ID, the flash ID, and the read protection status can be read from the flash memory.

Table 14-2 Values To Be Read in the Product ID Mode

Address	Meaning	Read Value
F000H	Vendor ID	98H
F001H	Flash macro ID	41H
F002H	Flash size	0EH: 60 kbytes 0BH: 48 kbytes 07H: 32 kbytes 05H: 24 kbytes 03H: 16 kbytes 01H: 8 kbytes 00H: 4 kbytes
FF7FH	Read protection status	FFH: Read protection disabled Other than FFH: Read protection enabled

Note: The value at address F002H (flash size) depends on the size of flash memory incorporated in each product. For example, if the product has 60-kbyte flash memory, "0EH" is read from address F002H.

14.2.5 Product ID Exit

This command is used to exit the Product ID mode.

14.2.6 Read Protect

This command enables the read protection setting in the flash memory. When the read protection is enabled, the flash memory cannot be read in the parallel PROM mode. In the serial PROM mode, the flash write and RAM loader commands cannot be executed.

To disable the read protection setting, it is necessary to execute the chip erase command sequence. Whether or not the read protection is enabled can be checked by reading FF7FH in the Product ID mode. For details, see Table 14-2.

It takes a maximum of $40 \mu s$ to set read protection in the flash memory. The next command sequence cannot be executed until this operation is completed. To check the completion of the read protect operation, perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. During the read protect operation, any attempts to read from the same address is reversed bit 6 of the data (toggling between 0 and 1).

14.3 Toggle Bit (D6)

After the byte program, chip erase, and read protect command sequence is executed, any consecutive attempts to read from the same address is reversed bit 6 (D6) of the data (toggling between 0 and 1) until the operation is completed. Therefore, this toggle bit provides a software mechanism to check the completion of each operation. Usually perform read operations repeatedly for data polling until the same data is read twice from the same address in the flash memory. After the byte program, chip erase, or read protect command sequence is executed, the initial read of the toggle bit always produces a "1".

14.4 Access to the Flash Memory Area

When the write, erase and read protections are set in the flash memory, read and fetch operations cannot be performed in the entire flash memory area. Therefore, to perform these operations in the entire flash memory area, access to the flash memory area by the control program in the BOOTROM or RAM area. (The flash memory program cannot write to the flash memory.) The serial PROM or MCU mode is used to run the control program in the BOOTROM or RAM area.

- Note 1: The flash memory can be written or read for each byte unit. Erase operations can be performed either in the entire area or in units of 4 kbytes, whereas read operations can be performed by an one transfer instruction. However, the command sequence method is adopted for write and erase operations, requiring several-byte transfer instructions for each operation.
- Note 2: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

14.4.1 Flash Memory Control in the Serial PROM Mode

The serial PROM mode is used to access to the flash memory by the control program provided in the BOOTROM area. Since almost of all operations relating to access to the flash memory can be controlled simply by the communication data of the serial interface (UART), these functions are transparent to the user. For the details of the serial PROM mode, see "Serial PROM Mode."

To access to the flash memory by using peripheral functions in the serial PROM mode, run the RAM loader command to execute the control program in the RAM area. The procedures to execute the control program in the RAM area is shown in "14.4.1.1 How to write to the flash memory by executing the control program in the RAM area (in the RAM loader mode within the serial PROM mode) ".

14.4.1.1 How to write to the flash memory by executing the control program in the RAM area (in the RAM loader mode within the serial PROM mode)

(Steps 1 and 2 are controlled by the BOOTROM, and steps 3 through 9 are controlled by the control program executed in the RAM area.)

- 1. Transfer the write control program to the RAM area in the RAM loader mode.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF←"0").
- 4. Set FLSCR<FLSMD> to "0011B" (to enable command sequence execution).
- 5. Execute the erase command sequence.
- 6. Read the same flash memory address twice.

(Repeat step 6 until the same data is read by two consecutive reads operations.)

- 7. Execute the write command sequence.
- 8. Read the same flash memory address twice.
 (Repeat step 8 until the same data is read by two consecutive reads operations.)
- 9. Set FLSCR<FLSMD> to "1100B" (to disable command sequence execution).
- Note 1: Before writing to the flash memory in the RAM area, disable interrupts by setting the interrupt master enable flag (IMF) to "0". Usually disable interrupts by executing the DI instruction at the head of the write control program in the RAM area.
- Note 2: Since the watchdog timer is disabled by the BOOTROM in the RAM loader mode, it is not required to disable the watchdog timer by the RAM loader program.

Example :After chip erasure, the program in the RAM area writes data 3FH to address F000H.

	DI		: Disable interrupts (IMF←"0")
	LD	(FLSCR),0011_1000B	: Enable command sequence execution.
	LD	IX,0F555H	
	LD	IY,0FAAAH	
	LD	HL,0F000H	
; #### Flash Memo	ory Chip erase P	rocess ####	
	LD	(IX),0AAH	: 1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),80H	: 3rd bus write cycle
	LD	(IX),0AAH	: 4th bus write cycle
	LD	(IY),55H	: 5th bus write cycle
	LD	(IX),10H	: 6th bus write cycle
sLOOP1:	LD	W,(IX)	
	CMP	W,(IX)	
	JR	NZ,sLOOP1	: Loop until the same value is read.
; #### Flash Memo	ory Write Process	s ####	
	LD	(IX),0AAH	: 1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),0A0H	: 3rd bus write cycle
	LD	(HL),3FH	: 4th bus write cycle, (F000H)=3FH
sLOOP2:	LD	W,(HL)	70
<	СМР	W,(HL)	
	JR	NZ,sLOOP2	: Loop until the same value is read.
</td <td>LD</td> <td>(FLSCR),1100_1000B</td> <td>: Disable command sequence execution.</td>	LD	(FLSCR),1100_1000B	: Disable command sequence execution.
sLOOP3:	JP	sLOOP3	
	$\langle \rangle$		
	52		
	~ \	\rightarrow	

14.4.2 Flash Memory Control in the MCU mode

In the MCU mode, write operations are performed by executing the control program in the RAM area. Before execution of the control program, copy the control program into the RAM area or obtain it from the external using the communication pin. The procedures to execute the control program in the RAM area in the MCU mode are described below.

14.4.2.1 How to write to the flash memory by executing a user write control program in the RAM area (in the MCU mode)

(Steps 1 and 2 are controlled by the program in the flash memory, and steps 3 through 11 are controlled by the control program in the RAM area.)

- 1. Transfer the write control program to the RAM area.
- 2. Jump to the RAM area.
- 3. Disable (DI) the interrupt master enable flag (IMF←"0")
- 4. Disable the watchdog timer, if it is used.
- 5. Set FLSCR<FLSMD> to "0011B" (to enable command sequence execution).
- 6. Execute the erase command sequence.
- 7. Read the same flash memory address twice.

 (Repeat step 7 until the same data is read by two consecutive read operations.)
- 8. Execute the write command sequence.
- 9. Read the same flash memory address twice.

 (Repeat step 9 until the same data is read by two consecutive read operations.)
- 10. Set FLSCR<FLSMD> to "1100B" (to disable command sequence execution).
- 11. Jump to the flash memory area.
- Note 1: Before writing to the flash memory in the RAM area, disable interrupts by setting the interrupt master enable flag (IMF) to "0". Usually disable interrupts by executing the DI instruction at the head of the write control program in the RAM area.
- Note 2. When writing to the flash memory, do not intentionally use non-maskable interrupts (the watchdog timer must be disabled if it is used). If a non-maskable interrupt occurs while the flash memory is being written, unexpected data is read from the flash memory (interrupt vector), resulting in malfunction of the microcontroller.

Example :After sector erasure (E000H-EFFFH), the program in the RAM area writes data 3FH to address E000H.

	DI		: Disable interrupts (IMF←"0")
	LD	(WDTCR2),4EH	: Clear the WDT binary counter.
	LDW	(WDTCR1),0B101H	: Disable the WDT.
	LD	(FLSCR),0011_1000B	: Enable command sequence execution.
	LD	IX,0F555H	$\langle \langle \langle \rangle \rangle \rangle$
	LD	IY,0FAAAH	
	LD	HL,0E000H	
; #### Flash Memo	ry Sector Erase	Process ####	
	LD	(IX),0AAH	: 1st bus write cycle
	LD	(IY),55H	: 2nd bus write cycle
	LD	(IX),80H	: 3rd bus write cycle
	LD	(IX),0AAH	:4th bus write cycle
	LD	(IY),55H	:5th bus write cycle
	LD	(HL),30H	: 6th bus write cycle
sLOOP1:	LD	W,(IX)	
	CMP	W,(IX)	
	JR	NZ,sLOOP1	: Loop until the same value is read.
; #### Flash Memo	ry Write Process	s ####	
	LD	(IX),0AAH	: 1st bus write cycle
,	LD	(IY),55H	: 2nd bus write cycle
	LD)	(IX),0A0H	: 3rd bus write cycle
	LD 01	(HL),3FH	: 4th bus write cycle, (1000H)=3FH
sLOOP2:	LD	W,(HL)	
7/	CMP	W,(HL)	
	JR	NZ,sLOOP2	: Loop until the same value is read.
	LD	(FLSCR),1100_1000B	: Disable command sequence execution.
	JP	XXXXH	: Jump to the flash memory area.
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\		

Example: This write control program reads data from address F000H and stores it to 98H in the RAM area.

LD A,(0F000H) : Read data from address F000H.

LD (98H),A : Store data to address 98H.

15. Serial PROM Mode

15.1 Outline

The TMP86F409NG has a 2048 byte BOOTROM (Mask ROM) for programming to flash memory. The BOOTROM is available in the serial PROM mode, and controlled by TEST, BOOT and RESET pins. Communication is performed via UART. The serial PROM mode has seven types of operating mode: Flash memory writing, RAM loader, Flash memory SUM output, Product ID code output, Flash memory status output, Flash memory erasing and Flash memory read protection setting. Memory address mapping in the serial PROM mode differs from that in the MCU mode. Figure 15-1 shows memory address mapping in the serial PROM mode.

Table 15-1 Operating Range in the Serial PROM Mode

Parameter	Min	Max	Unit
Power supply	4.5	5.5	
High frequency (Note)	2	16	MHz

Note: Though included in above operating range, some of high frequencies are not supported in the serial PROM mode. For details, refer to "Table 15-5".

15.2 Memory Mapping

The Figure 15-1 shows memory mapping in the Serial PROM mode and MCU mode.

In the serial PROM mode, the BOOTROM (Mask ROM) is mapped in addresses from 7800H to 7FFFH.

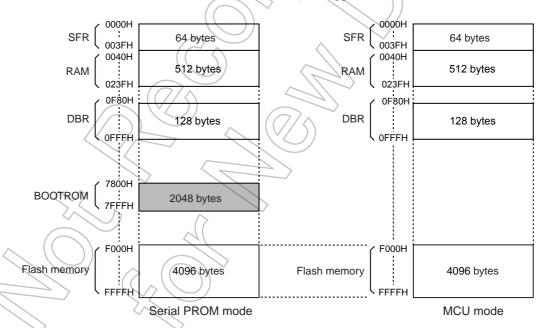


Figure 15-1 Memory Address Maps

15.3 Serial PROM Mode Setting

15.3.1 Serial PROM Mode Control Pins

To execute on-board programming, activate the serial PROM mode. Table 15-2 shows pin setting to activate the serial PROM mode.

Table 15-2 Serial PROM Mode Setting

Pin	Setting
TEST pin	High
BOOT/RXD0 pin	High
RESET pin	7

Note: The BOOT pin is shared with the UART communication pin (RXD0 pin) in the serial PROM mode. This pin is used as UART communication pin after activating serial PROM mode

15.3.2 Pin Function

In the serial PROM mode, TXD0 (P03) and RXD0 (P02) are used as a serial interface pin.

Table 15-3 Pin Function in the Serial PROM Mode

Pin Name (Serial PROM Mode)	Input/ Output	Function	Pin Name (MCU Mode)			
TXD0	Output	Serial data output P03				
BOOT/RXD0	Input/Input	Serial PROM mode control/Serial data input	(Note 1)	P02		
RESET	Input	Serial PROM mode control		RESET		
TEST	Input (//	Fixed to high		TEST		
VDD	Power supply	4.5 to 5.5 V				
VSS	Power supply	0 V				
I/O ports except P03, P02	I/O)	These ports are in the high-impedance state in the serial the port inputs with a hardware feature to prevent overla make the port inputs valid, set the pin of the SPCR regis gram.	p current. (The	port inputs are invalid.) To		
XIN	Input	Self-oscillate with an oscillator.		(Note 2)		
XOUT	Output			(11010 2)		

Note 1: During on-board programming with other parts mounted on a user board, be careful no to affect these communication control pins.

Note 2: Operating range of high frequency in serial PROM mode is 2 MHz to 16 MHz.

TMP86F409NG VDD(4.5 V to 5.5 V) VDD VDD(4.5 V to 5.5 V) Serial PROM mode MCU mode XIN XOUT TXD0 (P02) TXD0 (P03) RESET GND

Figure 15-2 Serial PROM Mode Pin Setting

Note 1: For connection of other pins, refer to " Table 15-3 Pin Function in the Serial PROM Mode ".

15.3.3 Example Connection for On-Board Writing

Figure 15-3 shows an example connection to perform on-board wring.

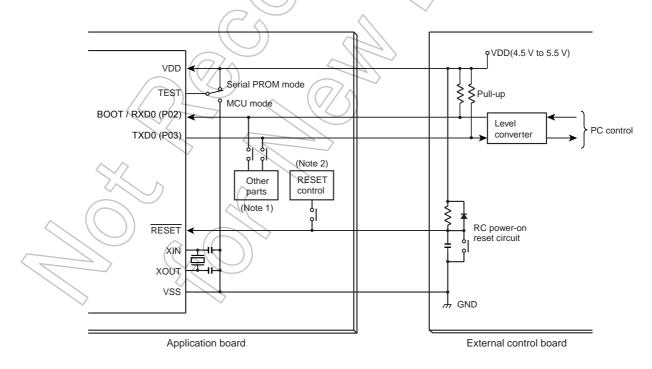


Figure 15-3 Example Connection for On-Board Writing

- Note 1: When other parts on the application board effect the UART communication in the serial PROM mode, isolate these pins by a jumper or switch.
- Note 2: When the reset control circuit on the application board effects activation of the serial PROM mode, isolate the pin by a jumper or switch.
- Note 3: For connection of other pins, refer to " Table 15-3 Pin Function in the Serial PROM Mode ".

15.3.4 Activating the Serial PROM Mode

The following is a procedure to activate the serial PROM mode. "Figure 15-4 Serial PROM Mode Timing "shows a serial PROM mode timing.

- 1. Supply power to the VDD pin.
- 2. Set the \overline{RESET} pin to low.
- 3. Set the TEST pin and BOOT/RXD0 pins to high.
- 4. Wait until the power supply and clock oscillation stabilize.
- 5. Set the \overline{RESET} pin to high.
- 6. Input the matching data (5AH) to the BOOT/RXD0 pin after setup sequence. For details of the setup timing, refer to "15.16 UART Timing".

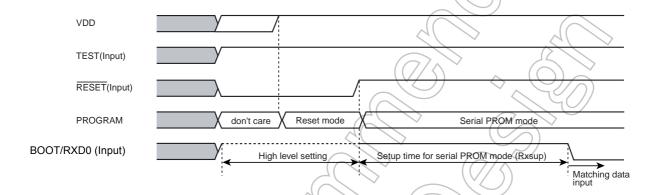


Figure 15-4 Serial PROM Mode Timing



15.4 Interface Specifications for UART

The following shows the UART communication format used in the serial PROM mode.

To perform on-board programming, the communication format of the write controller must also be set in the same manner.

The default baud rate is 9600 bps regardless of operating frequency of the microcontroller. The baud rate can be modified by transmitting the baud rate modification data shown in Table 1-4 to TMP86F409NG. The Table 15-5 shows an operating frequency and baud rate. The frequencies which are not described in Table 15-5 can not be used.

- Baud rate (Default): 9600 bps

Data length: 8 bitsParity addition: None

- Stop bit: 1 bit

5.00p 6.00 T 6.00						
ble 15-4 Baud Rate Mod	lification I	Data	4(\rightarrow		
Baud rate modification data	04H	05H	06H 07H	0AH	18H	28H
Baud rate (bps)	76800	62500	57600 38400	31250	19200	9600
	-	•			(7	(7)
			7(>>		7	
		4			\bigcirc	
		4		(
	<	1				
		// ~		//		
		J)				
(()					
\						
	7					
))					
		((/	/ 5)			
	(=		>			
^ ^			/			
	\sim					
	41					

Table 15-5 Operating Frequency and Baud Rate in the Serial PROM Mode

		ce Baud Rate (bps)	76	76800		76800		500	57	600	38400		31250		19200		9600	
(Note 3)		te Modification Data	04	4H	05	5H	06	6H	07	7H	0,	AΗ	1	8H	28	8H		
	Ref. Fre- quency (MHz)	Rating (MHz)	Baud rate (bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)	(bps)	(%)		
1	2	1.91 to 2.10	-	-	-	-	-	-	-	-	- \	(-)	Y-	-	9615	+0.16		
2	4	3.82 to 4.19		-	-	-	-	-	-	-	31250	0.00	19231	+0.16	9615	+0.16		
2	4.19	3.82 to 4.19		-	-	-	-	-	-	<u> </u>	32734	+4.75	20144	+4.92	10072	+4.92		
3	4.9152	4.70 to 5.16	-	-	-	-	-	-	38400	0.00	17	Ú-	19200	0.00	9600	0.00		
3	5	4.70 to 5.16		-	-	-	-	-	39063	+1.73	1-2	-	19531	+1.73	9766	+1.73		
4	6	5.87 to 6.45	-	-	-	-	-	-	-	1-		-	- (-	9375	-2.34		
4	6.144	5.87 to 6.45		-	-	-	-	-	7(-	-	.(-	\ <u>-</u>	9600	0.00		
5	7.3728	7.05 to 7.74	-	-		-	57600	0.00	-	\- <u>-</u>	-	- ^	19200	0.00	9600	0.00		
6	8	7.64 to 8.39	-	-	62500	0.00	-	- /	38462	+0.16	31250	0.00	19231	>+0.16	9615	+0.16		
7	9.8304	9.40 to 10.32	76800	0.00	-	-	-	- \	38400	0.00	\Diamond	16	19200	0.00	9600	0.00		
,	10	9.40 to 10.32	78125	+1.73	-	-	-		39063	+1.73	-		19531	+1.73	9766	+1.73		
	12	11.75 to 12.90	-	-	-	-	57692	+0.16	$\overline{}$	-	31250	0.00	18750	-2.34	9375	-2.34		
8	12.288	11.75 to 12.90	-	-	-	-	59077	+2.56	> -	-	32000	+2.40	19200	0.00	9600	0.00		
	12.5	11.75 to 12.90	-	-	60096	-3.85	60096	+4.33	-	- (30048	-3.85	19531	+1.73	9766	+1.73		
9	14.7456	14.10 to 15.48	-	-	-	- /	57600	0.00	38400	0.00	//-))	-	19200	0.00	9600	0.00		
10	16	15.27 to 16.77	76923	+0.16	62500	0,00		-	38462	+0.16	31250	0.00	19231	+0.16	9615	+0.16		

Note 1: "Ref. Frequency" and "Rating" show frequencies available in the serial PROM mode. Though the frequency is supported in the serial PROM mode, the serial PROM mode may not be activated correctly due to the frequency difference in the external controller (such as personal computer) and oscillator, and load capacitance of communication pins.

Note 2: It is recommended that the total frequency difference is within ±3% so that auto detection is performed correctly by the reference frequency.

Note 3: The external controller must transmit the matching data (5AH) repeatedly till the auto detection of baud rate is performed. This number indicates the number of times the matching data is transmitted for each frequency.



15.5 Operation Command

The eight commands shown in Table 15-6 are used in the serial PROM mode. After reset release, the TMP86F409NG waits for the matching data (5AH).

Table 15-6 Operation Command in the Serial PROM Mode

Command Data	Operating Mode	Description
5AH	Setup	Matching data. Execute this command after releasing the reset.
F0H	Flash memory erasing	Erases the flash memory area (address F000H to FFFFH).
30H	Flash memory writing	Writes to the flash memory area (address F000H to FFFFH).
60H	RAM loader	Writes to the specified RAM area (address 0050H to 023FH).
90H	Flash memory SUM output	Outputs the 2-byte checksum upper byte and lower byte in this order for the entire area of the flash memory (address F000H to FFFFH).
C0H	Product ID code output	Outputs the product ID code (13-byte data).
СЗН	Flash memory status output	Outputs the status code (7-byte data) such as the read protection condition.
FAH	Flash memory read protection setting	Enables the read protection.

15.6 Operation Mode

The serial PROM mode has seven types of modes, that are (1) Flash memory erasing, (2) Flash memory writing, (3) RAM loader, (4) Flash memory SUM output, (5) Product ID code output, (6) Flash memory status output and (7) Flash memory read protection setting modes. Description of each mode is shown below.

1. Flash memory erasing mode

The flash memory is erased by the chip erase (erasing an entire flash area) or sector erase (erasing sectors in 4-kbyte units). The erased area is filled with FFH. When the read protection is enabled, the sector erase in the flash erasing mode can not be performed. To disable the read protection, perform the chip erase. Before erasing the flash memory, TMP86F409NG checks the passwords except a blank product. If the password is not matched, the flash memory erasing mode is not activated.

2. Flash memory writing mode

Data is written to the specified flash memory address for each byte unit. The external controller must transmit the write data in the Intel Hex format (Binary). If no error is encountered till the end record, TMP86F409NG calculates the checksum for the entire flash memory area (F000H to FFFFH), and returns the obtained result to the external controller. When the read protection is enabled, the flash memory writing mode is not activated. In this case, perform the chip erase command beforehand in the flash memory erasing mode. Before activating the flash memory writing mode, TMP86F409NG checks the password except a blank product. If the password is not matched, flash memory writing mode is not activated.

3. RAM loader mode

The RAM loader transfers the data in Intel Hex format sent from the external controller to the internal RAM. When the transfer is completed normally, the RAM loader calculates the checksum. After transmitting the results, the RAM loader jumps to the RAM address specified with the first data record in order to execute the user program. When the read protection is enabled, the RAM loader mode is not activated. In this case, perform the chip erase beforehand in the flash memory erasing mode. Before activating the RAM loader mode, TMP86F409NG checks the password except a blank product. If the password is not matched, flash RAM loader mode is not activated.

4. Flash memory SUM output mode

The checksum is calculated for the entire flash memory area (F000H to FFFFH), and the result is returned to the external controller. Since the BOOTROM does not support the operation command to read the flash memory, use this checksum to identify programs when managing revisions of application programs.

5. Product ID code output

The code used to identify the product is output. The code to be output consists of 13-byte data, which includes the information indicating the area of the ROM incorporated in the product. The external controller reads this code, and recognizes the product to write.

(In the case of TMP86F409NG, the addresses from F000H to FFFFH become the ROM area.)

- 6. Flash memory status output mode
 The status of the area from FFE0H to FFFFH, and the read protection condition are output as 7-byte code.
 The external controller reads this code to recognize the flash memory status.
- 7. Flash memory read protection setting mode
 This mode disables reading the flash memory data in parallel PROM mode. In the serial PROM mode, the
 flash memory writing and RAM loader modes are disabled. To disable the flash memory read protection,
 perform the chip erase in the flash memory erasing mode.

15.6.1 Flash Memory Erasing Mode (Operating command: F0H)

Table 15-7 shows the flash memory erasing mode.

Table 15-7 Flash Memory Erasing Mode

	Transfer Byte	Transfer Data from the External Controller to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to the External Controller	
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	(Automatic baud rate adjustment) OK: Echo back data (5AH) Error: No data transmitted	
	3rd byte 4th byte	Baud rate change data (Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)	
	5th byte 6th byte	Operation command data (F0H) -	Modified baud rate Modified baud rate	- OK: Echo back data (F0H) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)	
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4, 5)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted	
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4, 5)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted	
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4, 5)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted	
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4, 5)	Modified baud rate Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted)	
	15th byte : m'th byte	Password string (Note 4, 5)	Modified band rate Modified band rate	- OK: Nothing transmitted Error: Nothing transmitted	
	n'th - 2 byte	Erase area specification (Note 2)	Modified baud rate	-	
	n'th - 1 byte		Modified baud rate	OK: Checksum (Upper byte) (Note 3) Error: Nothing transmitted	
	n'th byte		Modified baud rate	OK: Checksum (Lower byte) (Note 3) Error: Nothing transmitted	
	n'th + 1 byte	(Wait for the next operation command data)	Modified baud rate	-	

Note 1: " $xxH \times 3$ " indicates that the device enters the halt condition after transmitting 3 bytes of xxh.

Note 2: Refer to " 15.13 Specifying the Erasure Area ".

Note 3: Refer to " 15.8 Checksum (SUM) ".

Note 4: Refer to " 15.10 Passwords ".

Note 5: Do not transmit the password string for a blank product.


Note 6: When a password error occurs, TMP86F409NG stops UART communication and enters the halt mode. Therefore, when a password error occurs, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Note 7: If an error occurs during transfer of a password address or a password string, TMP86F409NG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Description of the flash memory erasing mode

1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.

- 2. The 5th byte of the received data contains the command data in the flash memory erasing mode (F0H).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 15-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, F0H). If the 5th byte of the received data does not contain the operation command data, the device enters the halt condition after sending 3 bytes of the operation command error code (63H).
- 4. The 7th thorough m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode. In the case of a blank product, do not transmit a password string. (Do not transmit a dummy password string.)
- 5. The n'th 2 byte contains the erasure area specification data. The upper 4 bits and lower 4 bits specify the start address and end address of the erasure area, respectively. For the detailed description, see "1.13 Specifying the Erasure Area".
- 6. The n'th 1 byte and n'th byte contain the upper and lower bytes of the checksum, respectively. For how to calculate the checksum, refer to "1.8 Checksum (SUM)". Checksum is calculated unless a receiving error or Intel Hex format error occurs. After sending the end record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.

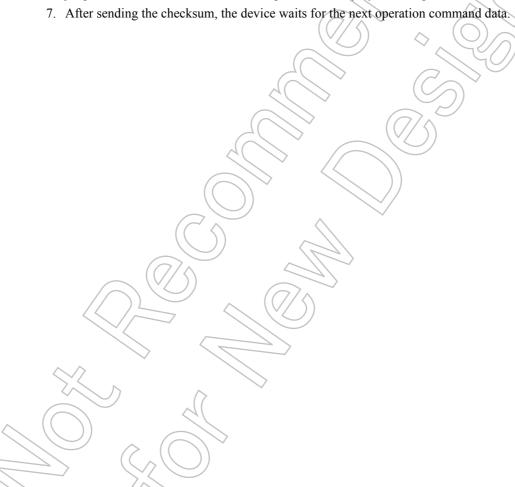

15.6.2 Flash Memory Writing Mode (Operation command: 30H)

Table 15-8 shows flash memory writing mode process.

Table 15-8 Flash Memory Writing Mode Process

	Transfer Byte	Transfer Data from External Controller to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to External Controller
	1st byte 2nd byte	Matching data (5Ah) -	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (30H) -	Modified baud rate Modified baud rate	- OK: Echo back data (30H) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted)
	15th byte : m'th byte	Password string (Note-5)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	m'th + 1 byte : n'th - 2 byte	Intel Hex format (binary) (Note 2)	Modified baud rate	-
	n'th - 1 byte	-	Modified baud rate	OK: SUM (Upper byte) (Note 3) Error: Nothing transmitted
	n'th byte		Modified baud rate	OK: SUM (Lower byte) (Note 3) Error: Nothing transmitted
	n'th + 1 byte	(Wait state for the next operation command data)	Modified baud rate	-

- Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code ".
- Note 2: Refer to " 15.9 Intel Hex Format (Binary) ".
- Note 3: Refer to "15.8 Checksum (SUM) ".
- Note 4: Refer to "15.10 Passwords ".
- Note 5: If addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not compared because the device is considered as a blank product. Transmitting a password string is not required. Even in the case of a blank product, it is required to specify the password count storage address and the password comparison start address. Transmit these data from the external controller. If a password error occurs due to incorrect password count storage address or password comparison start address, TMP86F409NG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86F409NG by the RESET pin and reactivate the serial ROM mode.
- Note 6: If the read protection is enabled or a password error occurs, TMP86F409NG stops UART communication and enters the halt confition. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial ROM mode.
- Note 7: If an error occurs during the reception of a password address or a password string, TMP86F409NG stops UART communication and enters the halt condition. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Description of the flash memory writing mode

- 1. The 1st byte of the received data contains the matching data. When the serial PROM mode is activated, TMP86F409NG (hereafter called device), waits to receive the matching data (5AH). Upon reception of the matching data, the device automatically adjusts the UART's initial baud rate to 9600 bps.
- 2. When receiving the matching data (5AH), the device transmits an echo back data (5AH) as the second byte data to the external controller. If the device can not recognize the matching data, it does not transmit the echo back data and waits for the matching data again with automatic baud rate adjustment. Therefore, the external controller should transmit the matching data repeatedly till the device transmits an echo back data. The transmission repetition count varies depending on the frequency of device. For details, refer to Table 15-5.
- 3. The 3rd byte of the received data contains the baud rate modification data. The five types of baud rate modification data shown in Table 15-4 are available. Even if baud rate is not modified, the external controller should transmit the initial baud rate data (28H: 9600 bps).
- 4. Only when the 3rd byte of the received data contains the baud rate modification data corresponding to the device's operating frequency, the device echoes back data the value which is the same data in the 4th byte position of the received data. After the echo back data is transmitted, baud rate modification becomes effective. If the 3rd byte of the received data does not contain the baud rate modification data, the device enters the halts condition after sending 3 bytes of baud rate modification error code (62H).
- 5. The 5th byte of the received data contains the command data (30H) to write the flash memory.
- 6. When the 5th byte of the received data contains the operation command data shown in Table 1-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, 30H). If the 5th byte of the received data does not contain the operation command data, the device enters the halt condition after sending 3 bytes of the operation command error code (63H).
- 7. The 7th byte contains the data for 15 to 8 bits of the password count storage address. When the data received with the 7th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 8. The 9th byte contains the data for 7 to 0 bits of the password count storage address. When the data received with the 9th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 9. The 11th byte contains the data for 15 to 8 bits of the password comparison start address. When the data received with the 11th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 10. The 13th byte contains the data for 7 to 0 bits of the password comparison start address. When the data received with the 13th byte has no receiving error, the device does not send any data. If a receiving error or password error occurs, the device does not send any data and enters the halt condition.
- 11. The 15th through m'th bytes contain the password data. The number of passwords becomes the data (N) stored in the password count storage address. The external password data is compared with N-byte data from the address specified by the password comparison start address. The external controller should send N-byte password data to the device. If the passwords do not match, the device enters the halt condition without returning an error code to the external controller. If the addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not conpared because the device is considered as a blank product.
- 12. The m'th + 1 through n'th 2 bytes of the received data contain the binary data in the Intel Hex format. No received data is echoed back to the external controller. After receiving the start mark (3AH for ":") in the Intel Hex format, the device starts data record reception. Therefore, the received data except 3AH is ignored until the start mark is received. After receiving the start mark, the device receives the data record, that consists of data length, address, record type, write data and checksum. Since the device starts checksum calculation after receiving an end record, the external controller should wait for the checksum after sending the end record. If a receiving error or Intel Hex format error occurs, the device enters the halts condition without returning an error code to the external controller.
- 13. The n'th 1 and n'th bytes contain the checksum upper and lower bytes. For details on how to calculate the SUM, refer to "15.8 Checksum (SUM)". The checksum is calculated only when the end record is detected and no receiving error or Intel Hex format error occurs. After sending the end

record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.

- 14. After transmitting the checksum, the device waits for the next operation command data.
- Note 1: Do not write only the address from FFE0H to FFFFH when all flash memory data is the same. If only these area are written, the subsequent operation can not be executed due to password error.
- Note 2: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.

15.6.3 RAM Loader Mode (Operation Command: 60H)

Table 15-9 shows RAM loader mode process.

Table 15-9 RAM Loader Mode Process

	Transfer Bytes	Transfer Data from External Control- ler to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to External Controller	
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	(Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted	
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)	
	5th byte 6th byte	Operation command data (60H)	Modified baud rate Modified baud rate	OK: Echo back data (60H) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)	
	7th byte 8th byte	Password count storage address bit 15 to 08 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted	
	9th byte 10th byte	Password count storage address bit 07 to 00 (Note 4)	Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted	
BOOT ROM	11th byte 12th byte	Password comparison start address bit 15 to 08 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted	
	13th byte 14th byte	Password comparison start address bit 07 to 00 (Note 4)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted	
	15th byte : m'th byte	Password string (Note 5)	Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted	
	m'th + 1 byte : n'th - 2 byte	Intel Hex format (Binary) (Note 2)	Modified baud rate Modified baud rate	-	
	n'th - 1 byte		Modified baud rate	OK: SUM (Upper byte) (Note 3) Error: Nothing transmitted	
	n'th byte		Modified baud rate	OK: SUM (Lower byte) (Note 3) Error: Nothing transmitted	
RAM		The program jumps to the start address of RAM in which the first transferred data is written.			

Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code ".

- Note 2: Refer to " 15.9 Intel Hex Format (Binary) ".
- Note 3: Refer to "15.8 Checksum (SUM) ".
- Note 4: Refer to "15.10 Passwords ".

- Note 6: After transmitting a password string, the external controller must not transmit only an end record. If receiving an end record after a password string, the device may not operate correctly.
- Note 7: If the read protection is enabled or a password error occurs, TMP86F409NG stops UART communication and enters the halt condition. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Note 5: If addresses from FFE0H to FFFFH are filled with "FFH", the passwords are not compared because the device is considered as a blank product. Transmitting a password string is not required. Even in the case of a blank product, it is required to specify the password count storage address and the password comparison start address. Transmit these data from the external controller. If a password error occurs due to incorrect password count storage address or password comparison start address, TMP86F409NG stops UART communication and enters the halt condition. Therefore, when a password error occurs, initialize TMP86F409NG by the RESET pin and reactivate the serial ROM mode.

Note 8: If an error occurs during the reception of a password address or a password string, TMP86F409NG stops UART communication and enters the halt condition. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Description of RAM loader mode

- 1. The 1st through 4th bytes of the transmitted and received data contains the same data as in the flash memory writing mode.
- 2. In the 5th byte of the received data contains the RAM loader command data (60H).
- 3. When th 5th byte of the received data contains the operation command data shown in Table 1-6, the device echoes back the value which is the same data in the 6th byte position (in this case, 60H). If the 5th byte does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 7th through m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.
- 5. The m'th + 1 through n'th 2 bytes of the received data contain the binary data in the Intel Hex format. No received data is echoed back to the external controller. After receiving the start mark (3AH for ":") in the Intel Hex format, the device starts data record reception. Therefore, the received data except 3AH is ignored until the start mark is received. After receiving the start mark, the device receives the data record, that consists of data length, address, record type, write data and checksum. The writing data of the data record is written into RAM specified by address. Since the device starts checksum calculation after receiving an end record, the external controller should wait for the checksum after sending the end record. If a receiving error or Intel Hex format error occurs, the device enters the halts condition without returning an error code to the external controller.
- 6. The n'th 1 and n'th bytes contain the checksum upper and lower bytes. For details on how to calculate the SUM, refer to "15.8 Checksum (SUM)". The checksum is calculated only when the end record is detected and no receiving error or Intel Hex format error occurs. After sending the end record, the external controller judges whether the transmission is completed correctly by receiving the checksum sent by the device.
- 7. After transmitting the checksum to the external controller, the boot program jumps to the RAM address that is specified by the first received data record.

Note 1: To rewrite data to Flash memory addresses at which data (including FFH) is already written, make sure to erase the existing data by "sector erase" or "chip erase" before rewriting data.



15.6.4 Flash Memory SUM Output Mode (Operation Command: 90H)

Table 15-10 shows flash memory SUM output mode process.

Table 15-10 Flash Memory SUM Output Process

	Transfer Bytes	Transfer Data from External Control- ler to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to External Controller
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
BOOT ROM	5th byte 6th byte	Operation command data (90H) -	Modified baud rate Modified baud rate	- OK: Echo back data (90H) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte	-	Modified baud rate	OK: SUM (Upper byte) (Note 2) Error: Nothing transmitted
	8th byte		Modified baud rate	OK: SUM (Lower byte) (Note 2) Error: Nothing transmitted
	9th byte	(Wait for the next operation command data)	Modified baud rate	

Note 1: "xxH × 3" indicates that the device enters the half condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code "

Note 2: Refer to " 15.8 Checksum (SUM) ".

Description of the flash memory SUM output mode

- 1. The 1st through 4th bytes of the transmitted and received data contains the same data as in the flash memory writing mode.
- 2. The 5th byte of the received data contains the command data in the flash memory SUM output mode (90H).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 1-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, 90H). If the 5th byte of the received data does not contain the operation command data, the device enters the halt condition after transmitting 3 bytes of operation command error code (63H).
- 4. The 7th and the 8th bytes contain the upper and lower bits of the checksum, respectively. For how to calculate the checksum, refer to "15.8 Checksum (SUM) ".
- 5. After sending the checksum, the device waits for the next operation command data.

15.6.5 Product ID Code Output Mode (Operation Command: C0H)

Table 15-11 shows product ID code output mode process.

Table 15-11 Product ID Code Output Process

	Transfer Bytes	Transfer Data from External Controller to TMP86F409NG	Baud Rate	Transf	er Data from TMP86F409NG to External Controller
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	OK: Ech	natic baud rate adjustment) o back data (5AH) othing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps		o back data 1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (C0H)	Modified baud rate Modified baud rate	V	o back data (C0H) IH × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte		Modified baud rate	зан	Start mark
	8th byte	<	Modified baud rate	OAH	The number of transfer data (from 9th to 18th bytes)
	9th byte		Modified baud rate	02H	Length of address (2 bytes)
	10th byte	4	Modified baud rate	10H	Reserved data
воот	11th byte		Modified baud rate	00H	Reserved data
ROM	12th byte		Modified baud rate	00H	Reserved data
	13th byte		Modified baud rate	00H	Reserved data
	14th byte		Modified baud rate	01H	ROM block count (1 block)
	15th byte		Modified baud rate	F0H	First address of ROM (Upper byte)
	16th byte		Modified baud rate	00H	First address of ROM (Lower byte)
	17th byte		Modified baud rate	FFH	End address of ROM (Upper byte)
	18th byte		Modified baud rate	FFH	End address of ROM (Lower byte)
	19th byte		Modified baud rate	F2H	Checksum of transferred data (9th through 18th byte)
4	20th byte	(Wait for the next operation command data)	Modified baud rate	-	

Note: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code ".

Description of Product ID code output mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.
- 2. The 5th byte of the received data contains the product ID code output mode command data (C0H).
- 3. When the 5th byte contains the operation command data shown in Table 15-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, C0H). If the 5th byte data does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 9th through 19th bytes contain the product ID code. For details, refer to "15.11 Product ID Code "

5. After sending the checksum, the device waits for the next operation command data.





15.6.6 Flash Memory Status Output Mode (Operation Command: C3H)

Table 15-12 shows Flash memory status output mode process.

Table 15-12 Flash Memory Status Output Mode Process

	Transfer Bytes	Transfer Data from External Controller to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to External Controller
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	(Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (C3H) -	Modified baud rate Modified baud rate	- OK: Echo back data (C3H) Error: A1H × 3, A3H × 3, 63H × 3 (Note 1)
	7th byte		Modified baud rate	3AH Start mark
	8th byte		Modified baud rate	04H Byte count (from 9th to 12th byte)
BOOT ROM	9th byte		Modified baud rate	00H Status code 1 to 03H
	10th byte		Modified baud rate	00H Reserved data
	11th byte		Modified baud rate	00H Reserved data
	12th byte		Modified baud rate	00H Reserved data
	13th byte		Modified baud rate	Checksum 2's complement for the sum of 9th through 12th bytes 9th byte Checksum 00H: 00H 01H: FFH 02H: FEH 03H: FDH
	14th byte	(Wait for the next operation command data)	Modified baud rate	-

Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code ".

Note 2: For the details on status code 1, refer to " 15.12 Flash Memory Status Code ".

Description of Flash memory status output mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the Flash memory writing mode.
- 2. The 5th byte of the received data contains the flash memory status output mode command data (C3H).
- 3. When the 5th byte contains the operation command data shown in Table 15-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in this case, C3H). If the 5th byte does not contain the operation command data, the device enters the halt condition after sending 3 bytes of operation command error code (63H).
- 4. The 9th through 13th bytes contain the status code. For details on the status code, refer to "15.12 Flash Memory Status Code".
- 5. After sending the status code, the device waits for the next operation command data.

15.6.7 Flash Memory Read Protection Setting Mode (Operation Command: FAH)

Table 15-13 shows Flash memory read protection setting mode process.

Table 15-13 Flash Memory Read Protection Setting Mode Process

	Transfer Bytes	Transfer Data from External Con- troller to TMP86F409NG	Baud Rate	Transfer Data from TMP86F409NG to External Controller
	1st byte 2nd byte	Matching data (5AH) -	9600 bps 9600 bps	- (Automatic baud rate adjustment) OK: Echo back data (5AH) Error: Nothing transmitted
	3rd byte 4th byte	Baud rate modification data (See Table 15-4)	9600 bps 9600 bps	OK: Echo back data Error: A1H × 3, A3H × 3, 62H × 3 (Note 1)
	5th byte 6th byte	Operation command data (FAH) -	Modified baud rate Modified baud rate	- OK: Echo back data (FAH) Error: A1H & 3, A3H & 3, 63H x 3 (Note 1)
	7th byte 8th byte	Password count storage address 15 to 08 (Note 2)	Modified baud rate Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
BOOT ROM	9th byte 10th byte	Password count storage address 07 to 00 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	11th byte 12th byte	Password comparison start address 15 to 08 (Note 2)	Modified baud rate Modified baud rate	OK: Nothing transmitted Error: Nothing transmitted
	13th byte 14th byte	Password comparison start address 07 to 00 (Note 2)	Modified baud rate Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	15th byte : m'th byte	Password string (Note 2)	Modified baud rate Modified baud rate	- OK: Nothing transmitted Error: Nothing transmitted
	n'th byte		Modified baud rate	OK: FBH (Note 3) Error: Nothing transmitted
	n'+1th byte	(Wait for the next operation command data)	Modified baud rate	-

Note 1: "xxH × 3" indicates that the device enters the halt condition after sending 3 bytes of xxH. For details, refer to " 15.7 Error Code ".

Note 2: Refer to "15.10 Passwords."

Note 3: If the read protection is enabled for a blank product or a password error occurs for a non-blank product, TMP86F409NG stops UART communication and enters the halt mode. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Note 4: If an error occurs during reception of a password address or a password string, TMP86F409NG stops UART communication and enters the halt mode. In this case, initialize TMP86F409NG by the RESET pin and reactivate the serial PROM mode.

Description of the Flash memory read protection setting mode

- 1. The 1st through 4th bytes of the transmitted and received data contain the same data as in the Flash memory writing mode.
- 2. The 5th byte of the received data contains the command data in the flash memory status output mode (FAH).
- 3. When the 5th byte of the received data contains the operation command data shown in Table 1-6, the device echoes back the value which is the same data in the 6th byte position of the received data (in

this case, FAH). If the 5th byte does not contain the operation command data, the device enters the halt condition after transmitting 3 bytes of operation command error code (63H).

4. The 7th through m'th bytes of the transmitted and received data contain the same data as in the flash memory writing mode.

5. The n'th byte contains the status to be transmitted to the external controller in the case of the successful read protection.



15.7 Error Code

When detecting an error, the device transmits the error code to the external controller, as shown in Table 15-14.

Table 15-14 Error Code

Transmit Data	Meaning of Error Data	
62H, 62H, 62H	Baud rate modification error.	
63H, 63H, 63H	Operation command error.	
A1H, A1H, A1H	Framing error in the received data.	
A3H, A3H, A3H	Overrun error in the received data.	

Note: If a password error occurs, TMP86F409NG does not transmit an error code.


15.8 Checksum (SUM)

15.8.1 Calculation Method

The checksum (SUM) is calculated with the sum of all bytes, and the obtained result is returned as a word.

The data is read for each byte unit and the calculated result is returned as a word.

Example:

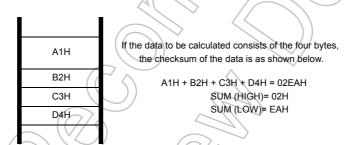

The checksum which is transmitted by executing the flash memory write command, RAM loader command, or flash memory SUM output command is calculated in the manner, as shown above.

15.8.2 Calculation data

The data used to calculate the checksum is listed in Table 15-15.

Table 15-15 Checksum Calculation Data

Operating Mode	Calculation Data	Description
Flash memory writing mode		Even when a part of the flash memory is written, the checksum of the entire flash memory area (F000H to FFFH) is calculated.
Flash memory SUM output mode	Data in the entire area of the flash memory	The data length, address, record type and checksum in Intel Hex format are not included in the checksum.
RAM loader mode	RAM data written in the first received RAM address through the last received RAM address	The length of data, address, record type and checksum in Intel Hex format are not included in the checksum.
Product ID Code Output mode	9th through 18th bytes of the transferred data	For details, refer to " 15.11 Product ID Code ".
Flash Memory Status Output mode	9th through 12th bytes of the transferred data	For details, refer to " 15.12 Flash Memory Status Code "
Flash Memory Erasing mode	All data in the erased area of the flash memory (the whole or part of the flash memory)	When the sector erase is executed, only the erased area is used to calculate the checksum. In the case of the chip erase, an entire area of the flash memory is used.



15.9 Intel Hex Format (Binary)

- 1. After receiving the checksum of a data record, the device waits for the start mark (3AH ":") of the next data record. After receiving the checksum of a data record, the device ignores the data except 3AH transmitted by the external controller.
- 2. After transmitting the checksum of end record, the external controller must transmit nothing, and wait for the 2-byte receive data (upper and lower bytes of the checksum).
- 3. If a receiving error or Intel Hex format error occurs, the device enters the halt condition without returning an error code to the external controller. The Intel Hex format error occurs in the following case:

When the record type is not 00H, 01H, or 02H

When a checksum error occurs

When the data length of an extended record (record type = 02H) is not 02H

When the device receives the data record after receiving an extended record (record type = 02H) with extended address of 1000H or larger.

When the data length of the end record (record type = 01H) is not 00H

15.10Passwords

The consecutive eight or more-byte data in the flash memory area can be specified to the password. TMP86F409NG compares the data string specified to the password with the password string transmitted from the external controller. The area in which passwords can be specified is located at addresses F000H to FF9FH. The area from FFA0H to FFFFH can not be specified as the passwords area.

If addresses from FFE0H through FFFFH are filled with "FFH", the passwords are not compared because the product is considered as a blank product. Even in this case, the password count storage addresses and password comparison start address must be specified. Table 15-16 shows the password setting in the blank product and non-blank product.

Table 15-16 Password Setting in the Blank Product and Non-Blank Product

Password	Blank Product (Note 1)	Non-Blank Product
PNSA (Password count storage address)	F000H ≤ PNSA ≤ FF9FH	F000H ≤ PNSA ≤ FF9FH
PCSA (Password comparison start address)	F000H ≤ PCSA ≤ FF9FH	F000H ≤ PCSA ≤ FFA0 - N
N (Password count)		8 ≤ N
Password string setting	Not required (Note 5)	Required (Note 2)

- Note 1: When addresses from FFE0H through FFFFH are filled with "FFH", the product is recognized as a blank product.
- Note 2: The data including the same consecutive data (three or more bytes) can not be used as a password. (This causes a password error data. TMP86F409NG transmits no data and enters the halt condition.)
- Note 3: *: Don't care.
- Note 4: When the above condition is not met, a password error occurs. If a password error occurs, the device enters the halt condition without returning the error code.
- Note 5: In the flash memory writing mode or RAM loader mode, the blank product receives the Intel Hex format data immediately after receiving PCSA without receiving password strings. In this case, the subsequent processing is performed correctly because the blank product ignores the data except the start mark (3AH ":") as the Intel Hex format data, even if the external controller transmits the dummy password string. However, if the dummy password string contains "3AH", it is detected as the start mark erroneously. The microcontroller enters the halt mode. If this causes the problem, do not transmit the dummy password strings.

Note 6: In the flash memory erasing mode, the external controller must not transmit the password string for the blank product.

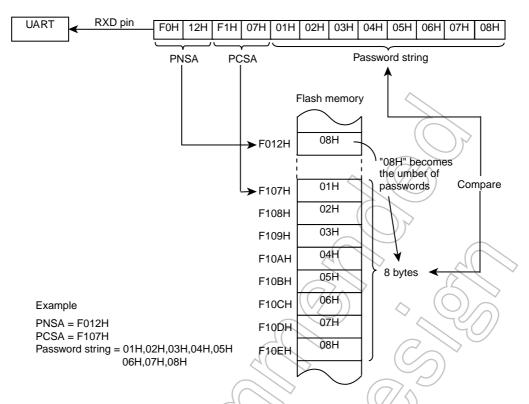


Figure 15-5 Password Comparison

15.10.1Password String

The password string transmitted from the external controller is compared with the specified data in the flash memory. When the password string is not matched to the data in the flash memory, the device enters the halt condition due to the password error.

15.10.2Handling of Password Error

If a password error occurs, the device enters the halt condition. In this case, reset the device to reactivate the serial PROM mode.

15.10.3Password Management during Program Development

If a program is modified many times in the development stage, confusion may arise as to the password. Therefore, it is recommended to use a fixed password in the program development stage.

Example :Specify PNSA to F000H, and the password string to 8 bytes from address F001H (PCSA becomes F001H.)

Password Section code abs = 0F000H

DB 08H : PNSA definition

DB "CODE1234" : Password string definition

15.11Product ID Code

The product ID code is the 13-byte data containing the start address and the end address of ROM. Table 15-17 shows the product ID code format.

Table 15-17 Product ID Code Format

Data	Description	In the Case of TMP86F409NG
1st	Start Mark (3AH)	3AH)
2nd	The number of transfer data (10 bytes from 3rd to 12th byte)	0AH
3rd	Address length (2 bytes)	02H
4th	Reserved data	1DH
5th	Reserved data	00H
6th	Reserved data	00H
7th	Reserved data	00H
8th	ROM block count	01H
9th	The first address of ROM (Upper byte)	FOH
10th	The first address of ROM (Lower byte)	00H
11th	The end address of ROM (Upper byte)	(FEH)
12th	The end address of ROM (Lower byte)	FFH .
13th	Checksum of the transferred data (2's compliment for the sum of 3rd through 12th bytes)	F2H

15.12Flash Memory Status Code

The flash memory status code is the 7-byte data including the read protection status and the status of the data from FFE0H to FFFFH. Table 15-18 shows the flash memory status code.

Table 15-18 Flash Memory Status Code

	Data	Description	In the Case of TMP86F409NG		
	1st	Start mark	ЗАН		
	2nd	Transferred data count (3rd through 6th byte)	04H		
/ > >	3rd	Status code	00H to 03H (See figure below)		
1	4th	Reserved data	00H		
	5th	Reserved data	00H		
	6th	Reserved data	00H		
>	7th	Checksum of the transferred data (2's compliment for the sum of 3rd through 6th data)	3rd byte checksum 00H 00H 01H FFH 02H FEH 03H FDH		

Status Code 1

7	6	5	4	3	2	1	0	
						RPENA	BLANK	(Initial Value: 0000 00**)

RPENA	Flash memory read pro- tection status	0: 1:	Read protection is disabled. Read protection is enabled.
BLANK	The status from FFE0H to FFFFH.	0: 1:	All data is FFH in the area from FFE0H to FFFFH. The value except FFH is included in the area from FFE0H to FFFFH.

Some operation commands are limited by the flash memory status code 1. If the read protection is enabled, flash memory writing mode command and RAM loader mode command can not be executed. Erase all flash memory before executing these command.

RPENA	BLANK	Flash Memory Writing Mode	RAM Loader Mode	Flash memory SUM Output Mode	Product ID Code Output Mode	Flash Memory Status Output Mode	Flash Memory Erasing Mode Chip Erase Sector tor Erase	Read Protec- tion Setting Mode
0	0	m	m	m	m	m	m	×
0	1	Pass	Pass	m	m	m	Pass	Pass
1	0	×	×	m	(m)/	m	m ×	> ×
1	1	×	×	m	m) m 🔷	Pass	Pass

Note: m: The command can be executed.

Pass: The command can be executed with a password.

x: The command can not be executed.

(After echoing the command back to the external controller, TMP86F409NG stops UART communication and enters the halt condition.)


15.13Specifying the Erasure Area

In the flash memory erasing mode, the erasure area of the flash memory is specified by n-2 byte data.

The start address of an erasure area is specified by ERASTA, and the end address is specified by ERAEND.

If ERASTA is equal to or smaller than ERAEND, the sector erase (erasure in 4 kbyte units) is executed. Executing the sector erase while the read protection is enabled results in an infinite loop.

If ERASTA is larger than ERAEND, the chip erase (erasure of an entire flash memory area) is executed and the read protection is disabled. Therefore, execute the chip erase (not sector erase) to disable the read protection.

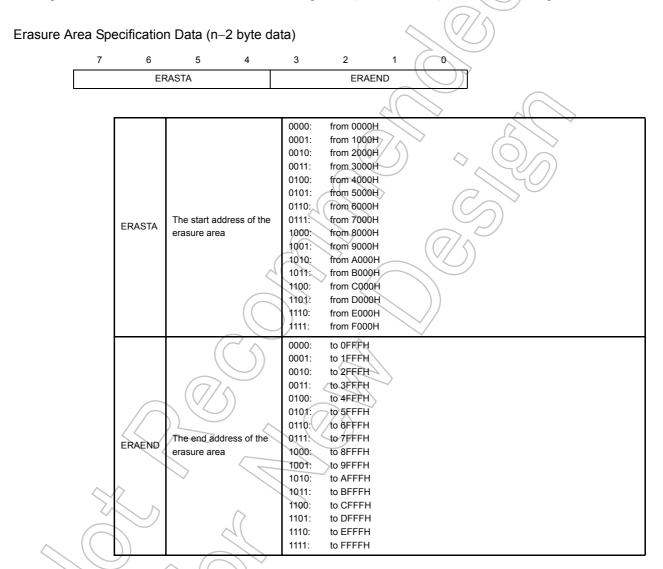


Note: When the sector erase is executed for the area containing no flash cell, TMP86F409NG stops the UART communication and enters the half condition.

15.14Port Input Control Register

In the serial PROM mode, the input level is fixed to the all ports except P03 and P02 ports with a hardware feature to prevent overlap current to unused ports. (All port inputs and peripheral function inputs shared with the ports become invalid.) Therefore, to access to the flash memory in the RAM loader mode without UART communication, port inputs must be valid. To make port inputs valid, set the pin of the port input control register (SPCR) to "1".

The SPCR register is not operated in the MCU mode.

Port Input Control Register




Note 1: The SPCR register can be read or written only in the serial PROM mode. When the write instruction is executed to the SPCR register in the MCU mode, the port input control can not be performed. When the read instruction is executed for the SPCR register in the MCU mode, read data of bit7 to 1 are unstable.

Note 2: All I/O ports except P03 and P02 ports are controlled by the SPCR register.



15.15Flowchart

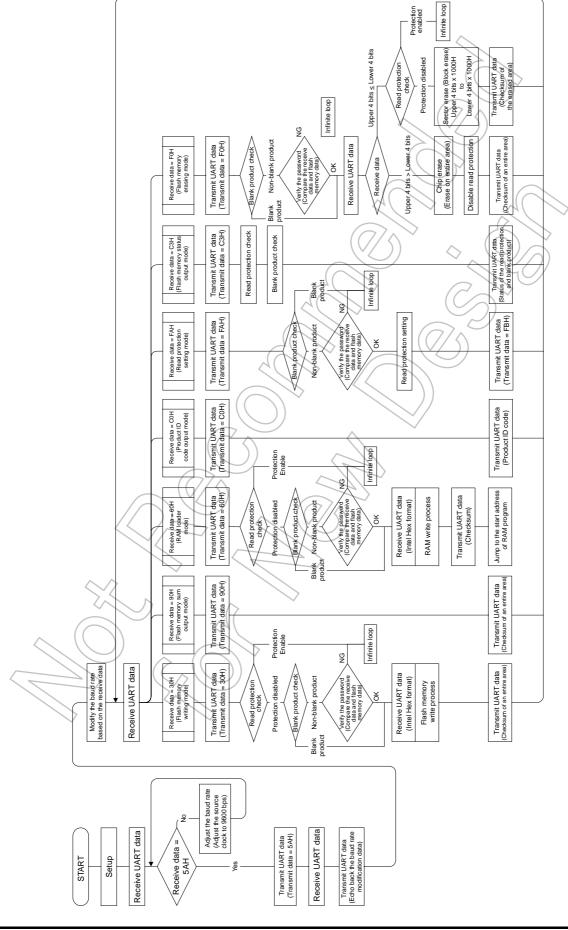

Page 174


15.16UART Timing

Table 15-19 UART Timing-1 (VDD = 4.5 to 5.5 V, fc = 2 to 16 MHz, Topr = -10 to 40°C)

Parameter	Cumbal	Clask Fraguency (fa)	Minimum Required Time		
Parameter	Symbol	Clock Frequency (fc)	At fc = 2 MHz	At fc = 16 MHz	
Time from matching data reception to the echo back	CMeb1	Approx. 930	465 μs	58.1 μs	
Time from baud rate modification data reception to the echo back	CMeb2	Approx. 980	490 μs	61.3 μs	
Time from operation command reception to the echo back	CMeb3	Approx. 800	400 μs	50 μs	
Checksum calculation time	CKsm	Approx. 7864500	3.93 s	491.5 μs	
Erasure time of an entire flash memory	CEall	- (30 ms	30 ms	
Erasure time for a sector of a flash memory (in 4-kbyte units)	CEsec		15 ms	15 ms	

Table 15-20 UART Timing-2 (VDD = 4.5 to 5.5 V, fc = 2 to 16 MHz, Topr = -10 to 40° C

2			Minimum Required Time		
Parameter	Symbol	Clock Frequency (fc)	At fc = 2 MHz	At fc = 16 MHz	
Time from the reset release to the acceptance of start bit of RXD pin	RXsup	2100	1.05 ms	131.3 ms	
Matching data transmission interval	CMtr1	28500	14.2 ms	1.78 ms	
Time from the echo back of matching data to the acceptance of baud rate modification data	CMtr2	380	190 μs	23.8 μs	
Time from the echo back of baud rate modification data to the acceptance of an operation command	CMtr3	650	325 μs	40.6 μs	
Time from the echo back of operation command to the acceptance of password count storage addresses (Upper byte)	CMtr4	800	400 μs	50 μs	

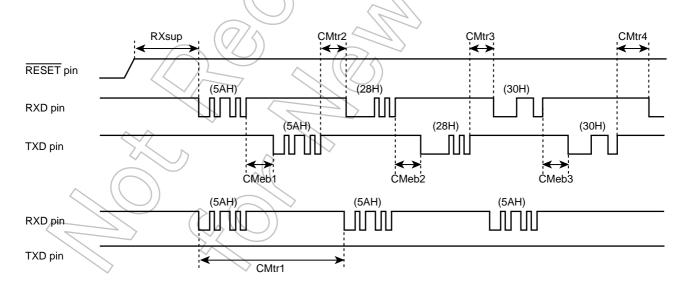




16. Input/Output Circuitry


16.1 Control Pins

The input/output circuitries of the TMP86F409NG control pins are shown below.

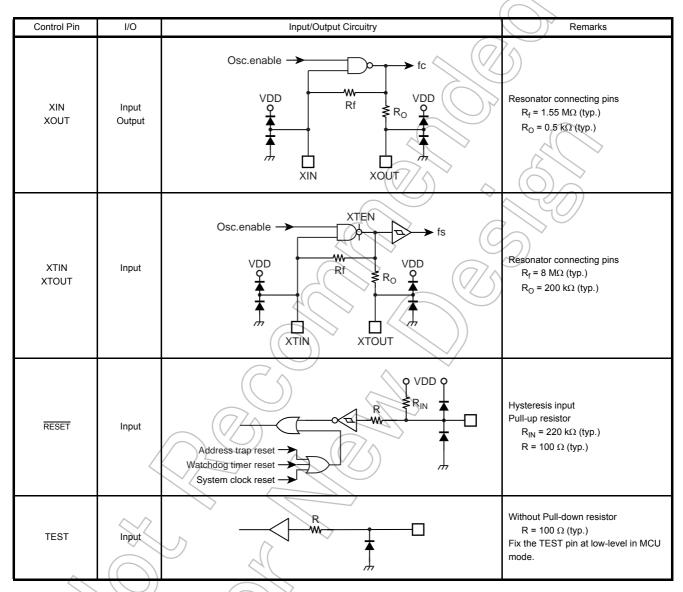

Note: The TEST pin of TMP86FH09/F809/F409NG does not have a pull-down resistor and diode(D1). Fix the TEST pin at Low level in MCU mode.

16.2 Input/Output Ports

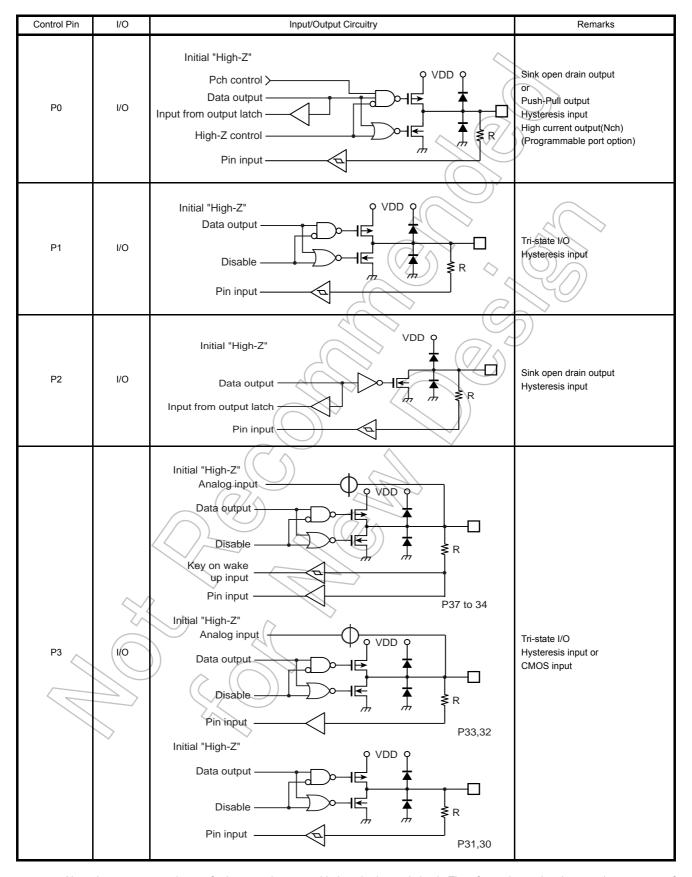

Note: Input status on pins set for input mode are read in into the internal circuit. Therefore, when using the ports in a maxture of input and output modes, the contents of the output latches for the ports that are set for input mode may be rewritten by execution of bit manipulating instructions.

17. Electrical Characteristics

17.1 Absolute Maximum Ratings

The absolute maximum ratings are rated values which must not be exceeded during operation, even for an instant. Any one of the ratings must not be exceeded. If any absolute maximum rating is exceeded, a device may break down or its performance may be degraded, causing it to catch fire or explode resulting in injury to the user. Thus, when designing products which include this device, ensure that no absolute maximum rating value will ever be exceeded.

V

Parameter	Symbol	Pins	Ratings	Unit
Supply voltage	V_{DD}		-0.3 to 6.0	V
Input voltage	V _{IN}		-0.3 to V _{DD} + 0.3	> v
Output voltage	V _{OUT1}		-0.3 to V _{DD} + 0.3	V
	I _{OUT1}	P0, P1, P3 ports	(-1.8)	
Output current (Per 1 pin)	I _{OUT2}	P1, P2, P3 ports	3.2	
	I _{OUT3}	P0 ports	30	mA
	Σ l _{OUT1}	P0, P1, P3 ports) -30	ША
Output current (Total)	Σ I _{OUT2}	P1, P2, P3 ports	60	
	Σ I _{OUT3}	P0 ports	80	
Power dissipation [Topr = 85 °C]	P_{D}		300	mW
Soldering temperature (time)	Tsld		260 (10 s)	
Storage temperature	Tstg		-55 to 125	°C
Operating temperature	Topr		-40 to 85	

17.2 Operating Conditions

The Operating Conditions show the conditions under which the device be used in order for it to operate normally while maintaining its quality. If the device is used outside the range of Operating Conditions (power supply voltage, operating temperature range, or AC/DC rated values), it may operate erraticially. Therefore, when designing your application equipment, always make sure its intended working conditions will not exceed the range of Operating Conditions.

17.2.1 MCU mode (Flash Programming or erasing)

 $(V_{SS} = 0 \text{ V}, \text{ Topr} = -10 \text{ to } 40^{\circ}\text{C})$

Parameter	Symbol	Pins	Ratings	Min	Max	Unit
Supply voltage	V_{DD}		NORMAL1, 2 modes	4.5	5.5	
Input high level	V _{IH1}	Except hysteresis input	V _{DD} ≥ 4.5 V	$V_{DD} \times 0.70$	VDD	
	V _{IH2}	Hysteresis input	V _{DD} ≥ 4.3 V	V _{DD} × 0.75	V	
Input low lovel	V _{IL1}	Except hysteresis input	V _{DD} ≥ 4.5 V		$V_{DD} \times 0.30$	$\widehat{}$
Input low level	V_{IL2}	Hysteresis input,TEST	VDD = 4.0		V _{DD} × 0.25	
Clock frequency	fc	XIN, XOUT		1.0	16.0	MHz

17.2.2 MCU mode (Except Flash Programming or erasing)

 $(V_{SS} = 0 \text{ V}, \text{ Topr} = -40 \text{ to } 85^{\circ}\text{C})$

							1
Parameter	Symbol	Pins		Ratings	Min	Max	Unit
Supply voltage			fc = 16 MHz	NORMAL1, 2 modes IDLE0, 1, 2 modes	4.5		
	V _{DD}		fc = 8 MHz	NORMAL1, 2 modes IDLE0, 1, 2 modes		5.5	V
	4		fs = 32.768 KHz	SLOW1, 2 modes SLEEP0, 1, 2 modes	2.7(Note1)		
			STOP mode				
	V _{IH1}	Except hysteresis input	V _{DD} ≥ 4.5 V		$V_{DD} \times 0.70$	- V _{DD}	
Input high level	V _{IH2}	Hysteresis input			V _{DD} × 0.75		
	V _{IH3}	7 ^	V _{DD} < 4.5 V		$V_{DD} \times 0.90$		V
	V _{IL1}	Except hysteresis input	V _{DD} ≥ 4.5 V V _{DD} < 4.5 V			$V_{DD} \times 0.30$	V
Input low level	V _{IL2}	Hysteresis input,TEST			0	$V_{DD} \times 0.25$	
	V _{IL3}	\Diamond			1	$V_{DD} \times 0.10$	
Clock frequency	fc	XIN, XOUT	V _{DD} = 2.7 to 5.5V		1.0	8.0	MHz
	- 10	XIN, XUUI	V _{DD} = 4.5 to 5.5V	,	1.0	16.0	IVITIZ
	fs	XTIN, XTOUT	V _{DD} = 2.7 to 5.5V	,	30.0	34.0	kHz

Note 1: The operating temperature (Topr) must not exceed the range between -20 to 85° C under 3.0V.

17.2.3 Serial PROM mode

 $(V_{SS} = 0 \text{ V}, \text{ Topr} = -10 \text{ to } 40 \,^{\circ}\text{C})$

Parameter	Symbol	Pins	Condition	Min	Max	Unit
Supply voltage	V_{DD}		NORMAL1, 2 modes	4.5	5.5	
Input high voltage	V _{IH1}	Except hysteresis input	$V_{DD} \ge 4.5 \text{ V}$ $V_{DD} \times 0.70$ $V_{DD} \times 0.70$	V _{DD}		
	V _{IH2}	Hysteresis input	VDD	$V_{DD} \times 0.75$	VDD /	V
Input low voltage	V_{IL1}	Except hysteresis input	V _{DD} ≥ 4.5 V	~ 0(7	$V_{DD} \times 0.30$	
Input low voltage	V _{IL2}	Hysteresis input,TEST	VDD ≥ 4.0 V		V _{DD} × 0.25	
Clock frequency	fc	XIN, XOUT		2.0	16.0	MHz



17.3 DC Characteristics

 $(V_{SS} = 0 \text{ V}, \text{ Topr} = -40 \text{ to } 85 \,^{\circ}\text{C})$

Parameter	Symbol	Pins	Condition	Min	Тур.	Max	Unit
Hysteresis voltage	V_{HS}	Hysteresis input	4	//-	0.9	-	V
Input current	I _{IN1}	TEST	V _{DD} = 5.5 V, V _{IN} = 5.5 V/0 V				
	I _{IN2}	Sink open drain, tri-state port	V _{DD} = 3.3 v, v _{IN} = 3.3 v/0 v	1)	±2	μΑ
	I _{IN3}	RESET, STOP		7/^			
Input resistance	R _{IN3}	RESET pull-up	V _{DD} = 5.5 V, V _{IN} = 0 V	100	220	450	kΩ
Output leakage current	I _{LO1}	Sink open drain port	V _{DD} = 5.5 V, V _{OUT} = 5.5 V)	-	2	μА
Output leakage current	I _{LO2}	Tri-state port	V _{DD} = 5.5 V, V _{OUT} = 5.5 V/0 V	_	-	±2	μА
Output high voltage	V _{OH}	Tri-state port	$V_{DD} = 4.5 \text{ V}, I_{OH} = -0.7 \text{ mA}$	4.1	-	-	V
Output low voltage	V _{OL}	Except XOUT, P3, P5	V _{DD} = 4.5 V, I _{OL} = 1.6 mA	-	4F	0.4	V
Output low curren	I _{OL}	High current port (P0 Port)	$V_{DD} = 4.5 \text{ V}, V_{OL} = 1.0 \text{ V}$	-(20	-	mA
Supply current in NORMAL1, 2 modes			V _{DD} = 5.5 V When a program operates on flash memory (Note5,6)	7	10.5	19	mA
Supply current in IDLE 0, 1, 2 modes			fc = 16 MHz fs = 32.768 kHz	(]	4.5	8.5	
Supply current in SLOW1 mode		£(When a program operates on flash memory (Note5,6)	_	25	65	
SLOWTHOUG	I _{DD}		V_{DD} = 3.0 V When a program operates on RAM	ı	15	25	
Supply current in SLEEP1 mode			fs = 32.768 kHz	-	7	15	μА
Supply current in SLEEP0 mode				_	5	12	
Supply current in STOP mode			V _{DD} = 5.5 V V _{IN} = 5.3 V/0.2 V	-	0.5	10	
Peak current for	. /		V _{DD} = 5.5 V	_	10	-	
SLOW1 mode (Note4,5)	I _{DDP-P}		V _{DD} = 3.0 V	-	2	-	mA

- Note 1: Typical values show those at Topr = 25° C and V_{DD} = 5 V.
- Note 2: Input current (I_{IN3}): The current through pull-up resistor is not included.
- Note 3: The supply currents of SLOW2 and SLEEP2 modes are equivalent to those of IDLE0, IDLE1 and IDLE2 modes.
- Note 4: When a program is executing in the flash memory or when data is being read from the flash memory, the flash memory operates in an intermittent manner, causing peak currents in the operation current, as shown in Figure 17-1. In this case, the supply current I_{DD} (in NORMAL1, NORMAL2 and SLOW1 modes) is defined as the sum of the average peak current and MCU current.

Note 5: When designing the power supply, make sure that peak currents can be supplied. In SLOW1 mode, the difference between the peak current and the average current becomes large.

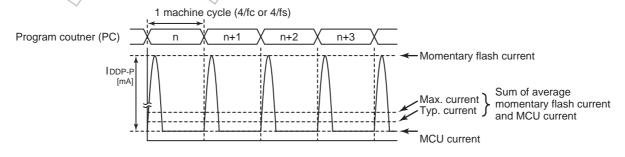



Figure 17-1 Intermittent Operation of Flash Memory

17.4 AD Characteristics

(V $_{SS}$ = 0.0 V, 2.7 V \leq V $_{DD} \leq~5.5$ V, Topr = -40 to 85 $^{\circ}C)$

Paramete	Symbol	Condition	Min	Тур.	Max	Unit
Analog input voltage	V _{AIN}		V _{SS}	\ <u>-</u>	V_{DD}	٧
Non linearity error			-		±6	
Zero point error		V _{DD} = 3.0V/5.0 V	_	((-))	±6	LSB
Full scale error		V _{SS} = 0.0 V	- (77/_	±6	LOB
Total error			\- (\	/)}	±6	

- Note 1: The total error includes all errors except a quanitization error, and is defined as a maximum deviation from the ideal conversion line.
- Note 2: Conversion time is defferent in recommended value by power supply voltage.
- Note 3: The voltage to be input on the AIN input pin must not exceed the range between V_{DD} and V_{SS} . If a voltage outside this range is input, conversion values will become unstable and conversion values of other channels will also be affected.

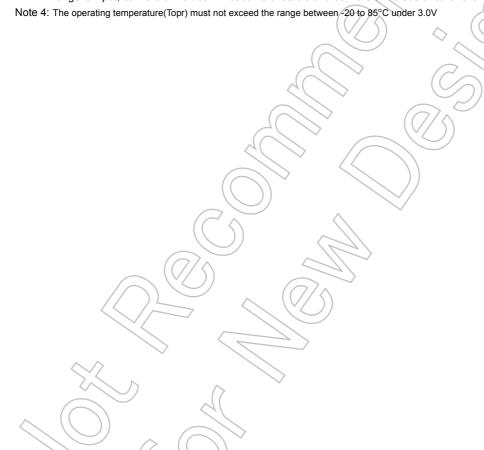

17.5 AC Characteristics

(V_{SS} = 0 V, 4.5 V \leq V_{DD} \leq 5.5 V, Topr = -40 to 85°C)

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time		NORMAL1, 2 modes	0.05	_	4	μs
	tou	IDLE0, 1, 2 modes	0.25			
	tcy	SLOW1, 2 modes	117.6		133.3	
		SLEEP0, 1, 2 modes				
High-level clock pulse width	t _{WCH}	For external clock operation (XIN input)		31.25	_	ns
Low-level clock pulse width	t _{WCL}	fc = 16 MHz		31.25		
High-level clock pulse width	t _{WSH}	For external clock operation (XTIN input)	()	15.26		
Low-level clock pulse width	t _{WSL}	fs = 32.768 kHz		13.20	_	μS

 $(V_{SS} = 0 \text{ V}, 2.7 \text{ V} \le V_{DD} \le 5.5 \text{ V}, \text{Topr} = -40 \text{ to } 85^{\circ}\text{C})$

Parameter	Symbol	Condition	Min	Тур.	Max	Unit
Machine cycle time	tov	NORMAL1, 2 modes	0.5	7	()	
		IDLE0, 1, 2 modes	0.5		1 /4	
	tcy	SLOW1, 2 modes	117.6		133.3	μS
		SLEEP0, 1, 2 modes	117.6		133.3	
High-level clock pulse width	t _{WCH}	For external clock operation (XIN input)	(770	62.5		20
Low-level clock pulse width	t _{WCL}	fc = 8 MHz	$(\sqrt{2})$	02.5	_	ns
High-level clock pulse width	t _{WSH}	For external clock operation (XTIN input)		15.26		0
Low-level clock pulse width	t _{WSL}	fs = 32.768 kHz))	13.20	_	μS

Note 1: The operating temperature(Topr) must not exceed the range between -20 to 85°C under 3.0V


17.6 Flash Characteristics

17.6.1 Write/Erase Characteristics

 $(V_{SS} = 0 V)$

Paramete	Condition	Min	Тур.	Max.	Unit
Number of guaranteed writes to flash memo	y V _{SS} = 0 V, Topr = -10 to 40°C	-	-	100	Times

17.7 Recommended Oscillating Conditions

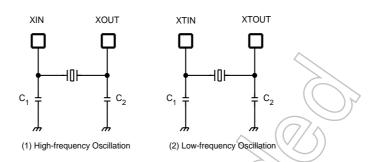

- Note 1: To ensure stable oscillation, the resonator position, load capacitance, etc. must be appropriate. Because these factors are greatly affected by board patterns, please be sure to evaluate operation on the board on which the device will actually be mounted.
- Note 2: The product numbers and specifications of the resonators by Murata Manufacturing Co., Ltd. are subject to change. For up-to-date information, please refer to the following URL: http://www.murata.com

17.8 Handling Precaution

- The solderability test conditions for lead-free products (indicated by the suffix G in product name) are shown below.
 - 1. When using the Sn-37Pb solder bath
 Solder bath temperature = 230 °C
 Dipping time = 5 seconds
 Number of times = once
 R-type flux used
 - 2. When using the Sn-3.0Ag-0.5Cu solder bath Solder bath temperature = 245 °C Dipping time = 5 seconds

Dipping time = 5 seconds Number of times = once R-type flux used


Note: The pass criteron of the above test is as follows: Solderability rate until forming \geq 95 %

- When using the device (oscillator) in places exposed to high electric fields such as cathode-ray tubes, we recommend electrically shielding the package in order to maintain normal operating condition.





18. Package Dimensions

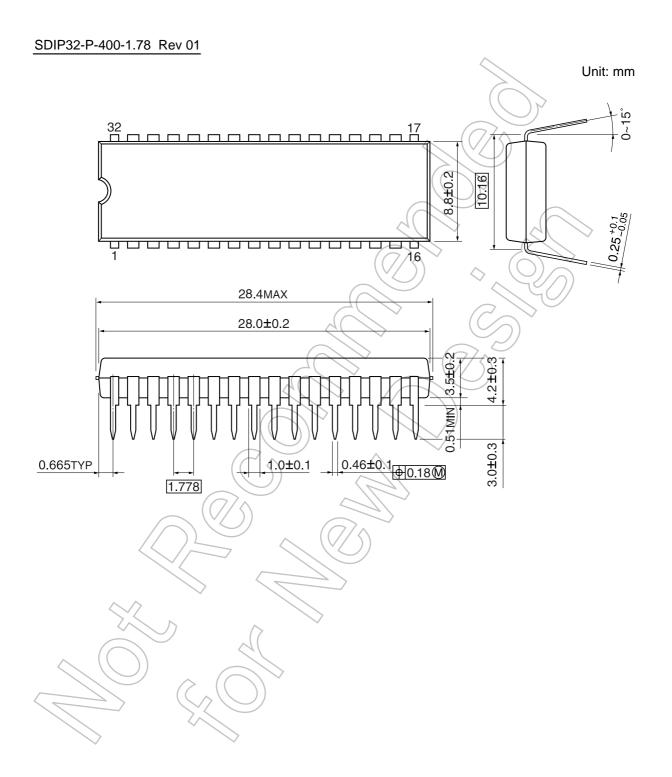



This is a technical document that describes the operating functions and electrical specifications of the 8-bit microcontroller series TLCS-870/C (LSI).

Toshiba provides a variety of development tools and basic software to enable efficient software development.

These development tools have specifications that support advances in microcomputer hardware (LSI) and can be used extensively. Both the hardware and software are supported continuously with version updates.

The recent advances in CMOS LSI production technology have been phenomenal and microcomputer systems for LSI design are constantly being improved. The products described in this document may also be revised in the future. Be sure to check the latest specifications before using.

Toshiba is developing highly integrated, high-performance microcomputers using advanced MOS production technology and especially well proven CMOS technology.

We are prepared to meet the requests for custom packaging for a variety of application areas. We are confident that our products can satisfy your application needs now and in the future.



